Service Manual Air Conditioner

CS-F24DD2E5 CU-L24DBE5 CS-F28DD2E5 CU-L28DBE5 CS-F34DD2E5 CU-L34DBE5 CS-F43DD2E5 CU-L43DBE5 CS-F50DD2E5 CU-L50DBE8



This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

⚠ PRECAUTION OF LOW TEMPERATURE

In order to avoid frostbite, be assured of no refrigerant leakage during the installation or repairing of refrigeration circuit.

CONTENTS

1 SERVICE INFORMATION 3 1.1. Example of trouble at test operation 3 1.2. Caution of test operation 3 1.3. Caution during automatic address setting 3 1.4. Operation Range 3



© 2005 Panasonic HA Air-Conditioning (M) Sdn Bhd (11969-T). All rights reserved. Unauthorized copying and distribution is a violation of law.

Page

Page

3	SPECIFICATION	6
	3.1. CS-F24DD2E5 CU-L24DBE5	6
	3.2. CS-F28DD2E5 CU-L28DBE5	7
	3.3. CS-F34DD2E5 CU-L34DBE5	
	3.4. CS-F43DD2E5 CU-L43DBE5	
	3.5. CS-F50DD2E5 CU-L50DBE8	
4	DIMENSIONS	
	4.1. CS-F24DD2E5 CS-F28DD2E5	11
	4.2. CS-F34DD2E5 CS-F43DD2E5 CS-F50DD2E5	
	4.3. CU-L24DBE5 CU-L28DBE5	13
	4.4. CU-L34DBE5 CU-L43DBE5 CU-L50DBE8	14
5	REFRIGERATION CYCLE	15
6	BLOCK DIAGRAM	16
	6.1. CS-F24DD2E5 CS-F28DD2E5 CS-F34DD2E5 CS-	
	F43DD2E5 CS-F50DD2E5	
	6.2. CU-L24DBE5 CU-L28DBE5	
	6.3. CU-L34DBE5 CU-L43DBE5	
	6.4. CU-L50DBE8	
7	WIRING DIAGRAM	20
	7.1. CS-F24DD2E5 CS-F28DD2E5 CS-F34DD2E5 CS-	
	F43DD2E5 CS-F50DD2E5	20
	7.2. CU-L24DBE5 CU-L28DBE5	21
	7.3. CU-L34DBE5 CU-L43DBE5	
	7.4. CU-L50DBE8	23
8	WIRED REMOTE CONTROL OPERATING INSTRUCTIONS	
	8.1. Name and function of each part	
	8.2. Remote control - display	
	8.3. Remote control - panel	
	8.4. How to set remote control day and time	
	8.5. How to select the timer	
	8.6. Daily timer setting	
	8.7. Weekly timer setting	
9	OPERATION CONTROL	
	9.1. Operation mode	
	9.2. Compressor start control	
	9.3. Cooling operation	
	9.4. Heating mode operation	
	9.5. Odour removing operation	
	9.6. Energy save operation	36
	9.7. Outdoor fan remaining heat removal control	
	9.8. Crank case heater control	37

9.9. Valve error 37
9.10. Pump down operation37
10 INSTALLATION INSTRUCTION
10.1. Pipe length 39
10.2. Position of the centre gravity 41
10.3. Indoor unit installation42
10.4. Outdoor unit installation 52
10.5. Wired remote controller installation63
10.6. Twin systems installation70
11 INSTALLATION & SERVICING AIR CONDITIONER71
11.1. Outline 71
11.2. Tools for installing/servicing refrigerant piping72
11.3. Refrigerant piping work 76
11.4. Installation, transferring, servicing78
12 TROUBLE SHOOTING GUIDE 82
12.1. For standard installation82
12.2. During twin operation84
12.3. During group control operation86
12.4. Address setting for twin system87
12.5. Address setting for group control system88
12.6. Wiring mistake prevention90
12.7. Test operation and self diagnosis91
12.8. Emergency operation94
12.9. Self-diagnosis95
13 TECHNICAL DATA 97
13.1. Sound data97
13.2. Sound measurement point 103
13.3. Discharge and suction pressure 104
13.4. Capacity and power consumption 109
13.5. Fan performance 136
13.6. Safety device 141
13.7. Operating characteristics 142
14 REPLACEMENT PARTS 143
14.1. Indoor unit 143
14.2. Outdoor unit 145
15 ELECTRONIC CIRCUIT DIAGRAM 157
15.1. Indoor unit 157
15.2. Outdoor unit 161
15.3. Wired remote control 173
15.4. Print pattern 174

1 SERVICE INFORMATION

Notice of Address setting for NEW Duct / NEW Outdoor Unit.

The new Duct Type / New Outdoor models are possible to have address setting for twin control by automatic when main power supply is switched on.

(Manual address setting is also possible by using Dip switch on Indoor unit P.C. board.) However, this address setting is only possible when made proper wiring connection and also Indoor unit should be original virgin unit.

1.1. Example of trouble at test operation

If found out as following phenomenon at test operation on site, it may have possibility of wrong address setting. Therefore, please ensure of the address setting.

- 1. LCD display of wired remote control had not illuminate although the main power supply switch is 'on'.
- 2. LCD display had indicated as normal illumination when power supply switch is 'on', however outdoor unit cannot be operated. (But, it is necessary to take 3 to 5 minutes for outdoor unit to start from the timing of remote control ON/OFF switch is 'on'.)
- 3. P.C. board had memorized wrong setting information.
 - a. If main power supply is switched 'on' with the wrong connection.
 - b. When changing the connection or combination of units due to re-installation etc.
 - When changing the system from twin control to normal one to one system.
 - When making the replacement of units as master and slave etc.

1.2. Caution of test operation

Do not touch the remote control switch and do not change any wirings for one minute when the main power supply switch is 'on'. (Because the unit is having automatic address setting during the first one minute.)

1.3. Caution during automatic address setting

When main power supply switch is 'on', the P.C. board will automatically memorized the connecting system. Consequently, when initial power supply is 'on', there will not be interchangeability of units even of the same type and same capacity unit. Therefore unable to connect the unit to another system.

1.4. Operation Range

The applicable voltage range for each unit is given in "the following table". The working voltage among the three phases must be balanced within 3% deviation from each voltage at the compressor terminals. The starting voltage must be higher than 85% of the rated voltage.

1.4.1. Power Supply

Model	Unit Main	Power	Applicable Voltage	
CU-	Phase, Volts	Hz	Maximum	Minimum
L24DBE5	1~220	50	242	198
L28DBE5	1~230	50	253	207
L34DBE5 L43DBE5	1~240	50	264	216
L50DBE8	3N~380	50	418	342
	3N~400	50	440	360
	3N~415	50	457	374

1.4.2. Indoor and Outdoor Temperature

Model 50Hz ... L24DBE5, L28DBE5, L34DBE5, L43DBE5, L50DBE8

Operating	Hz	Indoor Temp. (D.B./W.B.) (°C)		Outdoor Temp.	(D.B./W.B.) (°C)
		Maximum	Minimum	Maximum	Minimum
Cooling	50	32/23	21/15	43/-	-15/-
Heating	50	27/-	16/-	24/18	-20/-

2 FEATURES


2.1. Hide-away type

2.1.1. Thin, lightweight design

• The unit has a low height, so it allows installation in limited ceiling spaces. The lightweight, attractive design simplifies installation, and matches virtually all room interiors.

2.1.2. Flexible installation

• The powerful airflow enables a longer duct to be used. Since the air outlet can be installed away from the main unit, a variety of air conditioner layouts become possible.

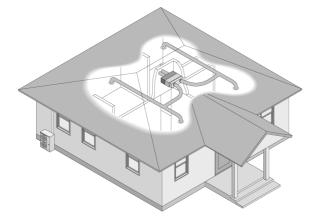


2.1.3. Easy maintenance

• Maintenance works can be done from the underside of the indoor unit.


2.2. Outdoor unit

2.2.1. Flexible installation in smaller spaces


• Space-saving outdoor unit with the improvement of the outdoor unit fan makes it possible to install the outdoor unit into a smaller space where the conventional model cannot be installed.

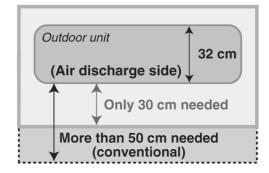

- Long pipe design with a maximum piping length of 50m.
- Additional charging of refrigerant are not required for 30m of pipe length.
- Flexible 4-way piping.

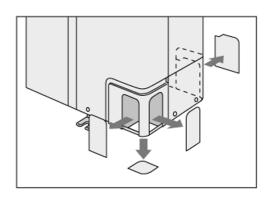

• Centralized drain method gather multiple outdoor units' drain pipes into a single drain pipe to make installation easier and also improve appearance.

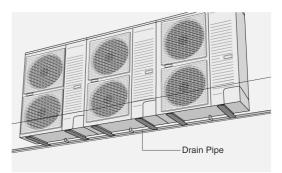

• Side-by-side continuous installation is possible even for outdoor units with different capacities.

2.2.2. Quiet, efficient design

- A host of silencing technologies achieves super-quiet operation.
- The noise-suppressing winglet fan is a result of new research into vane design theory. The unique curved shape suppresses the generation of vortexes, thus reduces air flows noise.



• Operating efficiency is improved and energy consumption is reduced.


2.2.3. Low ambient cooling operation

- The unit can set for cooling even when the outdoor temperature drops to -5°C for regular cooling condition.
- However, cooling operation at -15°C is possible in nonresidential computer rooms, etc., where the temperature is not less than 21°C and humidity is not more than 45%.


2.3. A brand-new control method using the latest in technology

2.3.1. Twin operation


- Simultaneous air conditioning of wide spaces and corners is possible. Indoor units of same horsepowers and models can even be used in combination.
- Master unit and slave-units can be set automatically in twin systems. No address setting is necessary.
- Multiple indoor units can be operated simultaneously with a single remote control. Note that individual operation is not possible.

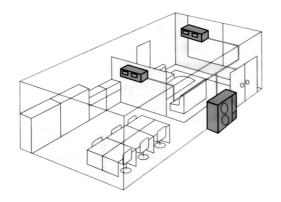

Twin combination table

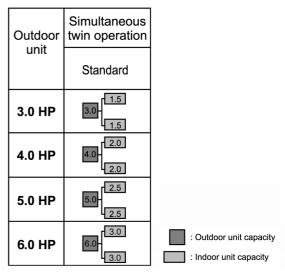

2.3.2. Group control equipment

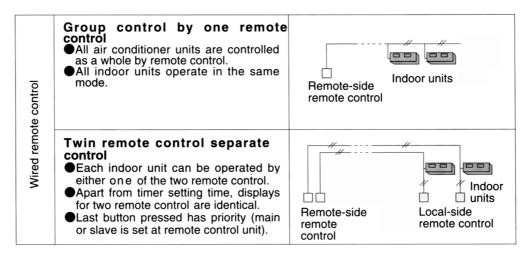

3 SPECIFICATION

3.1. CS-F24DD2E5 CU-L24DBE5

	ITEM / MODE	E		Indoor Unit	Outdoor Unit	
			Main Body	CS-F24DD2E5	CU-L24DBE5	
Cooling Capacity			kW	6.3		
			BTU/h	21,500		
Heating Capac	city		kW	7.	1	
. .	-		BTU/h	24,2	200	
Refrigerant Ch	arge-less		m	3	0	
	olume for High S	Speed	m ³ /min	Hi 22	Hi 48	
	0		cfm	Hi 777	1695	
External Static	Pressure		Pa	Hi 69	-	
			mmAq	Hi 7.0	1	
Outside Dimer	nsion (H x W x D)	mm	290 x 1000 x 500	795 x 900 x 320	
		,	inch	11-13/32 x 39-5/16 x 19-21/32	31-5/16 x 35-7/16 x 12-19/32	
Net Weight			kg (lbs)	35 (78)	71 (158)	
Piping	Refrigerant	Gas	mm (inch)	O.D Ø 15.88 (5)	· · · · ·	
Connection	Ű	Liguid	mm (inch)	O.D Ø 9.53 (3/	,	
	Drain		mm	O.D Ø 32	I.D Ø 20 x 1	
Compressor	Type, Number	of Set		-	Hermetic - 2P (Rotary), 1	
	Starting Method			-	DC - INV control	
	Motor	Туре		-	4-pole single phase brushless motor	
		Rated Output	kW	-	1.8	
Fan	Type, Number			Sirocco fan, 2	Mix flow fan - 1	
	Motor	Туре		4-pole single phase induction motor	6-pole single phase induction motor	
		Rated Output	kW	0.135	0.07	
Air-heat Excha	inger (Row x Sta			Louvre-fin type (3 x 12 x 15)	Corrugate-fin type (2 x 36 x 19)	
Refrigerant Co		<u> </u>		-	Exp. Valve	
Refrigerant Oil	(Charged)		cm ³	-	FV50S (800)	
	harged) R410A		kg (oz)	-	2.13 (75)	
Running	Control Switch	1	J J	Wired Remote Control	-	
Adjustment	Room Temper	rature		Thermostat	-	
Safety Devices	 S			Temperature, current and pressure	protection control for compressor,	
				Internal thermostat for FI		
				Current trans, C		
Noise Level			dB (A)	Cooling : Hi 45 Lo 41	Cooling 47, Heating 49	
				Heating : Hi 43 Lo 39		
			Power level dB	Cooling : Hi 61 Lo 57 Heating : Hi 59 Lo 55	Cooling 63, Heating 65	
Moisture Remo	oval		L/h (Pt/h)		1	
EER			W/W	3.01		
COP			W/W	3.4	41	

1. Cooling capacities are based on indoor temperature of 27°C D.B. (80.6°F D.B.), 19.0°C W.B. (66.2°F W.B.) and outdoor air temperature of 35°C D.B. (95°F D.B.), 24°C W.B. (75.2°F W.B.)

2. Heating capacities are based on indoor temperature 20°C D.B. (68°F D.B.) and outdoor air temperature of 7°C D.B. (44.6°F D.B.), 6°C W.B. (42.8°F W.B.)

ITEM / MODEL			Condition by JIS-B8615			
Volts	V		220	230	240	
Phase			Single	Single	Single	
Power Consumption	kW	Cool	2.09	2.09	2.09	
		Heat	2.08	2.08	2.08	
Running Current	A	Cool	9.9	9.5	9.2	
		Heat	9.9	9.5	9.2	
Starting Current	A		9.9	9.5	9.2	
Power Factor	%	Cool	96	96	95	
		Heat	96	95	94	
*Power Factor means tota	I figure of cor	npressor, i	ndoor fan motor and outdoor fa	n motor.		
Panasonic		Power source AC, 1~220V, 230V, 240V 50Hz				

3.2. CS-F28DD2E5 CU-L28DBE5

	ITEM / MODE	EL		Indoor Unit	Outdoor Unit
			Main Body	CS-F28DD2E5	CU-L28DBE5
Cooling Capacity			kW	7.1	
			BTU/h	24,2	200
Heating Capac	city		kW	8.	0
			BTU/h	27,3	300
Refrigerant Ch	arge-less		m	30)
	olume for High	Speed	m³/min	Hi 22	Hi 48
	0		cfm	Hi 777	1695
External Static	Pressure		Pa	Hi 69	-
			mmAg	Hi 7.0	1
Outside Dimer	nsion (H x W x I	D)	mm	290 x 1000 x 500	795 x 900 x 320
	,	,	inch	11-13/32 x 39-5/16 x 19-21/32	31-5/16 x 35-7/16 x 12-19/32
Net Weight			kg (lbs)	35 (78)	71 (158)
Piping	Refrigerant	Gas	mm (inch)	O.D Ø 15.88 (5/	
Connection	Ŭ	Liquid	mm (inch)	O.D Ø 9.53 (3/	,
	Drain		mm	O.D Ø 32	I.D Ø 20 x 1
Compressor	Type, Numbe	er of Set		-	Hermetic - 2P (Rotary), 1
	Starting Method			-	DC - INV control
	Motor	Туре		-	4-pole single phase brushless motor
		Rated Output	kW	-	2.0
Fan	Type, Numbe			Sirocco Fan, 2	Mix flow fan - 1
	Motor	Туре		4-pole single phase induction motor	6-pole single phase induction motor
		Rated Output	kW	0.135	0.07
Air-heat Excha	inger (Row x Sta	age x FPI)		Louvre-fin type (3 x 12 x 15)	Corrugate-fin type (2 x 36 x 19)
Refrigerant Co		• /		-	Exp. Valve
Refrigerant Oil	(Charged)		cm ³	-	FV50S (800)
	harged) R410A		kg (oz)	-	2.35 (83)
Running	Control Switc	:h		Wired Remote Control	-
Adjustment	Room Tempe	erature		Thermostat	-
Safety Devices	 }			Temperature, current and pressure	protection control for compressor,
				Internal thermostat for FI	
				Current trans, Ci	• •
Noise Level			dB (A)	Cooling : Hi 45 Lo 41	Cooling 48, Heating 50
				Heating : Hi 43 Lo 39	
			Power level dB	Cooling : Hi 61 Lo 57 Heating : Hi 59 Lo 55	Cooling 64, Heating 66
Moisture Remo	oval		L/h (Pt/h)		
EER			W/W	3.01	
СОР			W/W	3.4	

1. Cooling capacities are based on indoor temperature of 27°C D.B. (80.6°F D.B.), 19.0°C W.B. (66.2°F W.B.) and outdoor air temperature of 35°C D.B. (95°F D.B.), 24°C W.B. (75.2°F W.B.)

2. Heating capacities are based on indoor temperature of 20°C D.B. (68°F D.B.) and outdoor air temperature of 7°C D.B. (44.6°F D.B.), 6°C W.B. (42.8°F W.B.)

ELECTRICAL DATA (50 Hz)	
ITEM / MODEL	

ITEM / MODEL			Condition by JIS-B8615			
Volts	V		220	230	240	
Phase			Single	Single	Single	
Power Consumption	kW	Cool	2.36	2.36	2.36	
		Heat	2.34	2.34	2.34	
Running Current	A	Cool	11.2	10.7	10.3	
		Heat	11.1	10.6	10.2	
Starting Current	A		11.1	10.6	10.2	
Power Factor	%	Cool	96	96	95	
		Heat	96	96	96	
*Power Factor means total fig	gure of con	npressor,	indoor fan motor and outdoor fa	n motor.		
Panasonic	Power source AC, 1~220V, 230V, 240V 50Hz					

3.3. CS-F34DD2E5 CU-L34DBE5

	ITEM / MODE	EL		Indoor Unit	Outdoor Unit	
			Main Body	CS-F34DD2E5	CU-L34DBE5	
Cooling Capacity			kW	10.0		
	-		BTU/h	34,100		
Heating Capac	city		kW	11	.2	
			BTU/h	38,2	200	
Refrigerant Ch	arge-less		m	31	0	
Standard Air V	olume for High	Speed	m ³ /min	Hi 38	Hi 98	
	-		cfm	Hi 1342	3460	
External Static	Pressure		Pa	Hi 98	-	
			mmAq	Hi 10.0		
Outside Dimer	nsion (H x W x D))	mm	360 x 1000 x 650	1340 x 900 x 320	
			inch	14-3/16 x 39-3/8 x 25-19/32	52-7/8 x 35-7/16 x 12-19/32	
Net Weight			kg (lbs)	48 (106)	110 (242)	
Piping	Refrigerant	Gas	mm (inch)	O.D Ø 15.88 (5)	/8) Flared Type	
Connection		Liquid	mm (inch)	O.D Ø 9.53 (3/	8) Flared Type	
	Drain		mm	O.D Ø 32	I.D Ø 20 x 1	
Compressor	or Type, Number of Set			-	Hermetic - 2P (Rotary), 1	
	Starting Metho	od		-	DC - INV control	
	Motor	Туре		-	4-pole single phase brushless motor	
		Rated Output	kW	-	2.6	
Fan	Type, Numbe	r of Set		Sirocco fan, 2	Mix flow fan - 2	
	Motor	Туре		4-pole single phase induction motor	6-pole single phase induction motor	
		Rated Output	kW	0.27	0.07 x 2	
Air-heat Excha	inger (Row x Sta	age x FPI)		Louvre-fin type (3 x 18 x 13)	Corrugate-fin type (2 x 51 x 18)	
Refrigerant Co	ntrol			-	Exp. Valve	
Refrigerant Oil	(Charged)		cm ³	-	FV50S (1200)	
Refrigerant (C	harged) R410A		kg (oz)	-	3.30 (116)	
Running	Control Switch	ำ		Wired Remote Control	-	
Adjustment	Room Tempe	rature		Thermostat	-	
Safety Devices	3			Temperature, current and pressure	protection control for compressor,	
				Internal thermostat for FI	M, High pressure switch,	
				Current trans, C	rankcase heater	
Noise Level			dB (A)	Cooling : Hi 49 Lo 45	Cooling 52, Heating 54	
				Heating : Hi 47 Lo 44		
			Power level dB	Cooling : Hi 64 Lo 60 Heating : Hi 62 Lo 59	Cooling 66, Heating 68	
Moisture Remo	oval		L/h	6.0		
EER			W/W	3.27		
COP			W/W	3.41		

1. Cooling capacities are based on indoor temperature of 27°C D.B. (80.6°F D.B.), 19.0°C W.B. (66.2°F W.B.) and outdoor air temperature of 35°C D.B. (95°F D.B.), 24°C W.B. (75.2°F W.B.)

2. Heating capacities are based on indoor temperature 20°C D.B. (68°F D.B.) and outdoor air temperature of 7°C D.B. (44.6°F D.B.), 6°C W.B. (42.8°F W.B.)

ITEM / MO	ODEL		Condition by JIS-B8615			
Volts	V		220	230	240	
Phase			Single	Single	Single	
Power Consumption	kW	Cool	3.06	3.06	3.06	
		Heat	3.28	3.28	3.28	
Running Current	A	Cool	14.3	13.8	13.4	
		Heat	15.4	14.9	14.4	
Starting Current	A		14.3	13.8	13.4	
Power Factor	%	Cool	97	96	95	
		Heat	97	96	95	
*Power Factor means total	figure of cor	npressor,	indoor fan motor and outdoor fa	n motor.		
Panasonic		Power source AC, 1~220V, 230V, 240V 50Hz				

3.4. CS-F43DD2E5 CU-L43DBE5

	ITEM / MODE	L		Indoor Unit	Outdoor Unit		
			Main Body	CS-F43DD2E5	CU-L43DBE5		
Cooling Capac	city		kW	12.5			
			BTU/h	42,600			
Heating Capac	city		kW	14.0			
	-		BTU/h	47,7	00		
Refrigerant Ch	arge-less		m	30)		
Standard Air V	olume for High	Speed	m³/min	Hi 40	Hi 98		
	0		cfm	Hi 1413	3460		
External Static	Pressure		Pa	Hi 98	-		
			mmAq	Hi 10.0			
Outside Dimer	nsion (H x W x D))	mm	360 x 1000 x 650	1340 x 900 x 320		
	,	,	inch	14-3/16 x 39-3/8 x 25-19/32	52-7/8 x 35-7/16 x 12-19/32		
Net Weight			kg (lbs)	48 (106)	110 (242)		
Piping	Refrigerant	Gas	mm (inch)	O.D Ø 15.88 (5/	8) Flared Type		
Connection		Liquid	mm (inch)	O.D Ø 9.53 (3/8			
	Drain	_ <u>.</u>	mm	O.D Ø 32	I.D Ø 20 x 1		
Compressor	Type, Numbe	r of Set		-	Hermetic - 2P (Rotary), 1		
		Starting Method		-	DC - INV control		
	Motor	Туре		-	4-pole single phase brushless motor		
		Rated Output	kW	-	3.4		
Fan	Type, Numbe	r of Set		Sirocco Fan, 2	Mix flow fan - 2		
	Motor	Туре		4-pole single phase induction motor	6-pole single phase induction motor		
		Rated Output	kW	0.27	0.07 x 2		
Air-heat Excha	anger (Row x Sta	age x FPI)		Louvre-fin type (3 x 18 x 13)	Corrugate-fin type (2 x 51 x 18)		
Refrigerant Co	ontrol			-	Exp. Valve		
Refrigerant Oil	(Charged)		cm ³	- FV50S (1200)			
Refrigerant (C	harged) R410A		kg (oz)	-	3.30 (116)		
Running	Control Switc	h		Wired Remote Control	-		
Adjustment	Room Tempe	rature		Thermostat	-		
Safety Devices	3			Temperature, current and pressure	protection control for compressor,		
				Internal thermostat for FM	A, High pressure switch,		
				Current trans, Cr	ankcase heater		
Noise Level			dB (A)	Cooling : Hi 49 Lo 45	Cooling 53, Heating 55		
				Heating : Hi 47 Lo 44			
			Power level dB	Cooling : Hi 64 Lo 60 Heating : Hi 62 Lo 59	Cooling 67, Heating 69		
Moisture Remo	oval		L/h	7.9			
EER			W/W	3.01			
COP			W/W	3.21			

1. Cooling capacities are based on indoor temperature of 27°C D.B. (80.6°F D.B.), 19.0°C W.B. (66.2°F W.B.) and outdoor air temperature of 35°C D.B. (95°F D.B.), 24°C W.B. (75.2°F W.B.)

2. Heating capacities are based on indoor temperature of 20°C D.B. (68°F D.B.) and outdoor air temperature of 7°C D.B. (44.6°F D.B.), 6°C W.B. (42.8°F W.B.)

ITEM / MODEL			Condition by JIS-B8615				
Volts	V		220	230	240		
Phase			Single	Single	Single		
Power Consumption	kW	Cool	4.15	4.15	4.15		
		Heat	4.36	4.36	4.36		
Running Current	A	Cool	19.5	18.8	18.2		
		Heat	20.4	19.7	19.2		
Starting Current	A		19.5	18.8	18.2		
Power Factor	%	Cool	97	96	95		
		Heat	97	96	95		
*Power Factor means total fig	gure of con	npressor,	indoor fan motor and outdoor fa	n motor.	·		
Panasonic	Power source AC, 1~220V, 230V, 240V 50				30V, 240V 50Hz		

3.5. CS-F50DD2E5 CU-L50DBE8

	ITEM / MODE	L		Indoor Unit	Outdoor Unit		
			Main Body	CS-F50DD2E5	CU-L50DBE8		
Cooling Capac	ity		kW	14.0			
			BTU/h	47,700			
Heating Capac	city		kW	16.0			
			BTU/h	54,6	600		
Refrigerant Ch	arge-less		m	30)		
Standard Air V	olume for High	Speed	m ³ /min	Hi 45	Hi 98		
			cfm	Hi 1590	3460		
External Static	Pressure		Pa	Hi 98	-		
			mmAq	Hi 10.0	1		
Outside Dimer	nsion (H x W x D))	mm	360 x 1000 x 650	1340 x 900 x 320		
			inch	14-3/16 x 39-3/8 x 25-19/32	52-7/8 x 35-7/16 x 12-19/32		
Net Weight			kg (lbs)	48 (106)	105 (231)		
Piping	Refrigerant	Gas	mm (inch)	O.D Ø 15.88 (5/	8) Flared Type		
Connection		Liquid	mm (inch)	O.D Ø 9.53 (3/8	8) Flared Type		
	Drain	-	mm	O.D Ø 32	I.D Ø 20 x 1		
Compressor	Type, Numbe	r of Set		-	Hermetic - 2P (Rotary), 1		
	Starting Method			-	DC - INV control		
	Motor	Туре		-	4-pole single phase brushless motor		
		Rated Output	kW	-	3.8		
Fan	Type, Numbe	r of Set		Sirocco Fan, 2	Mix flow fan - 2		
	Motor	Туре		4-pole single phase induction motor	6-pole single phase induction motor		
		Rated Output	kW	0.27	0.07 x 2		
Air-heat Excha	inger (Row x Sta	age x FPI)		Louvre-fin type (3 x 18 x 13)	Corrugate-fin type (2 x 51 x 18)		
Refrigerant Co	ntrol			-	Exp. Valve		
Refrigerant Oil	(Charged)		cm ³	-	FV50S (1200)		
Refrigerant (Cl	harged) R410A		kg (oz)	-	3.50 (123)		
Running	Control Switcl	h		Wired Remote Control	-		
Adjustment	Room Tempe	rature		Thermostat	-		
Safety Devices	3			Temperature, current and pressure	protection control for compressor,		
				Internal thermostat for FI	И, High pressure switch,		
				Current trans, Ci	ankcase heater		
Noise Level			dB (A)	Cooling : Hi 49 Lo 45	Cooling 54, Heating 56		
				Heating : Hi 47 Lo 44			
			Power level dB	Cooling : Hi 64 Lo 60 Heating : Hi 62 Lo 59	Cooling 68, Heating 70		
Moisture Remo	oval		L/h	9.0			
EER			W/W	2.77			
COP			W/W	3.3	30		


1. Cooling capacities are based on indoor temperature of 27°C D.B. (80.6°F D.B.), 19.0°C W.B. (66.2°F W.B.) and outdoor air temperature of 35°C D.B. (95°F D.B.), 24°C W.B. (75.2°F W.B.)


2. Heating capacities are based on indoor temperature of 20°C D.B. (68°F D.B.) and outdoor air temperature of 7°C D.B. (44.6°F D.B.), 6°C W.B. (42.8°F W.B.)

ITEM / MODEL			Condition by JIS-B8615				
Volts	V		380	400	415		
Phase			3N	3N	3N		
Power Consumption	kW	Cool	5.06	5.06	5.06		
		Heat	4.85	4.85	4.85		
Running Current	А	Cool	8.0	7.7	7.4		
		Heat	7.7	7.4	7.2		
Starting Current	А		8.0	7.7	7.4		
Power Factor	%	Cool	96	95	95		
		Heat	96	95	94		
*Power Factor means total fi	gure of con	npressor,	indoor fan motor and outdoor fa	n motor.			
Panasonic		F	Power source	AC, 3N~380V,	400V, 415V 50Hz		

4 DIMENSIONS


4.1. CS-F24DD2E5 CS-F28DD2E5

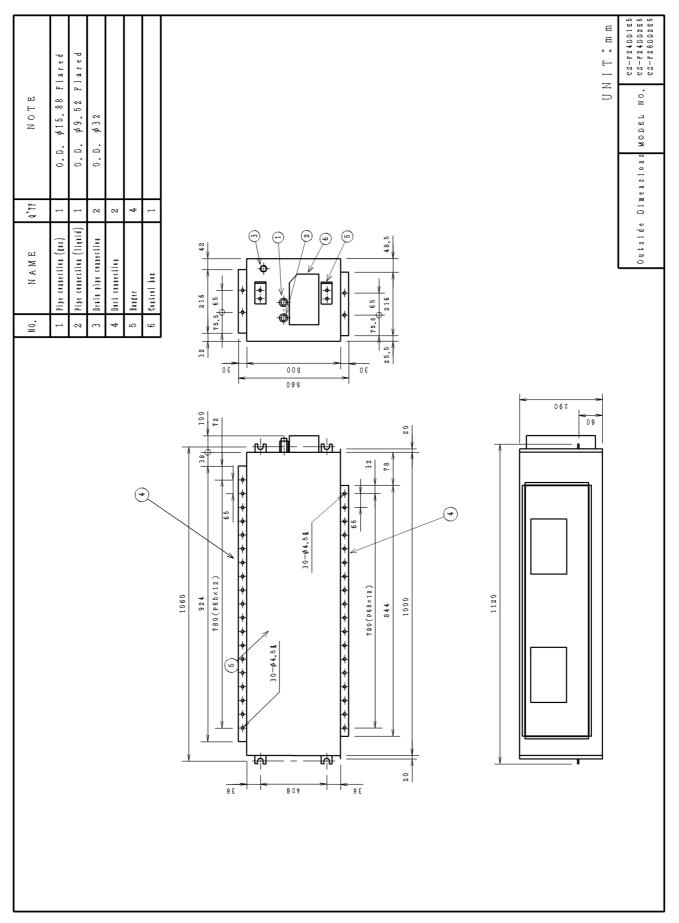


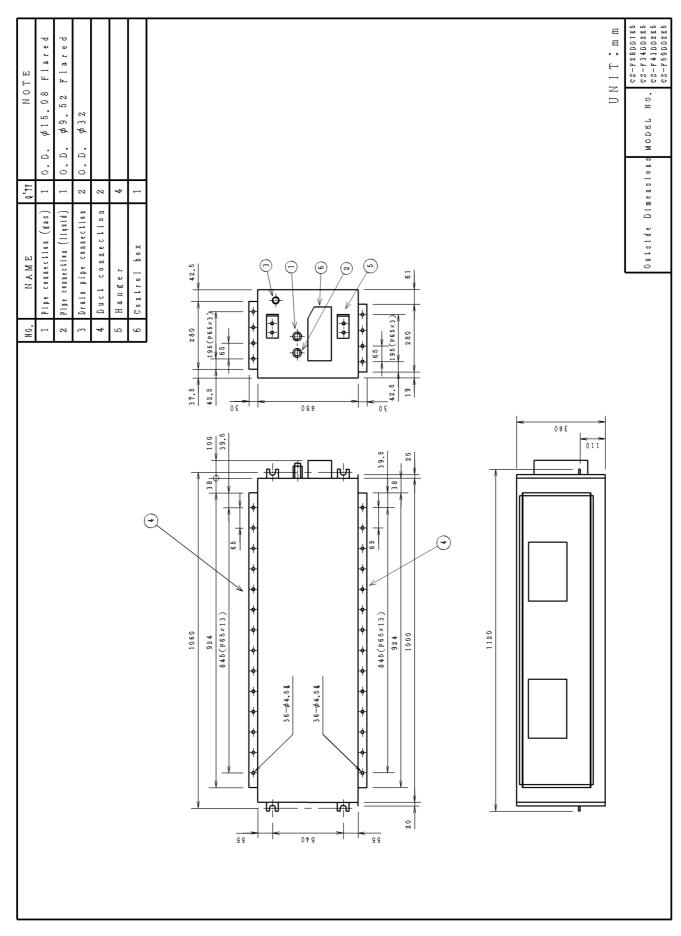

4.2. CS-F34DD2E5 CS-F43DD2E5 CS-F50DD2E5


4.3. CU-L24DBE5 CU-L28DBE5

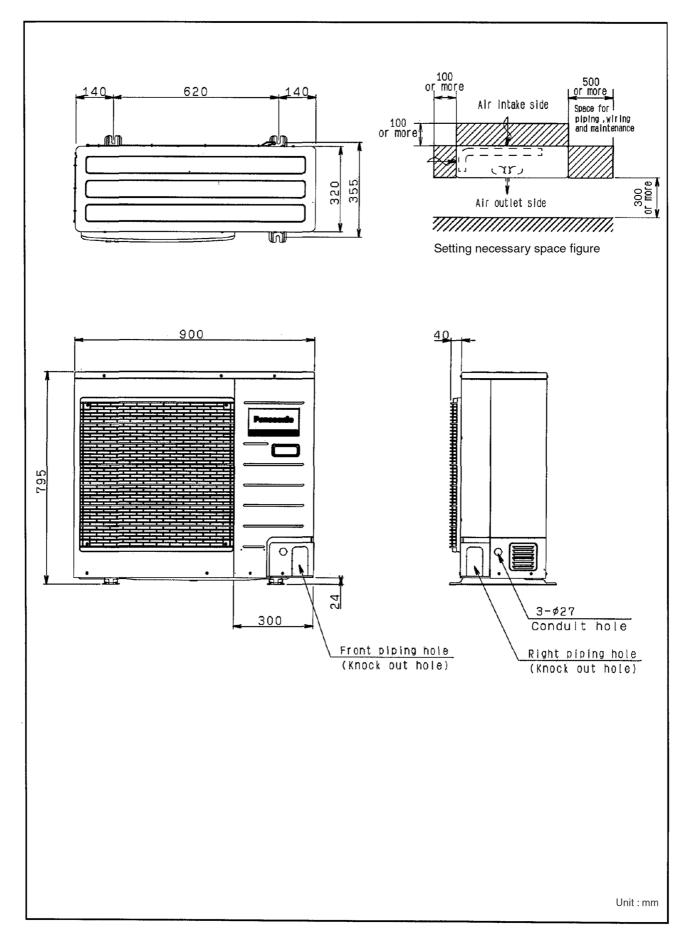

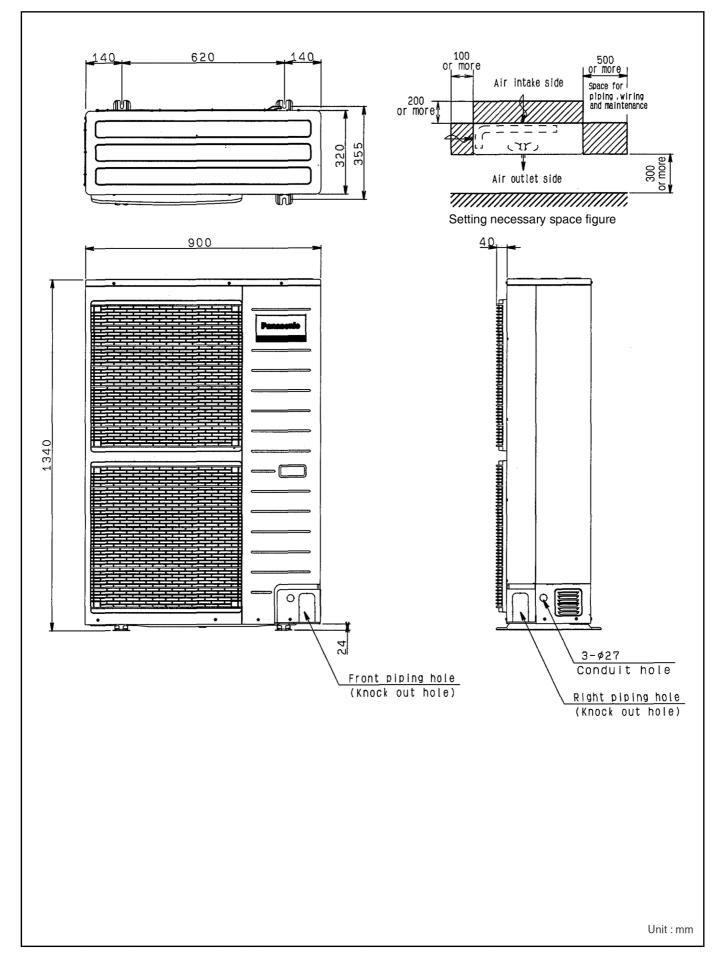


4.4. CU-L34DBE5 CU-L43DBE5 CU-L50DBE8

5 REFRIGERATION CYCLE

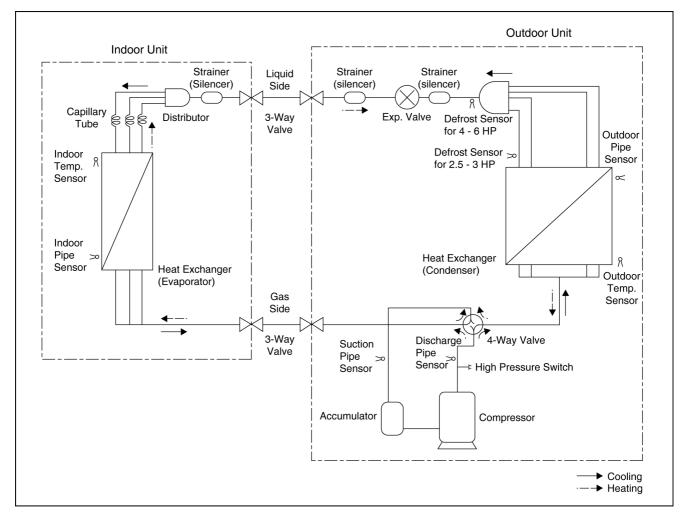


6 BLOCK DIAGRAM


6.1. CS-F24DD2E5 CS-F28DD2E5 CS-F34DD2E5 CS-F43DD2E5 CS-F50DD2E5

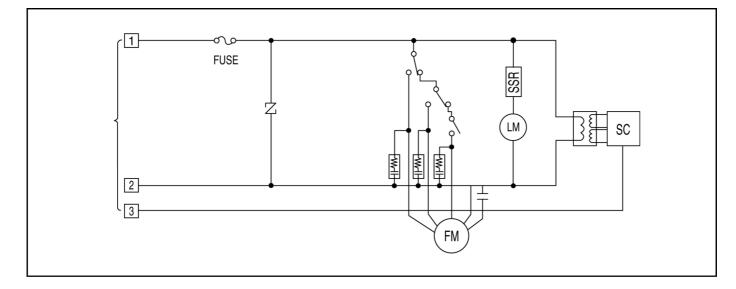


6.2. CU-L24DBE5 CU-L28DBE5

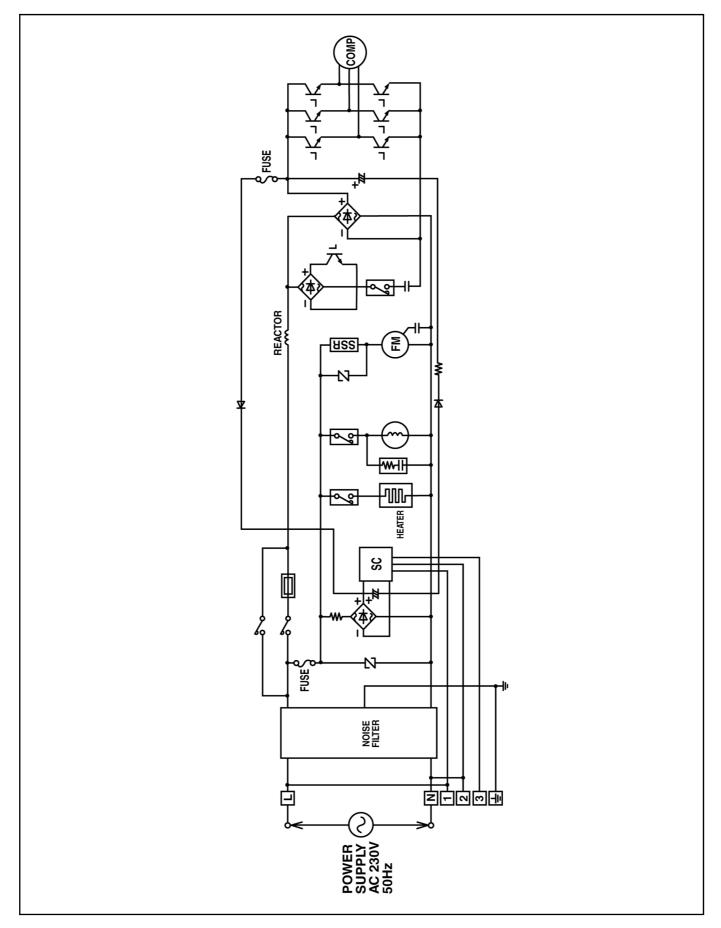

6.3. CU-L34DBE5 CU-L43DBE5

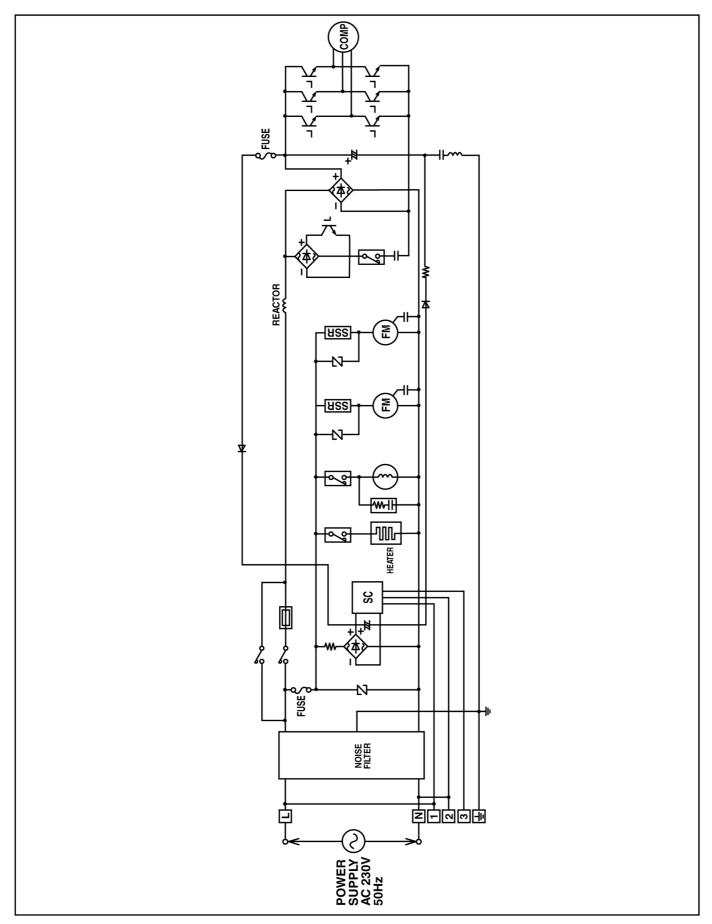


6.4. CU-L50DBE8

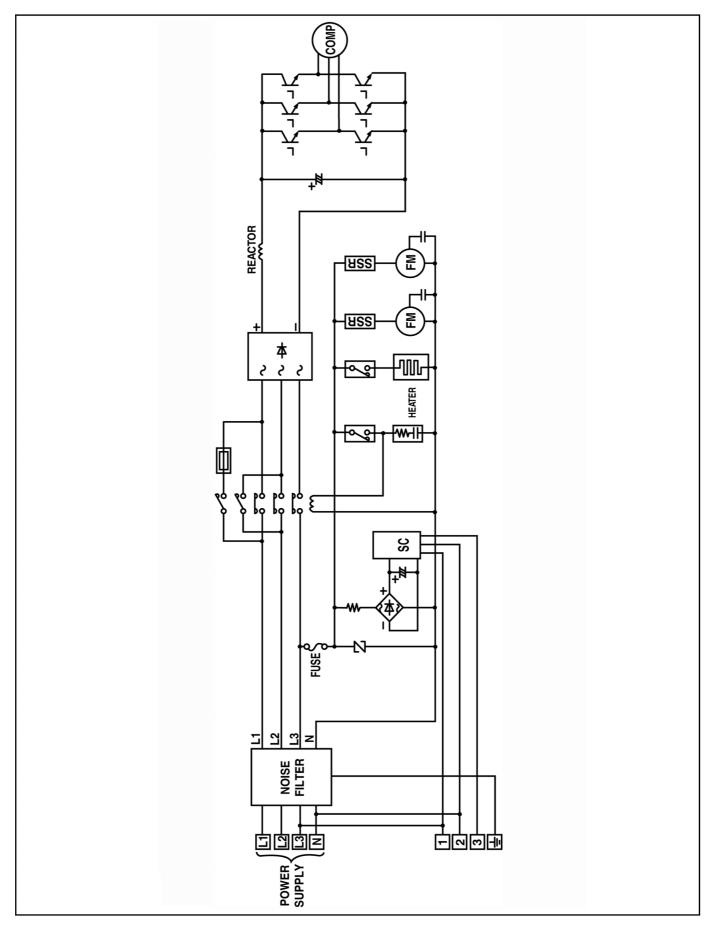


7 WIRING DIAGRAM


7.1. CS-F24DD2E5 CS-F28DD2E5 CS-F34DD2E5 CS-F43DD2E5 CS-F50DD2E5

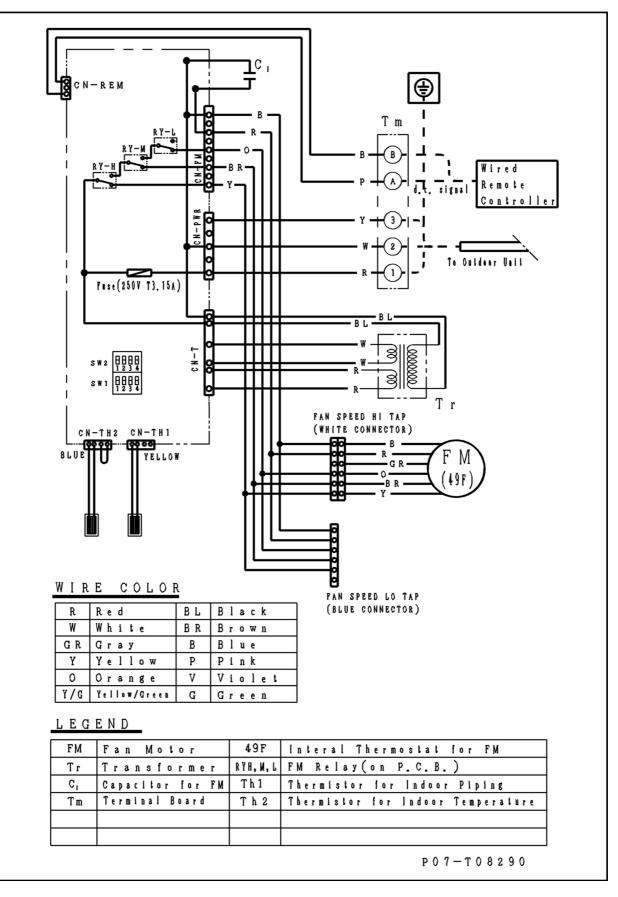


7.2. CU-L24DBE5 CU-L28DBE5

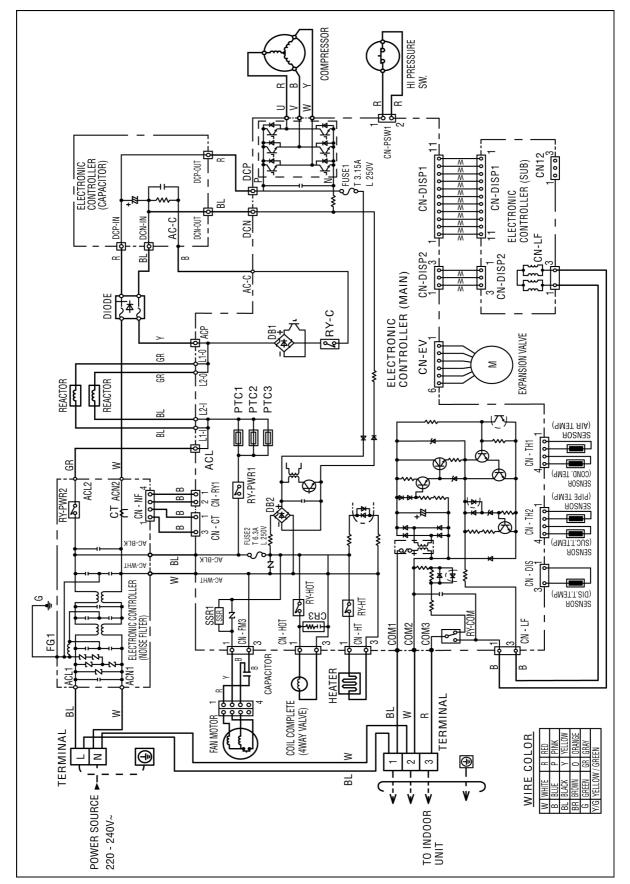

7.3. CU-L34DBE5 CU-L43DBE5

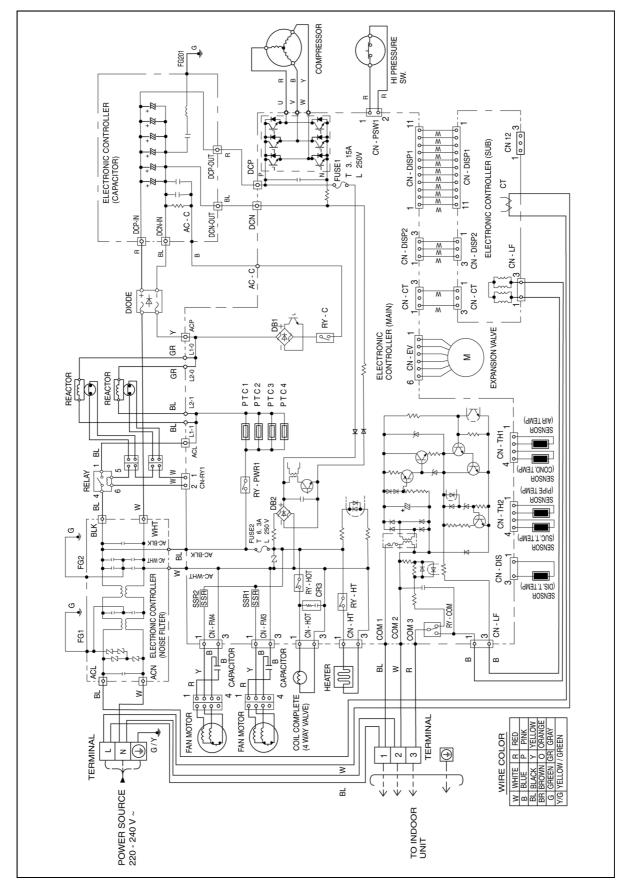


7.4. CU-L50DBE8

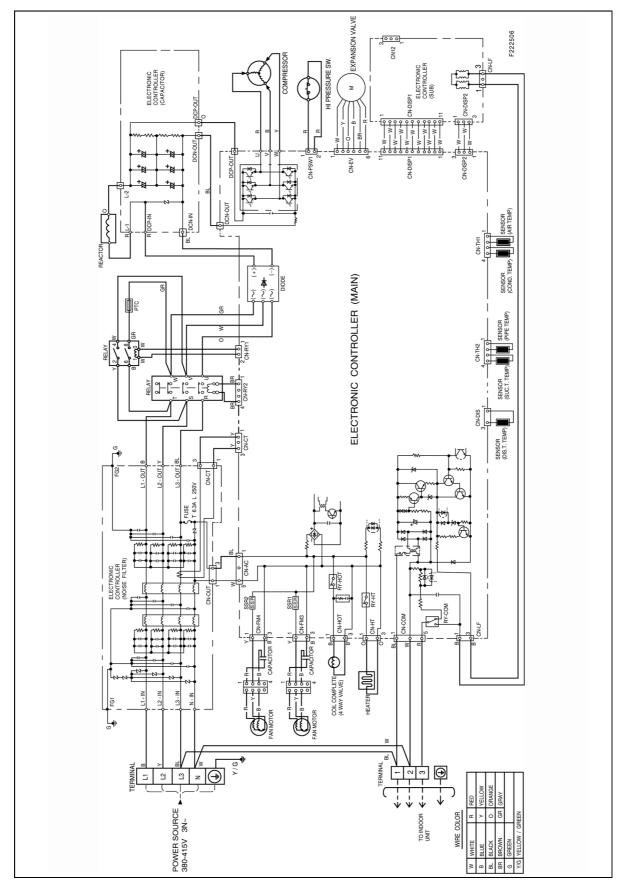

8 WIRED REMOTE CONTROL OPERATING INSTRUCTIONS

8.1. Name and function of each part

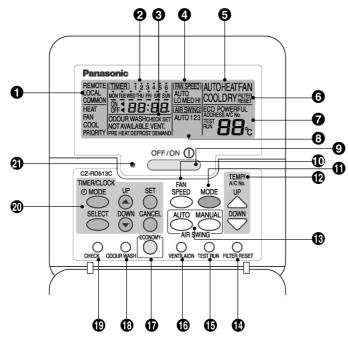

REMOTE

The OFF/ON button cannot be used. LOCAL All wired remote control buttons can be used.

- 2 Time/time setting display
- 6 Check display
- 4 Fan speed display
- Operation mode selection display
- **6** FILTER RESET display (Appears after the cumulative running time reaches approximately 2,500 hours of operation.)
- Temperature setting display (16°C 31°C)


8 Airflow direction setting display

- OFF/ON button
 - Used to start and stop the operation.
- FAN SPEED button Used to select the fan speed of high (HI), medium (MED), low (LO) or auto (AUTO).
- MODE button Used to select the operation of AUTO, HEAT, FAN, COOL, or DRY.
- TEMP (UP/DOWN) buttons Used to select the desired temperature.
- AIR SWING (AUTO/MANUAL) buttons Used to determined the air swing condition, either auto or manual.
- FILTER RESET button Press to reset the "FILTER RESET" display after washing the filter.
- TEST RUN button*
- **VENTILATION** button*
- ECONOMY operation button Provides Energy saving function
- ODOUR WASH button
 Provides deodorizing function.
- CHECK button Press this button if the check display is flashing.
- TIMER/CLOCK SET buttons Used to set the timer operation and the current time.
- Operation indicator
 Lights up when the unit in operation.


NOTES

- Ensure that the correct button is pressed as simultaneous pressing of the multiple buttons will not make the setting correct.
- The illustration above is for explanatory purposes only. The appearance will be different during actual operation.
- Do not operate the remote control with wet hands. Otherwise, electric shock or malfunction may occur.
- Do not press the remote control buttons with sharp object as this may damage the remote control.
- Buttons marked with * are not needed for normal operation. If one of these buttons is pressed by mistake, press the same button once more to cancel the operation.
- When the power resumed after power failure, the unit will restart automatically with all the previous settings preserved by the memory function. (Auto restart function)
- Buttons marked with are not available for operation. If one of these buttons is pressed function will not be available.

8.2. Remote control - display

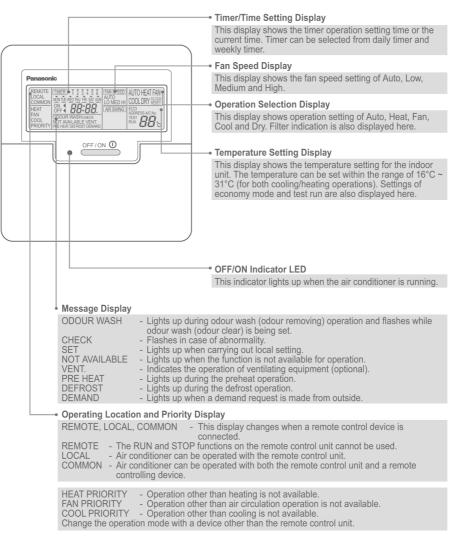


8.3. Remote control - panel

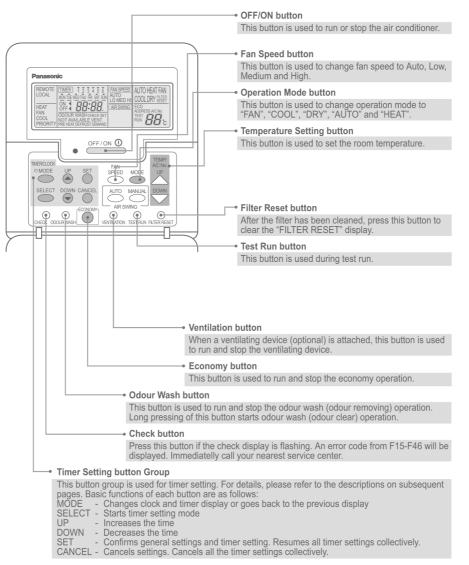

8.4. How to set remote control day and time

- The day and time need to be set when you turn on the power for the first time or after a long time has elapsed since the power was last turned on.
- The day and time become the standard time for all the Timer operations.
- Set the day and time accurately.
- Example : Current Day is Wednesday and Current Time is 8:00.
 - **1** Turn on the power supply
 - 2 Press "SELECT button"

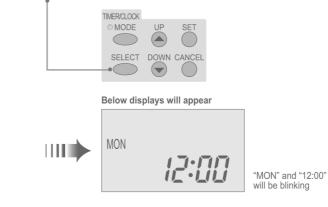

3 Select Current Day

To set the current day, press "UP or DOWN button" to select current day. (Refer to above example; select WED) To confirm the selected day, press "SET button".

4 Select Current Time

To set the current time, press "UP or DOWN button" to select current time (Refer to above example; select 8:00) To confirm the selected time, press "SET button".

Note:

- Press "UP button" to increase or "DOWN button" to decrease (interval 1 minute) or hold the button to change the time faster.
- If the "UP or DOWN button" is not pressed for 30 seconds during the day or time setting or if the "SELECT button" is pressed, the setting at that moment is confirmed and setting will end.



8.5. How to select the timer


- 2 types of Timer mode can be selected on the remote control.
 - Daily Timer
 - Weekly Timer
- These timers cannot be operated simultaneously.
- Select one of these Timers for your convenience.

How to Change the Display



- Press once to change the display from CLOCK to Timer or vice-versa.
- Press more than 3 seconds to change the display from Daily Timer to Weekly Timer or vice-versa.

CLOCK Display (To set current Day and Time)

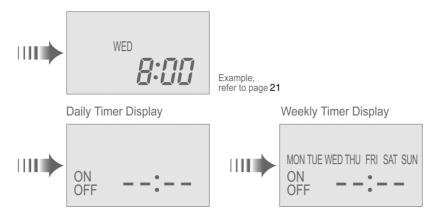


Note:

- The above display is shown if no valid timer setting is made.
- If valid timer setting is made.
 - Timer and setting will be displayed.
 - If you want to check the current time and day, press "MODE button" once.

(However, after a few seconds, the display will change back to Timer and the setting)

8.6. Daily timer setting

Display

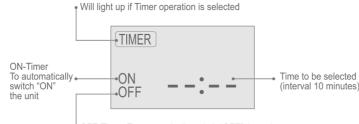



• How to Set Daily Timer

- You can set only "ON" or only "OFF" or "ON" and "OFF" in a day.

1. Change Display

Press "MODE button" to change the display to daily timer.

2. ON-Timer, OFF-Timer and select Time

Press "SELECT button"; ON-Timer setting will be displayed.

Press "UP or DOWN button" to select the desired time, (Example: ON 9:00), then press "SET button" to confirm the selected desired time.

Or press "CANCEL button" if you do not want any setting for ON-Timer.

Then OFF-Timer setting will be displayed.

Press "UP or DOWN button" to select the desired time, (Example: OFF 18:30), then press "SET button" to confirm the selected desired time.

Or press "CANCEL button" if you do not want any setting for OFF-Timer.

Note:

- The setting timer will be activated everyday.
- Timer nearer to the current time will be activated first.

ON OFF ----



Final Display of Daily Timer:



Only ON-Timer being selected. The Unit will automatically switch ON at 9:00.




Only OFF-Timer being selected The Unit will automatically switch OFF at 18:30.



ON and OFF Timer are selected. ON-Timer will be activated first due to 9:00 being nearer to current time.

8.7. Weekly timer setting

Display

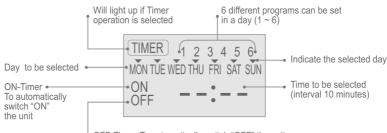

OFF-Timer. To automatically switch "OFF" the unit

• How to Set Weekly Timer

- You can set the Timer for 1 week (Monday to Sunday) with 6 programs per day.
- ON-Timer can be set together with your desired temperature. However, this temperature will be used continuously.
- Cannot set 2 programs with same time setting in a day.
- You also may select Collective many days with same time setting or Individual
 - single/one day setting.

1. Change Display

Press "MODE button" to change the display to weekly timer.

2. Select Day (please refer to next page for example of setting)

You may select Collective or Individual day setting.

• Collective day setting.

Press "SELECT button": display will show day selection setting.

Press "UP or DOWN button" to select the day. Then press "SET button" to delete triangle mark (deselect) or add triangle mark (select).

(Triangle mark on top of each day indicates the day to be selected).

- Repeat these steps if you want to deselect or select many days.
- To confirm the selected days, press the "SELECT button".
- Individual day setting.

Press "UP or DOWN button" to select the day. Then press "SELECT button".

3. Select Time (please refer to next page for example of setting)

For 1st program setting.

Press "UP or DOWN button" to select ON or OFF.

Then press "SET button" to confirm.

Press "UP or DOWN button" again to select the desired time.

(If you want to set them together with your desired temperature, press "TEMP UP/DOWN button" to select the temperature).

Then press "SET button" to confirm.

Or press "CANCEL button" if you do not want to set any time.

For 2nd ~ 6th program you may refer to the above step.

MON TUE WED THU FRI SAT SUN





Example: Setting 1st program

For example, if you want to set:

- A Monday to Friday: Same time, 1st program ON 9:00 & 2nd program OFF 16:00.
- B Only Wednesday: Additional 3rd program OFF 12:30 & 4th program ON 13:30.
- C Only Saturday: 1st program ON 10:00 with 20°C & 2nd program OFF 14:00.
- D Sunday: Holiday. No need to set any Timer.
- To set A (Monday to Friday Collective day setting)

Press "SELECT button"

To select Monday to Friday, deselect Saturday and Sunday by pressing "UP or DOWN button" to Saturday, press "SET button" (triangle mark on top of Saturday will disappear)

Follow the same step to deselect Sunday.

Ensure triangle mark appears on top of Monday ~ Friday.

- To confirm the selected days, press "SELECT button".
 - To set the time, please refer to step 3. Select time at page 23.
 - 1st program select ON and desired time to 9:00.
 2nd program select OFF and desired time to 16:00.
 3rd ~ 6th program press "CANCEL button".

• To set B (Wednesday - Individual day setting)

- Press "UP or DOWN button" to select WED (Wednesday).
 - Then press "SELECT button".

To set the time, please refer to step 3. Select time at page 23.

- 1st program press "SET button" twice (confirm ON and 9:00)
 2nd program also press "SET button" twice. (Confirm OFF and 16:00)
 3rd program select OFF and desired time to 12:30
 4th program select ON and desired time to 13:30
 5th ~6th program press "CANCEL button"
- To set C (Saturday Individual day setting)

- Follow the same step as above.

- To set the time, please refer to step 3. Select time at page 23.
 - 1st program select ON, desired time to 10:00 and desired temperature to 20°C.
 - 2nd program select OFF and desired time to 14:00.

3rd ~ 6th program - press "CANCEL button".

Final Display for Weekly timer may show as:
 (Display is showing, 9:00 ON - Timer on Wednesday will be activated next because it is nearest the current day/time.)

Note:

- Timer that has setting nearest to current time and day will be activated first.
- To check the setting timer, press "SELECT button", then "UP or DOWN button" to select day. The display will show each program for the selected day.
- To reset the setting for all, press "SELECT button", then ensure all day setting with triangle mark. Then press "CANCEL button" for all the programs.

TIMER
MON TUE WED THU FRI
ON 4 []•[][]
OFF J·LIL

TIMER 1 WED



MON TUE WED THU FRI SAT SUN

9 OPERATION CONTROL

9.1. Operation mode

- 1. Thermostat control
- 2. Depend on differences between room temperature and setting temperature, Compressor running frequency will be decided and start operation.

Temperature differences become same as below table, then thermostat is off.

					Unit: °C
Indoor type	Cassette	Ceiling	Duct D1	Duct D2	Duct D3
Cool mode	-1.5	-1.5	-2.0	-2.0	-2.0
Dry mode	-2.5	-2.5	-3.0	-3.0	-3.0
Heat mode	3.5	2.5	2.5	2.5	2.5

Temperature Differences

3. Select indoor temperature thermostat

When connected to wired remote controller, either indoor unit thermostat or remote controller thermostat is available, using remote control setting.

9.2. Compressor start control


- When the compressor start, compressor frequency will be fixed at lower level for certain time, to follow the below table, due to avoid the compressor oil discharge.
- Judging from compressor discharge temperature, decide the start condition to select either cool start control, or warm start control.

Discharge temp. [°C]	>15°C	15°C≦
Start control	Warm start	Cool start

Warm start : set 1 \rightarrow *set 5 \rightarrow normal control

Cool start : set 1 \rightarrow set 2 \rightarrow set 3 \rightarrow set 4 \rightarrow *set 5 \rightarrow normal control

- Note
 - Frequency at *set 5 = frequency calculated by normal control
 - In case of frequency at set n (set 1, set 2 or set 3) excess the frequency at set 5 in cool condition, skip from set n (set 1, set 2 or set 3) to set 4 and transfer to set 5.

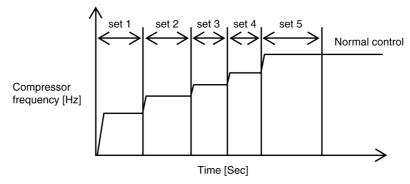

9.3. Cooling operation

9.3.1. Cool indoor fan control

• Fan speed manual

Operation start at hi speed, or medium speed, or low speed set by remote control.

• Fan speed auto

When operation start, or shifting to thermostat ON condition from thermostat OFF condition, odour cut operation (refer odour cut operation page for detail), after thermostat ON condition, indoor fan operate as below control.

When 1st thermostat on condition from operation start, fan speed is hi (same as manual fan speed), after 2nd thermostat on condition, fan speed change to medium speed (same as manual medium fan speed).

9.3.2. Odour cut control

- When cool or dry mode operation start, select odour cut mode or fan auto mode, by remote control, operation start at odour wash mode when compressor start or shift to thermostat on from thermostat off.
- Odour cut operation is under below condition.

Operation mode		Cool or dry mode			
Odour wash setting		Setting	No setting		
Fan setting Auto		Odour cut	Odour cut		
	Manual	Odour cut	-		

• Odour cut operation is to remove the odour generated at indoor heat exchanger to use the drain water come out from indoor heat exchanger.

[Thermo & comp ON/OFF		Thermo	stat ON & co	omp ON	Thermostat OFF		Thermostat ON & comp C		omp ON	
[Time)	40 [Sec]	50 [Sec]	-	20 [Sec]	120 [Sec]	20 [Sec]	40 [Sec]	50 [Sec]	-
[Cool		OFF	Lo	Hi	Lo	OFF	Lo	OFF	Lo	Ме
[Dry		OFF	Lo	Lo	Lo	OFF	Lo	OFF	Lo	Lo
comp	ON OFF					[
Auto fan s (cooli											
(000)	OFF							l			


9.3.3. Cool powerful operation

- When cool or dry mode operation start, temperature differences between room temperature and setting temperature is more than 5 K, setting temperature shift to 2 K down.
- (But when temperature after shifting is less than 16°C, setting temperature is 16°C = no change)
- Micro computer judge that required indoor load is bigger than calculation base from temperature differences between room temperature and setting temperature, then increase the compressor frequency compared to normal to cool down indoor side immediately.
- Those kind of operation complete after 30 minutes when cool mode operation start.

9.3.4. Freezing prevention control

- During cool or dry mode operation, if indoor evaporator temperature is going down, freezing prevention control is operated.
- Detail of Freezing prevention control is as follows;


Indoor evaporator temperature area is divided into 5 zones, which consist of stop zone, down zone, no change zone, up zone, and recovery zone. When indoor evaporator temperature is going into each zone, compressor frequency change by following the below table.

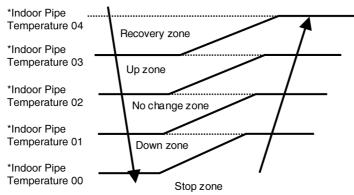

Recovery zone	Release freezing prevention operation
Up zone	Fan motor speed step up
No change zone	Operation no change
Down zone	Reduce the compressor frequency (check for 3 min, max 3 times)
Stop zone	If continue for 6 min, compressor stop (for 3 min after stop, compressor can be started due to restart delay control)

9.3.5. Dew form prevention control

- During cool or dry operation, if outdoor temperature is less than 30°C, and indoor fan speed is low or auto setting, indoor heat exchanger temperature become lower, dew form prevention control start to prevention dew form at indoor discharge grill.
- Indoor evaporator temperature area is divided into 4 zones, which consist of, down zone, no change zone, up zone, and recovery zone.
- When indoor evaporator temperature is going into each zone, change compressor frequency by following the below table.

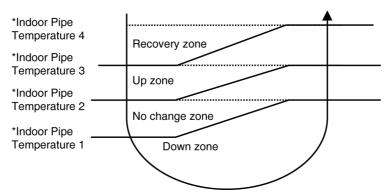

Recovery zone	Release dew form prevention operation	
No change zone	Continue check the indoor heat exchanger temperature	
	Reduce the compressor frequency (check for 3 min, max 3 times)	

9.3.6. Cooling low temperature protection control


- During cooling, or dry operation, if outdoor temperature is less than -15°C.
 - And thermostat on condition continue for 15 min, compressor stop.
 - After 3 min waiting (restart delay), if thermostat is on, compressor restart.

9.4. Heating mode operation

9.4.1. Heating indoor fan control


Fan speed manual

- Fan speed [Hi] [Me] [Lo] set by remote controller.
- However, when operation start, or during operation, fan speed control is limited to due to prevent a cold draft, for example, when heating operation start.

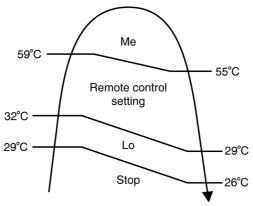

Fan speed auto

• When operation start, or during operation, fan speed control by detecting indoor heat exchanger as follows:

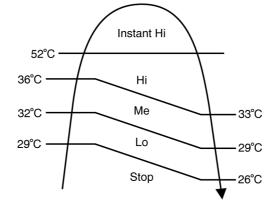


9.4.2. Hot start control

- When heating operation start, hot start control carry out.
- During hot start operation, [PREHEAT] displayed at the wired remote controller.
- For wireless remote controller, [POWER LED] is blinking at the receiver of indoor unit. Indoor fan stop and louver angle fixed to upper side in spite of any setting of remote controller. When indoor heat exchanger temperature increase, or 4 minutes past after operation start, hot start control finish and shift to normal fan control.

9.4.3. Cold draught prevention control

- This control is to prevent cold draught during heating mode operation.
- The operation will start when the compressor is OFF (thermostat off) during heating operation.
- Initially, the AC indoor fan motor will operate at Lo speed for 2 minutes.
- After this, the AC indoor fan stops for 3 minutes and then operates at Lo speed for 10 seconds. And this operation repeats as cold draught prevention control is on.
- The cold draught prevention control stops when the compressor is ON (thermostat on).

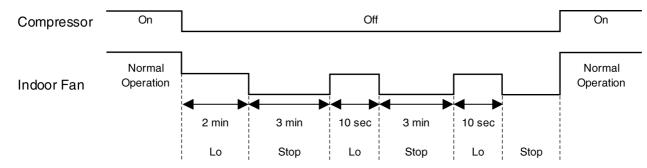

9.4.4. Heating powerful operation

• When heating mode operation start, temperature differences between setting temperature and room temperature is more than 5 K, setting temperature increase 2 K and operation start.


(however, setting temperature after shifting is more than 31°C, setting temperature fixed 31°C.)

- Due to this control, micro computer judge indoor heat loss is big and increase compressor frequency compare to normal condition, then heat up indoor room quickly.
- This control will be finished after 60 min or thermostat is off.

9.4.5. Defrost control

- During heating operation at outdoor low temperature condition, defrost operation start timely to melt the ice formed on outdoor heat exchanger.
- When heating operation accumulated time is time up, and both outdoor temperature and outdoor unit heat exchanger temperature is less than setting temperature for 5 minutes. When defrost temperature is more than setting temperature, defrost operation finish.

- During defrost operation, in spite of any change of remote controller, indoor fan stop.
- During defrost operation, [DEFROST] is displayed at wired remote controller, hot start operate after defrost operation finish.
- The defrost temperature (DEF_Th) depends on outdoor ambient temperature.

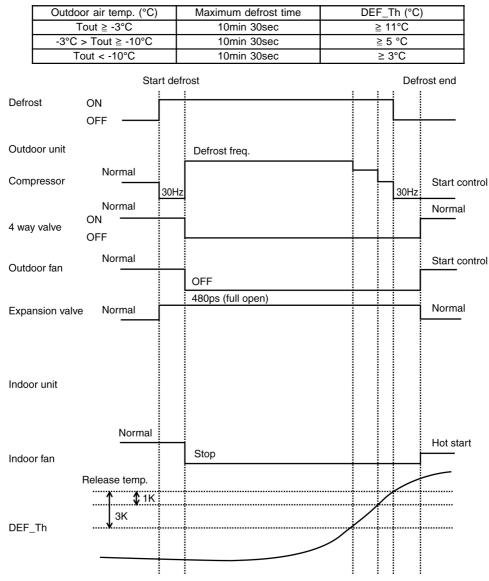

9.4.6. Heating high temperature protection


- During heating operation, when outdoor temperature is more than 35°C for 15 minutes, compressor stop to protect compressor.
- After 3 minutes (re-start delay control) waiting, if thermostat on condition, outdoor unit re-start.

9.5. Odour removing operation

- During stop condition, or cooling operation, when pushing the [ODOUR] button for 3 seconds, operation change to the odour removing operation.
- Operation detail is as follows;

Fan mode operation for 180 seconds, then refrigerant cycle change to heating mode for 720 seconds, to heat up (dry) the indoor unit. Compressor frequency and indoor fan controlled to maintain the indoor heat exchanger temperature 41°C.

- Indoor fan revolution is fixed at Lo speed.
- After that, fan mode operation continue for 360 seconds, then odour removing operation finish.
- During odour removing operation, [ODOUR] sign is blinking at LCD display panel of wired remote controller, when pushing the operation button, or [ODOUR] button, odour removing operation finish and set the odour cut operation.

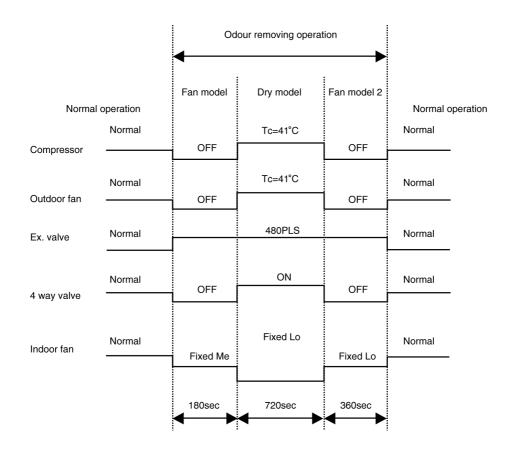


9.6. Energy save operation

- During cooling operation, or heating operation, when pushing the [ECONOMY] button in the wired remote controller, energy save operation start and [ECO] sign is displayed at LCD display panel of wired remote controller ([ECONOMY] sign is displayed at LCD display panel of wireless remote controller).
- When energy save operation start and temperature differences is +1K (=indoor suction temperature setting temperature) for cooling operation, or -1K for heating operation for 30 minutes, thermostat OFF point shift to 0.5K.

(This means thermostat OFF point shift up +0.5K for cooling, thermostat OFF point shift down -0.5K for heating)

From this control, it is judged that indoor side heat loss is small, then reduce compressor frequency. This means energy save operation.

Those kind of operation continue maximum 4 times. If temperature is out of range (thermostat off +1K for cooling, thermostat off -1K for heating), operation release from energy save control. But energy save control cannot be released by pushing ON/OFF button of remote controller, but still effective. When pushing [ECONOMY] button once again, energy save control released.

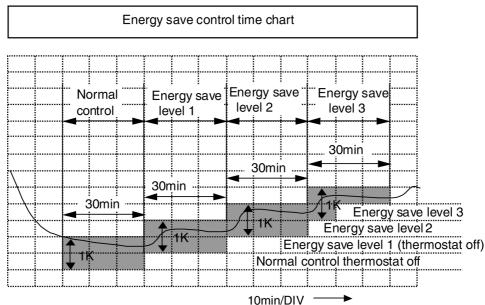

9.7. Outdoor fan remaining heat removal control

• When compressor stop, outdoor fan operate for 1 minute to remove the remaining heat.

9.8. Crank case heater control


- Crank case heater power is on to prevent the refrigerant solving into compressor oil inside of the compressor shell at cold condition.
- When below conditions are satisfied, crank case heater power on.
 - Compressor stop
 - Outdoor temperature ≤ 15°C
 - − Compressor discharge temperature ≤ 15°C


9.9. Valve error

- When install the air conditioner unit and try to start forced operation (cooling mode) after completion the installation, in case of 3 way valve close, valve error displayed at the wired remote controller to protect the compressor.
- This error can be detected to satisfy below condition, when power is on at first time and within 7 minutes from compressor start. (However, it is judged that power on is the first time until compressor start operating continuously for 7 minutes)
 - Indoor heat exchanger temperature when compressor start 3K < current indoor heat exchanger temperature for 5 minutes
 - Indoor suction temperature 3K < current heat exchanger temperature for 5 minutes.

9.10. Pump down operation

- When pushing the [PUMP DOWN] button on the outdoor PCB for 1 second, pump down operation start. Detail of pump down operation is shown at below table.
- During pump down operation, push the [PUMP DOWN] button once again for 1 second, pump down operation stop.
- After 600[Sec] past, pump down operation stop.

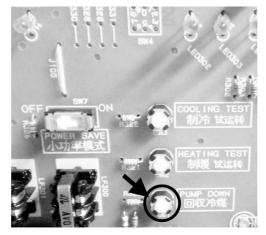

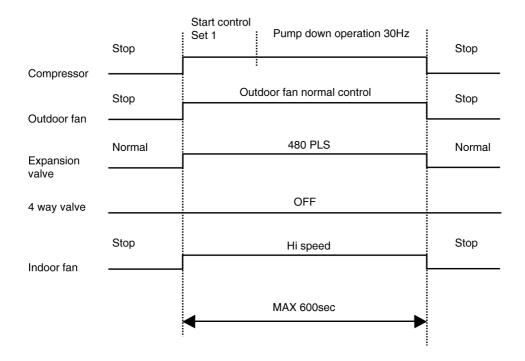


10 INSTALLATION INSTRUCTION

10.1. Pipe length

10.1.1. Correction of capacities

Correction of capacities according to the connecting pipe length.

The data of rated capacities (marked on the name plate) are based on 7.5 metres connecting pipe and horizontal installation.

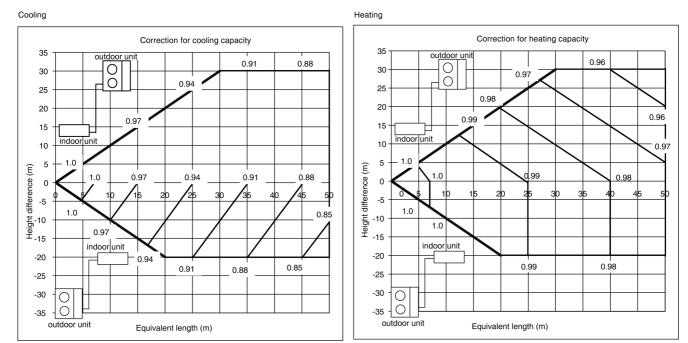

	Piping Size / Length & Elevation											
Model No.			Piping) size		Piping length (A)	Piping elevation (B)	Piping elevation (C)	Piping Chargeless	Add Refrigerant		
	-			Liquid / High	Valve	Gas / Low	Valve	Max (m)	Max (m)	Max (m)	Max (m)	(g/m)
	R		CS-F24DD2E5									
HIDE	4		CS-F28DD2E5									
AWAY	1	(Me)	CS-F34DD2E5	9.52	3-ways	15.88	3-ways	50	30	20	30	50
TYPE	0		CS-F43DD2E5									
	Α		CS-F50DD2E5									

Note :

Piping elevation B = outdoor unit installed at top

Piping elevation C = outdoor unit installed at bottom

Calculation 1

In case of CU-L28, 34DBE5

When pipe length exceed 30m calculated by formula 1, adding refrigerant amount should be calculated by formula 2. If calculation result is less than 30m, it is not necessary to add refrigerant.

Pipe length = main pipe + (branch pipe La + branch pipe Lb)/2.78...formula 1

Add refrigerant = (main pipe + (branch pipe La + branch pipe Lb)/2.78-30) * 50...formula 2


Calculation 2

In case of CU-L43, 50DBE8

When pipe length exceed 30m calculated by formula 3, adding refrigerant amount should be calculated by formula 4. If calculation result is less than 30m, it is not necessary to add refrigerant.

Pipe length = main pipe + branch pipe La + branch pipe Lb...formula 3

Add refrigerant = (main pipe + branch pipe La + branch pipe Lb-30) * 50...formula 4

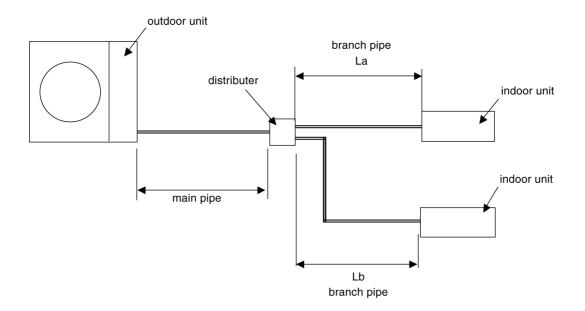

10.1.2. Refrigerant additional charge

• The piping length exceeds 30 metres. APPLICABLE FOR ALL MODELS

Before shipment, this air conditioner is filled with the rated amount of refrigerant subject to 30m piping length. (The rated amount of refrigerant is indicated on the name plate.) But when the piping length exceeds 30m, additional charge is required according to the following table.


Example :

CS-F24DD2E5


In case of 31m long pipe (one-way), the amount of refrigerant to be replenished is: (31 - 30) x 50 = 50g

Model Name	Standard piping specification				
	Liquid piping (dia.mm)	Gas piping (dia.mm)	Gas charge- less length (m)	Additional gas volume (g/m)	
CU-L24DBE5	9.52	15.88	30	50	
CU-L28DBE5	9.52	15.88	30	50	
CU-L34DBE5	9.52	15.88	30	50	
CU-L43DBE5	9.52	15.88	30	50	
CU-L50DBE8	9.52	15.88	30	50	

10.2. Position of the centre gravity

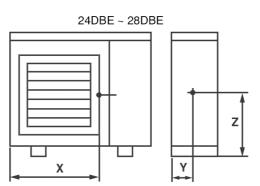



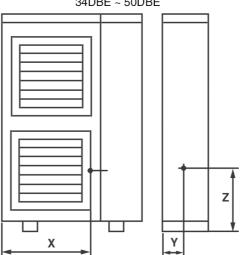

MODEL NAME	OU	TSIDE DIMENSIC	NS	NET WEIGHT	CENTRE OF GRAVITY		
	WIDTH (mm)	DEPTH (mm)	HEIGHT (mm)	kg	X (mm)	Y (mm)	Z (mm)
CU-L24DBE5	900	320	795	71	560	150	320
CU-L28DBE5	900	320	795	71	560	150	320
CU-L34DBE5	900	320	1340	110	560	150	510
CU-L43DBE5	900	320	1340	110	560	150	510
CU-L50DBE8	900	320	1340	105	560	150	510

DUCT TYPE AIR CONDITIONERS INSTALLATION INSTRUCTIONS

REFRIGERANT R410A

HP	Model name
2.5 HP	CS-F24DD2E5
3 HP	CS-F28DD2E5
4 HP	CS-F34DD2E5
5 HP	CS-F43DD2E5
6 HP	CS-F50DD2E5

Precautions in	n terms of safety
Carry out installation work with reliability after thor	ough reading of this "Precautions in terms of safety".
	arnings] and A Cautions]. Those that have much chances for wrong installation would have been carried out are listed compilir
However, even in the case of items which are listed in the co to significant result depending on the situations.	olumn of <u>A Cautions</u> , such items also have a chance for leading
In either case, important descriptions regarding the safety a	re listed, then observe them without fail.
As to indications with illustration	
▲ This mark means "Caution" or "Warning".	This mark means "Earth".
	arnings
· · ·	-
	measures may be necessary to prevent critical concentrations being exceeded. If the refrigerant leaks and reaches critical concentration levels, there is the danger that death from suffocation may result.
As to installation, request the distributor or vendor to perform it. Imperfection in installation caused by that having been carried out by the customer himself may lead to water leakage, electric shock, fire, etc.	Securely attach the protective covers for the outdoor unit connection cables and power cord so that they do not lift up after installation. If the covers are not properly attached and installed, the terminal connections may overheat, and fire or electric shock may result.
Carry out the installation work with reliability according to this manual for installation work. Imperfection in installation leads to water leakage, electric shock, fire, etc.	Switch off all supplies before accessing any electrical part.
Carry out the installation work with reliability on the place that can bear the weight of this unit sufficiently. Insufficient strength leads to injury due to falling of the unit.	▲ If refrigerant gas escapes during installation, ventilate the affected area. If the refrigerant gas comes into contact with sparks or naked flames, it will cause toxic gases to be generated.
Carry out predetermined installation work in preparation for strong wind such as typhoon, earthquake. Imperfection in installation work may lead to accidents arisen from overturn, etc.	Once installation work is completed, check that there are no refrigerant gas in the room that can come into contact with sparks or flames from a fan heater, stove or kitchen range, which will cause toxic gases to be generated.
The unit must be installed in accordance with applicable national and local regulations	When performing piping work do not mix air except for specifier


the refrigerant cycle.

refrigerant (R410A) in refrigeration cycle. It causes capacity down, and risk of explosion and injury due to high tension inside

₩	arnings
Wiring shall be connected securely using specified cables and fix them securely so that external force of the cables may not transfer to the terminal connection section. Imperfect connection and fixing leads to fire, etc.	
∆ C	autions
▲ Carry out Earthing work. Do not connect the Earth return to the gas pipe, water line pipe, lightning rod and telephone lines. Imperfection in Earth return may lead to electric shock.	Drain piping should be made to ensure secure drainage according to the manual for installation work and carry out the thermal insulation to prevent the occurrence of condensation. Imperfection in piping work leads to water leakage and may cause the house and property, etc. to become wet
▲ Do not install the unit at the place where the possibility of inflammable gas leakage exists. If such gas leakage should arise and the gas builds up around the unit, such situation may lead to ignition.	Position the indoor unit, outdoor unit, power cords and indoor/outdoor unit connection cables in a way so that they are at least 1 meter away from televisions and radios. This is to avoid problem such as interference with picture and/or sound. (However, note that depending on the electromagnetic wave conditions, interference may still occur even if the separation distance is more than 1 meter.)
Mounting of the earth leakage circuit breaker is required. Omission in mounting of the earth leakage circuit breaker may lead to electric shock.	

10.3.1. Accessories packed in the indoor unit container


NO.	Parts name	Q'ty
1	Thermal insulator for refrigerant pipe	2
2	Hose clip for thermal insulator	5
3	M10 Flange washer	4
4	M10 Flat washer	4
5	Thermal insulator for drainage hole	1
6	Flexible hose	1

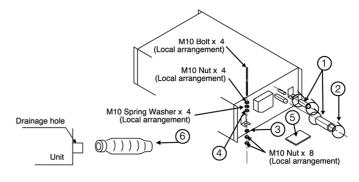

10.3.2. Selecting the location for the indoor unit

Provide a check port on the piping side ceiling for repair and maintenance.

- Install the indoor unit once the following conditions are satisfied and after receiving the customer approval.
 - 1. The indoor unit must be within a maintenance space.
 - 2. The indoor unit must be free from any obstacles in path of the air inlet and outlet, and must allow spreading of air throughout the room.

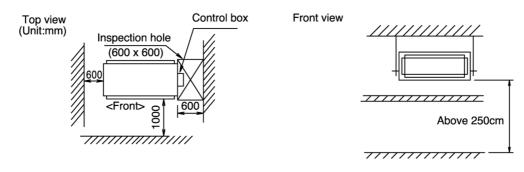

*If the height from the floor to ceiling exceeds three meters, air flow distribution deteriorates and the effect is decreased.

- 3. The installation position must be able to support a load four times the indoor unit weight. A Warnings
- 4. The indoor unit must be away from heat and steam sources, but avoid installing it near an entrance.
- 5. The indoor unit must allow easy draining.
- 6. The indoor unit must allow easy connection to the outdoor unit.
- 7. Place the indoor unit easy water drainage. (Suitable dimension "H" is necessary to get slop to drain as figure.)
- 8. The indoor unit must be from at least 3m away from any noise-generating equipment. The electrical wiring must be shielded with a steel conduit.


- 9. If the power supply is subject to noise generation, add a suppressor.
- 10. Do not install the indoor unit in a laundry. Electric shocks may result.

Note


- Thoroughly study the following installation locations.
 - 1. In such places as restaurants and kitchens, considerable amount of oil steam and flour adhere to the turbo fan, the fin of the heat exchanger and the drain pump, resulting in heat exchange reduction, spraying, dispersing of water drops, drain pump malfunction, etc.

In these cases, take the following actions:

- Make sure that the ventilation fan for smoke-collecting hood on a cooking table has sufficient capacity so that it draws oily steam which should not flow into the suction of the air conditioner.
- Make enough distance from the cooking room to install the air conditioner in such place where it may not suck in oily steam.

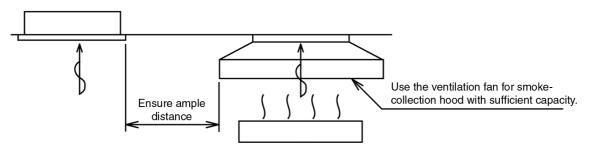


- 2. Avoid installing the air conditioner in such circumstances where cutting oil mist or iron powder exist especially in factories, etc.
- 3. Avoid places where inflammable gas is generated, flows-in, contaminated, or leaked.
- 4. Avoid places where sulphurous acid gas or corrosive gas can be generated.
- 5. Avoid places near high frequency generators.

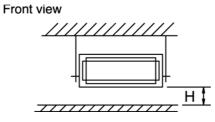

10.3.3. Installation of indoor unit

POSITION OF SUPENSION BOLT

- Apply a joint-canvas between the unit and duct to absorb unnecessary vibration.
- Install the unit learning to a drainage hole side as a figure for easy water drainage.

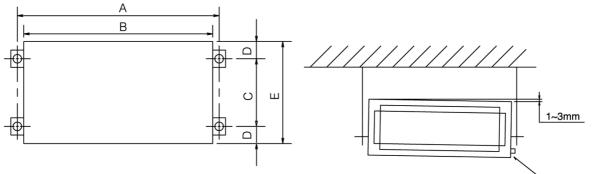

Drainage hole

(unit: mm)

	Α	В	С	D	Е
CS-F24DD2E5	1060	1000	430	35	500
CS-F28DD2E5	1000	1000	430	55	500
CS-F34DD2E5					
CS-F43DD2E5	1060	1000	540	55	650
CS-F50DD2E5					

10.3.4. Refrigerant piping

- Refrigerant is charged to the outdoor unit. For details, see the manual for installation work of outdoor unit. (Additional charging, etc.)
- 1. Brazing for piping.
 - a. Execute brazing before tightening the flare nut.
 - b. Brazing must be executed while blowing nitrogen gas. (This prevents generation of oxidized scale in copper pipe.)
- 2. When there is a lot of brazings for long piping, install a strainer midway of the piping. (The strainer is locally supplied.)
- 3. Use clean copper pipe with inner wall surface free from mist and dust. Blow nitrogen gas or air to blow off dust in the pipe before connection.
- 4. Form the piping according to its routing. Avoid bending and bending back the same piping point more than three times. (This will result in hardening of the pipe).
- 5. After deforming the pipe, align centers of the union fitting of the indoor unit and the piping, and tighten them firmly with wrenches.
- 6. Connect pipe to the service valve or ball valve which is located below the outdoor unit.
- 7. After completed the piping connection, be sure to check if there is gas leakage in indoor and outdoor connection.

Vacuum drying

After completing the piping connection, execute vacuum drying for the connecting piping and the indoor unit.

The vacuum drying must be carried out by using the service ports of both the liquid and gas side valves.

CAUTION Use two wrenches and tighten with regular torque.


	Flare r	ut fastening	torque N.m	n (kgf.cm)	
ø6.35 mm	18 (180)	ø12.7 mm	55 (560)	ø19.05 mm	100 (1020)
ø9.52 mm	42 (430)	ø15.88 mm	65 (660)		

10.3.5. Indoor unit drain piping

• The unit has two drainage holes at both side.


The drainage hole without connection needs seal and thermal insulation with accessories.


- Always lay the drain with downward inclination (1/50 to 1/100).
 Prevent any upward flow or reverse flow in any part.
 - 5mm or thicker formed thermal insulator shall always be provided for the drain pipe.

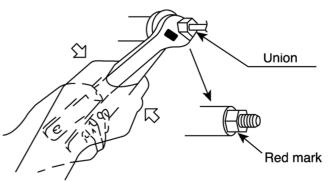

• Confirm the red mark of the union (thin side) is always at lower direction after connecting piping.

Liquid side piping	Gas side piping
ø9.52 mm	ø15.88 mm

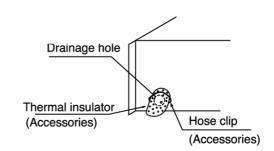


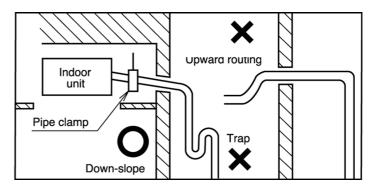

10.3.6. Heat Insulation

A Caution Be sure to perform heat insulation on the drain, liquid and gas piping. Imperfection in heat insulation work leads to water leakage.

1. Use the heat insulation material for the refrigerant piping which has an excellent heat-resistance (over 120°C).

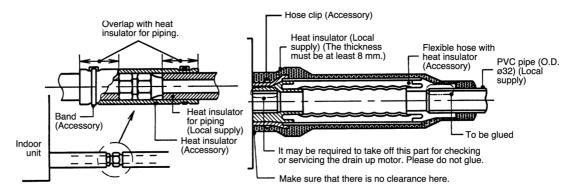


2. Precautions in high humidity circumstance.

This air conditioner has been tested according to the "JIS Standard Conditions with Mist" and have been confirmed that there are no faults. However, if it is operated for a long time in high humid atmosphere (dew point temperature: more than 23°C), water drops are liable to fall. In this case, add heat insulation material according to the following procedure:

- Heat insulation material to be prepared... Adiabatic glass wool with thickness 10 to 20mm.
- Stick glass wool on all air conditioners that are located in ceiling atmosphere.
- In addition to the normal heat insulation (thickness: more than 8mm) for refrigerant piping (gas piping: thick piping) and drain piping, add a further of 10mm to 30mm thickness material.


Wall seal

- When the outdoor unit is installed on a higher position than the indoor unit, install the trap so as not to instill rain water into the wall by transmitting in piping.
- Stuff the space among piping, the electric wire, and the drain hose with "Putty" and seal the penetration wall hole. Make sure that rain water do not instill into the wall.

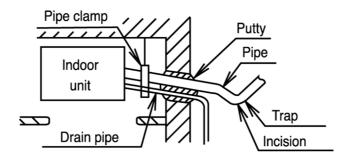

*Put the incision at the trap part of the heat insulator (for water drain)

3. The duct connection of the air outlet needs thermal insulation.

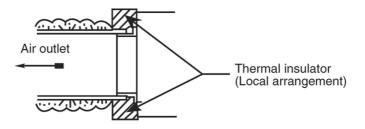

10.3.7. Electrical wiring

As to main pov	ver source and cable size of outdoor unit, read the installation manual attached to the outdoor unit.
	The units must be installed in accordance with applicable national and local regulations.
▲ Warning	The units installed by a professional installer must be supplied from a dedicated electrical circuit.
_	All electrical work must be carried out by a qualified technician according to proper technical standards for electrical work and according to installation manual for installation work.
	If circuit with insufficient capacity are used, or if electrical work is not carried out properly, electric shocks or fire may result.
▲ Caution	Be sure to install a current leakage breaker or circuit breaker to the main power supply, otherwise electric shocks may result.
▲ Caution	Be sure to connect the unit to secure earth connection. (with an earth resistance of 100 Ω or less) If the earthing work is not carried out properly, electric shocks may result.
▲ Warning	Wiring shall be connected securely using specified cables and fix them securely so that external force of the cables may no transfer to the terminal connection section. Imperfect connection and fixing leads to fire, etc.

1. Select a power source that is capable of supplying the current required by the air conditioner.


- 2. Feed the power source to the unit via a distribution switch board designed for this purpose, the switch should disconnected all poles with a contact separation of at least 3 mm.
- 3. Always ground the air conditioner with a grounding wire and screw to meet the LOCAL REGULATIONS.

4. Be sure to connect the wires correctly to terminal board with connecting the crimp type ring terminal to the wires.

5. Be sure to turn off the main power before installing and connecting the remote controller.


Note	If momentarily turning on the power supply for both the indoor and outdoor units, do not turn the power off after at least 1 minute has
	passed. (For the system's automatic setting.)
	Turning off the power supply on the way may cause an abnormal operation.


• Use the standard power cord for Europe (such as H05RN-F or H07RN-F which conforms to CENELEC (HAR) rating specifications) or use the cables based on IEC standard. (245IEC57, 245IEC66)

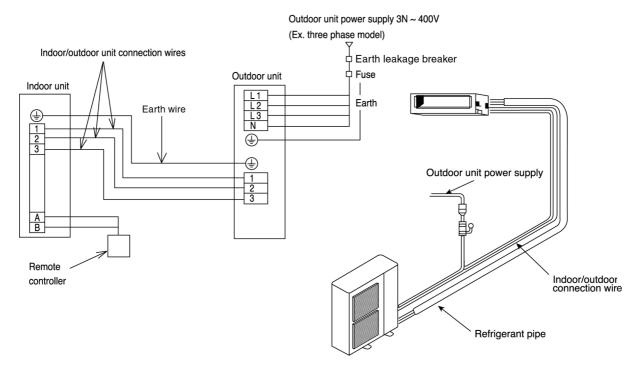

CONNECTING THE WIRES TO THE CONTROL BOX

• Remove two screws ①,remove the control box cover, and then connect the wires by following the procedure given in the illustration.

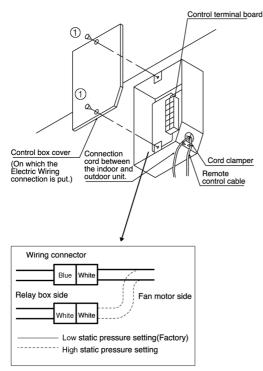

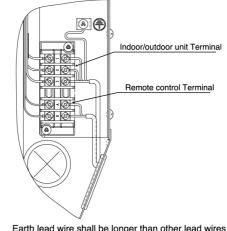

Earth lead wire shall be longer than other lead wires as shown in the figure for the electrical safety in case of the slipping out of the cord from anchorage.

<INDOOR UNIT>

- Remove the control box for electrical connection between the indoor and outdoor unit. (Remove two screws (1)).
- Use the cord clamper to fix the cord.

Caution

Make sure that screws of the terminal are free from Looseness. Fastening torque M4... 118N.cm (12kgf.cm) M5... 196N.cm (20kgf.cm)

10.3.8. Settings

*Do not operate the remote controller within 1 minute after turning on the power of the indoor unit.

*When using group control with the standard type, at least 1 unit must be set at No.1 at the indoor unit.

*Check the settings of the indoor unit in a case where there are no display at remote controller. If there is no problem to the settings, either group control or standard type should be set at No.16 at the indoor unit before turning the power on again.

- All sets in the group which uses the same remote controller thermistor settings can be controlled by the same remote controller thermistor.
- Up to a maximum of 16 indoor units can be connected at the time of group control. (Do not connect heat pump unit with cooling only unit.)
- Indoor unit No. will be set automatically at the time of group control. However, which indoor unit uses which number is unknown. Indoor unit No. is also possible to be set manually with DIP switches. Since manual address setting has priority to automatic address setting. To perform automatic address setting after doing manual setting, turn off all DIP switches from No.1 to No.4, and then stop the operation. Then press three switches such as [AIR SWING AUTO]• [MODE]• [A/C No.] at the same time.

(Do not use manual address setting and automatic address setting together.)

• Centralized control is possible for master unit and slave unit at the time of group control.

	Indoor unit No.	1	2	3	4	5	6	7	8
би	DIP switch (SW2) address setting on indoor unit printed circuit board.	OFF ON 1 2 3 4	OFF ON 1 2 3 4	OFF ON 1 2 3 4	OFF ON 1 2 3 4	OFF ON 2 3 4	OFF ON 1 2 3 3	OFF ON 1 2 3 4	OFF ON 1 2 3 4
Il Setting	A/C No. setting	Unnecessary operation	1 – ON	2 – ON	1, 2 – ON	3 – ON	1, 3 – ON	2, 3 – ON	1, 2, 3 – ON
Manual	Indoor unit No.	9	10	11	12	13	14	15	16
Ŵ	DIP switch (SW2) address setting on indoor unit printed circuit board.	OFF ON 1 2 3 4	OFF ON 1 2 3 4	OFF ON 1 2 3 4	OFF ON 1 2	OFF ON 12 3 4	OFF ON 1 2 3 4	OFF ON 1 2 3 4	OFF ON 1 2 3 4
	A/C No. setting	4 – ON	1, 4 – ON	2, 4 – ON	1, 2, 4 – ON	3, 4 – ON	1, 3, 4 – ON	2, 3, 4 – ON	1, 2, 3, 4 – ON


(Remote Controller address setting)

(Refer to the Installation Manual which is provided with the remote controller for details.)

- Two remote controllers (including the wireless remote controller) can be connected. However, remote control thermistor setting is not possible.
- As for [master/slave] setting of remote controller, the automatic setting and manual setting are possible. Since manual setting is priority.
- Two remote controllers, which both are wireless, cannot be connected.


10.3.9. As for timer output

• Connect the timer cord to connector (CN-TIMER) on print circuit board.

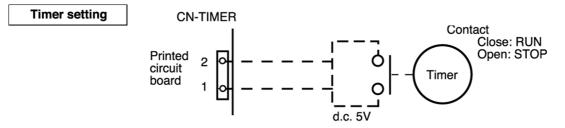


10.3.10. Precautions in test run

- The initial power supply must provide at least 90% of the rated voltage. Otherwise, the air conditioner may not operate.
- Test operation can be carried out using the remote control unit or at the outdoor unit. (If carrying out test operation at the outdoor unit, refer to "TEST OPERATION" in the outdoor unit installation manual.)
- If using the remote control unit to carry out test operation, follow the procedure given below.

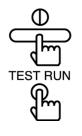

- First, press the OFF/ON (1) button.
- Then press the TEST RUN button within 1 minute of pressing the OFF/ON (①) button.
- Next, select the operation modes.
- The temperature of the indoor unit pipes will be shown on the temperature setting display. (At the start of the test operation, it may take up to 1 minute for air conditioner number, switching time and other displays to appear.)
- After operation modes have been selected, stop the compressor for a moment.
- Press the OFF/ON (()) button of the TEST RUN button once more to cancel test operation mode.
- NOTE 1 These units are equipped with connection error prevention circuits. If the units do not operate, it is possible that the connection error prevention circuits have been operated. In such cases, check that the Indoor/outdoor unit connection wire (connected to terminals ①, ② and ③) is connected correctly. If they are connected incorrectly, connect them correctly. Normal operation should then commence.

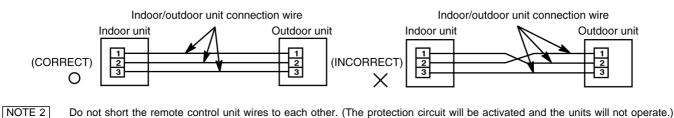

- Once the cause of the short is eliminated, normal operation will then be possible.
- NOTE 3 When running the units in heating mode during test operation, be sure to run the units in cooling mode first before selecting this mode. If heating mode is selected first, it may cause problems with operation of the compressor. (Heat pump model only.)
- NOTE 4 Test operation should be carried out for a minimum of 5 minutes. (Test operation will be cancelled automatically after 30 minutes.)
- NOTE 5 Test operation mode should always be cancelled once test operation itself has been completed.

10.3.11. Check the following items when installation is complete

- After completing work, be sure to measure and record trial run properties, and store measuring data, etc.
- Measuring items are room temperature, outside temperature, suction temperature, blow out temperature, wind velocity, wind volume, voltage, current, presence of abnormal vibration and noise, operating pressure, piping temperature, compressive pressure, airtight pressure.
- As to the structure and appearance, check the following items.
- Is circulation of air adequate?

	I
	ŀ
	Ŀ

- Is draining smooth? Is heat insulation complete (refrigerant and drain piping)?
- Is there any leakage of refrigerant?

Is remote controller switch operated? Is there any faulty wiring? Are the terminal screws loosened? M3... 69-98N.cm {7-10kgf.cm} M4... 157-196N.cm {16-20kgf.cm} M5... 196-245N.cm {20-25kgf.cm}

10.3.12. Hand over

• Teach the customer the operation and maintenance procedures, using the operation manual (air filter cleaning, temperature control, etc.)

As to parts to be sold separately

• With regards to installation of the parts sold separately, follow the installation manual which is provided with the parts sold separately.

As for work specifications of the outdoor unit, read the OUTDOOR UNIT INSTALLATION MANUAL attached to the outdoor unit.

10.4. Outdoor unit installation

AIR CONDITIONERS OUTDOOR UNIT INSTALLATION INSTRUCTIONS

REFRIGERANT R410A

in execution leads to electric shock, fire, etc.

HP	Model name
2.5 HP	CU-L24DB**
3 HP	CU-L28DB**
4 HP	CU-L34DB**
5 HP	CU-L43DB**
6 HP	CU-L50DB**

Precautions i	in terms of safety
Carry out installation work with reliability after tho	rough reading of this "Precautions in terms of safety".
	arnings and A Cautions . Those that have much chances f wrong installation would have been carried out are listed compili
However, even in the case of items which are listed in the c to significant result depending on the situations. In either case, important descriptions regarding the safety a	olumn of <u>A</u> Cautions, such items also have a chance for lead
As to indications with illustration	
▲ This mark means "Caution" or "Warning".	This mark means "Earth".
• • •	te sure that the unit is free from any abnormal condition through to perform maintenance of this unit to the customer according to the stallation work together with instruction manual.
<u>A</u> V	Varnings
The appliance must be installed by technician, who takes into account the requirements given by ISO5149 or eventual equivalent requirements.	▲ If installing inside a small room, measures should be taken to prevent refrigerant levels from building up to critical concentrations in the event of a refrigerant leak occurring. Please discuss with the place of purchase for advice on what measures may be necessary to prevent critical concentrations being exceeded. If the refrigerant leaks and reaches critical concentration levels, there is the danger that death from suffocation may result.
As to installation, request the distributor or vendor to perform it. Imperfection in installation caused by that having been carried out by the customer himself may lead to water leakage, electric shock, fire, etc.	Securely attach the protective covers for the outdoor unit connection cables and power cord so that they do not lift up after installation. If the covers are not properly attached and installed, the terminal connections may overheat, and fire or electric shock may result.
Carry out the installation work with reliability according to this manual for installation work. Imperfection in installation leads to water leakage, electric shock, fire, etc.	Switch off all supplies before accessing any electrical part.
Carry out the installation work with reliability on the place that can bear the weight of this unit sufficiently. Insufficient strength leads to injury due to falling of the unit.	▲ If refrigerant gas escapes during installation, ventilate the affected area. If the refrigerant gas comes into contact with sparks or naked flames, it will cause toxic gases to be generated.
Carry out predetermined installation work in preparation for strong wind such as typhoon, earthquake. Imperfection in installation work may lead to accidents arisen from overturn, etc.	Once installation work is completed, check that there are no refrigerant gas in the room that can come into contact with sparks or flames from a fan heater, stove or kitchen range, which will cause toxic gases to be generated.
The unit must be installed in accordance with applicable national	▲ When performing piping work do not mix air except for specific

<u>∧</u> ₩a	arnings
Wiring shall be connected securely using specified cables and fix them securely so that external force of the cables may not transfer to the terminal connection section. Imperfect connection and fixing leads to fire, etc.	
Ca	utions
 Carry out Earthing work. Do not connect the Earth return to the gas pipe, water line pipe, lightning rod and telephone lines. Imperfection in Earth return may lead to electric shock. Do not install the unit at the place where the possibility of inflammable gas leakage exists. If such gas leakages should arise and the gas builds up around the unit, such situation may lead to ignition. 	 Drain piping should be made to ensure secure drainage according to the manual for installation work and carry out the thermal insulation to prevent the occurrence of condensation. Imperfection in piping work leads to water leakage and may cause the house and property, etc. to become wet Position the indoor unit and outdoor unit, power cords and indoor/outdoor unit connection cables in a way so that they are at least 1 meter away from televisions and radios. This is to avoid problem such as interference with picture and/or sound. (However, note that depending on the electromagnetic
Mounting of the earth leakage circuit breaker is required. Omission in mounting of the earth leakage circuit breaker may lead to electric shock.	wave conditions, interference may still occur even if the separation distance is more than 1 meter.)

10.4.1. Accessories supplied with outdoor unit

• The following parts are supplied as accessories with each outdoor unit.

Check that all accessory parts are present before installing the outdoor unit.

Part name	Q'ty	Diagram	Application		Н	eat pump-types	only
Protective	2		For protecting electrical	Part name	Q'ty	Diagram	Application
bushing			wires	Drain elbow AS	1	Ø	For connecting the drain pipe (with ring seat)
Banding strap	3	Grand	For tying electrical wires together) J	pipe (with hing seat)

10.4.2. Before installation work


- This product is using new refrigeration (R410A). The basic way of installation work is the same as usual, but water and impurities should be controlled more strictly than before due to characteristic of refrigerating machine oil. Therefore, selection of materials to use and processing, storing and brazing need appropriate construction and control.
 - 1. Tools and materials

There are tools and materials for both new refrigeration and usual refrigeration you can use together and for either two of them you can use. Use the below for new refrigeration.

- Vacuum pump (with back flow preventor system)
- Gas leakage detection warning device
- Gauge manifold
- Charge hose
- 2. Installation work
 - a. Brazing work

Brazing work needs replacing air inside pipe with nitrogen gas in order to prevent oxidation scale from occurring. This is called nitrogen replacement, and one of very important work in brazing refrigerant piping. (Oxidation preventive is not possible to use)

(Work method)

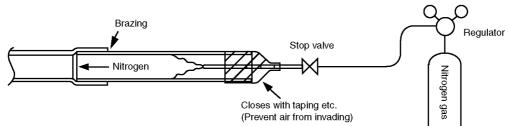


b. Prevention measure for refrigerant piping

Prevention measure for refrigerant piping is very important work to prevent water-dust-rubbish from getting in. All piping terminals needs sealing such as shown below.

Place	Period of work	Method of seal
Outside	More than 1 month	Pinch
	Less than 1 month	Pinch or taping
Inside	Not specified	


- How to pinch

Close terminal part of piping with pliers and seal the gap with brazing.

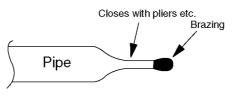

- How to tape

Seal terminal part of piping with vinyl tape.

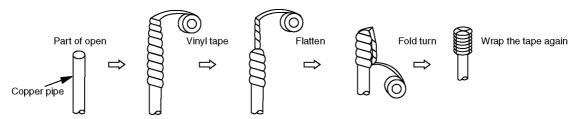

3. Vacuum pumping

Γ

The purpose of vacuum pumping work is to remove and dry air inside the piping or nitrogen at air tightness test. Perform the work carefully.


▲ Caution	Use the vacuum pump with the backflow p	revention mechanism to prevent	backflov	v of oil.
				-
	Vacuuming time	60 minutes or more	T¥	Vacuum pump capacity

4. Refrigerant filling


Refrigerant filling must be done in the state of liquid refrigerant. If this is done in gas refrigerant, the balance of refrigerant composition will collapse and damage the operation.

X

Vacuum pump capacity 60 l/min or more

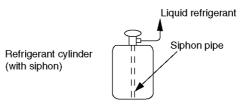

For the use of a gas cylinder without siphon inside, turn it upside down and use it. (We recommend manifold with sight glass.)

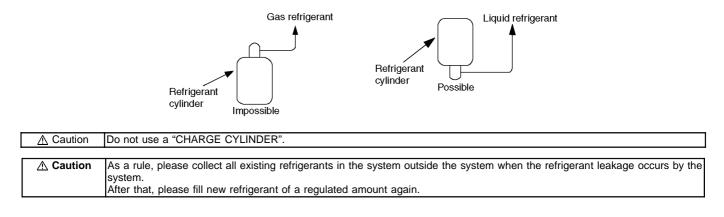

DRY VACUUMING

• If vacuum pump possible vacuuming until less than -100.7kpa.

1. Running vacuum pump at both liquid and gas side for more than 1 hour and vacuuming until -100.7kpa.

2. After that keep the pressure -100.7kpa for 1 hour and confirm the vacuum gauge value not increasing.

3. If vacuum gauge value is increase, there is possibility of water inside the unit or there is any leakage.

10.4.3. Regarding handling

Handling the unit by hold the handle at compressor side and hold the basepan bottom at fan side.




HANDLE

10.4.4. Selecting the outdoor unit installation locations

- Select location which satisfies the following condition, and then confirm with the customer that such a place is satisfactory before installing the outdoor unit.
- 1. There should be sufficient ventilation.
- 2. The outdoor unit should be sheltered as much as possible from rain and direct sunlight, and the air should be able to move around so that hot and cold air do not build up.
- 3. There should not be animals or plants near the air outlet which could be adversely affected by hot or cold air coming out from the unit.
- 4. The outlet air and operating noise should not be a nuisance to other occupants nearby.
- 5. The location should be able to withstand the full weight and vibration of the outdoor unit, and it should also be level and safe for the unit to be installed.
- 6. The intake and outlet should not be covered.
- 7. There should not be danger of flammable gas or corrosive gas leaks.
- 8. There should be as little back-ventilation (air blowing directly onto the fan) as possible.

(If strong wind blows directly onto the fan, it may cause problems with normal operation.)

- If you know which direction the prevailing wind comes from during the operating season, set the outdoor unit at a right-angle to this wind direction, or so that air outlet faces toward a wall or fence.
- If there are obstructions near the outdoor unit and the wind direction is not constant, install an optional air guider.
- 9. Do not allow any obstacles near the outdoor unit which will interfere with air flow around the air intake and air outlet.
- 10. If installing in a location which is prone to snowfall, place the installation base as high as possible, and be sure to install a roof or enclosure which does not allow snow to accumulate.
- 11. Avoid installing the unit in places where petroleum products (such as machine oil), salinity, sulphurous, gases or high-frequency noise are present.

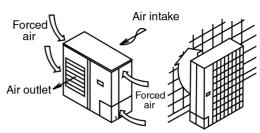


Be sure to leave enough space around the outdoor unit to maintain proper performance and to allow access for routine maintenance.
 Allow enough space from any obstacles as shown in Fig. 1.2 below in order to prevent short-circuits from occurring.


(If installing more than one outdoor unit, make the necessary space available as outlined in 13.)

However, there should be at least 1 meter of free space above the unit.

- The height of any obstacles at the air intake and outlet sides should not be greater than the height of the outdoor unit.
- When facing the air intake side When facing the air outlet side toward a wall. toward a wall 50 cm or Fig. 2 more 10 cm or 50 cm or 10 cm or Fig. 1 Air intake side more more more Space for piping, wiring and Air intake side Space for piping maintenance 10(20)wiring and cm or maintenance more 30 cm or more Air outlet side
- 13. If installing more than one outdoor unit, allow enough space around each unit as shown below.
 - When installing units side by side

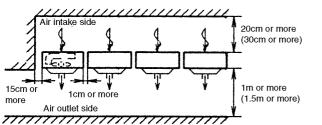

• When installing units facing each other

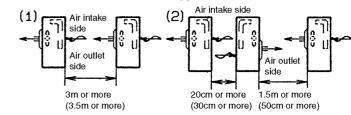

X Maintain sufficient space above the unit.

Values inside brackets indicate distances when installing the 4HP - 6HP.

• The distance given above are the minimum distance required in order to maintain proper performance.

Allow as much space as possible in order to get the best performance from the units.

10.4.5. Transporting and installing the outdoor unit

• Transporting

1. The outdoor unit should be transported in its original packaging as close to the installation location as possible.

2. If suspending the outdoor unit, use a rope or belt, and use cloth or wood as padding in order to avoid damaging the unit.Installation


- 1. Read the "Selecting the outdoor unit installation location" section thoroughly before installing the outdoor unit.
- 2. If installing the unit to a concrete base or other solid base, use M10 or W3/8 bolts and nuts to secure the unit, and ensure that the unit is fully upright and level.

(The anchor bolt positions are shown in the diagram at the right side.)

In particular, install the unit at a distance from the neighbouring building which conforms to regulations specified by local noise emission regulation standards.

- 3. Do not install the outdoor unit to the building's roof.
- 4. If there is a possibility that vibration may be transmitted to the rooms of the building, place rubber insulation between the unit and the installation surface.
- 5. Drain water will be discharged from the outdoor unit when operating the system in heating or defrosting modes. Select an installation location which will allow the water to drain away properly, or provide a drainage channel so that the water can drain away.

(If this is not done, the drain water may freeze during winter, or the water may spill down to areas underneath the installation location.)

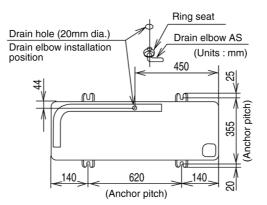

• If a drain pipe needs to be installed, insert the accessory drain elbow into the mounting hole at the bottom of the outdoor unit, and connect a hose with an inside diameter of 15mm to this drain elbow.

(The hose is not supplied.)

X If using the drain elbow, install the outdoor unit on a base which is at least 5cm high.

NOTE In cold regions (where the outdoor air temperature can drop to 0°C or below continuously for 2-3 days), the drain water may freeze, and this may prevent the fan from operating. Do not use the drain elbow in such cases.

10.4.6. Connecting the pipes

- Use a clean pipe which does not include water or dust for inside of piping.
- When cutting the refrigerant pipes, a piping cutter must be used. Before connecting the refrigerant pipes, blow nitrogen and blow off dust in the pipes.

(Never use tools which cause a lot of dust such as a saw and a magnet.)

- When waxing replace nitrogen inside the piping after removing dirt and dust. (In order to prevent oxidation scale from forming inside the piping).
- The refrigerant pipes are of particular importance.

The installation work for refrigerant cycles in separate-type air conditioners must be carried out perfectly.

1. Refer to the table below for the pipe diameters equivalent lengths and indoor/outdoor unit difference of elevation.


Pipe diameter (mm)		Equivalent length (m)	Difference of elevation (m)
Liquid-side pipes	Gas-side pipes		
ø9.52 x 0.8	ø15.88 x 1.0	50	30

2. Local pipes can project in any of four directions.

- Make holes in the pipe panels for the pipes to pass through.
- Be sure to install the pipe panels to prevent rain from getting inside the outdoor unit.

[Removing the service panel].

- (1) Remove the two mounting screws.
- (2) Slide the service panel downward to release the pawls. After this, pull the service panel toward you to remove it.

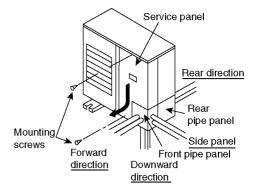


3. Notes when connecting the refrigerant pipes.


- Use clean copper, pipes with no water or dust on the insides.
- Use phosphorus-free, unjointed copper pipes for the refrigerant pipes.
- If it is necessary to cut the refrigerant pipes, be sure to use a pipe cutter, and use compressed nitrogen or an air blower to clean out any foreign particles from inside the pipe.
- Be careful not to let any dust, foreign materials or water get inside the pipes during connection.
- If bending the pipes, allow as large a bending radius as possible. Do not flex the pipes any more than necessary.
- If joining pipe ends, do so before tightening the flare nut.
- Always blow the pipe end with nitrogen while joining pipe ends.
 - (This will prevent any oxide scaling from occurring inside the pipe.)
- If using long pipe lengths with several joined pipe ends, insert strainers inside the pipes. (Strainers are not supplied.)
- When tightening the flare nuts, coat the flare (both inside surfaces) with a small amount of refrigerator oil, and screw in about 3-4 turns at first by hand.
- Refer to the following table for the tightening torques. Be sure to use two spanners to tighten.

(If the nuts are overtightened, it may cause the flares to break or leak.)

Flare nut fastening torque N•m (kgf•cm)					
ø6.35 mm	18 (180)	ø15.88 mm	65 (660)		
ø9.52 mm	42 (430)	ø19.05 mm	100 (1020)		
ø12.7 mm	55 (560)				

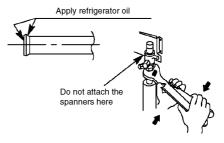

- 4. After piping connection has been completed, make sure that the joint areas of the indoor and outdoor units are free from gas leakage by the use of nitrogen, etc.
- 5. Air purge within connection piping shall be carried out by evacuation.
- 6. Close the tube joining area with putty heat insulator (local supply) without any gap as shown in below figure.
 - (To prevent insects or small animal entering)

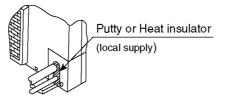

10.4.7. Heat insulation

▲ Caution	Use a material with good heat-resistant properties as the heat insulation for the pipes. Be sure to insulate both the gas-side and liquid-side pipes. If the pipes are not adequately insulated, condensation or water leakages may occur.
-----------	--

Liquid-side pipes	Material that can withstand
Gas-side pipes	120°C or higher

10.4.8. Charging with refrigerant

- At the time of shipment from the factory, this unit is charged with enough refrigerant for an equivalent pipe length of 30m. If the equivalent pipe length used will be 30m or less, no additional charging will be necessary.
- If the equivalent pipe length will be between 30 and 50m, charge with additional refrigerant according to the equivalent length given in the table below.
 - For standard type

Additional charging amount	Equivalent length	
0.05 kg/m	50m	

• Pump down operation


- Operate the pump down according to the following procedures.

	Procedure	Notes
1.	Confirm the valve on the liquid side and the gas side is surely open.	
2.	Press the PUMP DOWN switch on outdoor printed board for 1 second or more.	Perform the cooling operation for five minutes or more.
3.	Shut the valve on the liquid side surely.	When the valve is shut halfway, the compressor is occasionally damaged.

10.4.9. Electrical wiring

<u>∧</u> Warning	The units must be connected to the supply cables for fixed wiring by qualified technician. Feed the power source to the unit via a distribution switch board designed for this purpose, the switch should disconnected all poles with a contact separation of at least 3mm. When the supply cable is damaged, it must be replaced by qualified technician.
▲ Caution	Be sure to install a current leakage breaker, main switch and fuse to the main power supply, otherwise electric shocks may result.
<u>∧</u> Caution	Be sure to connect the unit to secure earth connection. If the earthing work is not carried out properly, electric shocks may result.
<u>∧</u> Warning	Wiring shall be connected securely by using specified cables and fix them securely so that external force of the cables may not transfer to the terminal connection section. Imperfect connection and fixing leads to fire, etc.


- Connect the power supply wiring and indoor/outdoor unit connection wiring according to the electrical circuit diagram instructions.
- Clamp the wires securely to the terminal connections using cord clamps so that no undue force is placed on the wires.
- Once all wiring work has been completed, tie the wires and cords together with the binding strap so that they do not touch other parts such as the compressor and pipes.
- 1. Connect the power supply line to a 3-phase/380-415V (or single-phase 220-240V) power supply.
- 2. The equipment shall be connected to a suitable mains network with a main impedance less than the valve indicated in the table of power supply specifications.
- 3. Be sure to connect the wires correctly to terminal board with connecting the crimp type ring terminal to the wires.
- 4. The binding screws inside the power supply box may become loosened due to vibration during transportation, so check that they are tightened securely.
- 5. Tighten the binding screws to the specified torque while referring to the table below.
- If connecting two separate wires to a single crimped terminal, place the two crimped terminal wires together as shown in Fig. A. (If the arrangement shown in Fig. B is used, poor contacts or contact damage may result.)
- 7. If momentarily turning on the power supply for both the indoor and outdoor units, do not turn the power off again until at least 1 minute has passed (except when a reversed phase has been detected).

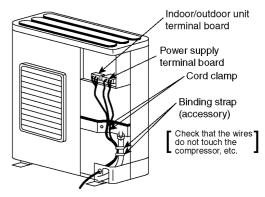




Marning force	only the specified cables for wiring connections. Connect the cable securely, and secure them properly so that no undue will be applied to the terminal connections. The terminals are loose or if the wires are not connected securely, fire may result.
---------------	--

Terminal screw	Tightening torque N.cm {kgf.cm}
M3	69 ~ 98 {7 ~ 10}
M4	157 ~ 196 {16 ~ 20}
M5	196 ~ 245 {20 ~ 25}

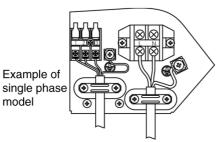

Earth lead wire shall be longer than other lead wires as shown in the figure for the electrical safety in case of the slipping out of the cord from the anchorage.

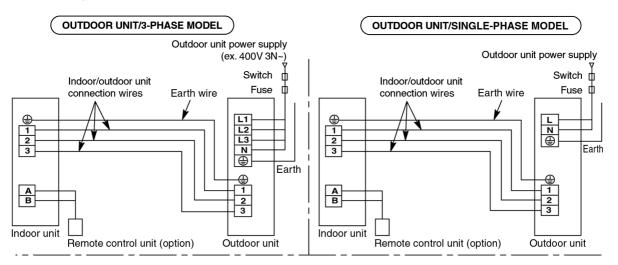


• Power supply specifications

Model	name	Leakage current		breaker Capacity)	Minimum power	4mm ² cable	Maximum permissible	Indoor/outdoor unit connection
		breaker (A)	Switch (A)	Fuse (A)	supply cables	based on length (m)	impedance (Ω)	power cables (terminals ①, ②, ③, ⊕)
CU-L24DB***	220V-240V~	30	30	20		14	0.1	
CU-L28DB***	220V-240V~	30	30	20	4 mm ²	14	0.1	2.5 mm ² × 3
CU-L34DB***	220V-240V~	40	40	30		9	0.05	
CU-L43DB***	220V-240V~	40	40	40		8	0.05	
CU-L50DB***	380V-415V 3N~	30	30	30		11	0.02	

NOTE


1. Where ground work (earth) is carried out, do not connect the ground return to the gas pipe, water line pipe, grounded circuit of the telephone and lightning rod, or ground circuit of other product in which earth leakage breaker is incorporated. (Such action is prohibited by statute, etc.)

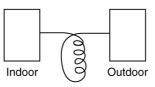

Make sure the indoor and outdoor connection wires are detangled. (There might be effect to received outside noise.)

- 2. Use the standard power supply cables for Europe (such as H05RN-F or H07RN-F which conforms to CENELEC (HAR) rating specifications) or use the cables based on IEC standard. (245IEC57, 245IEC66)
- 3. Select the particular size of electrical wire for power supply cables in accordance with the standards of the given nation and region.

10.4.10. Connecting power supply cables

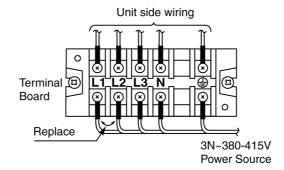

CAUTION

- For three phase model, never operate the unit by pressing the electromagnetic switch.
- Never correct the phase by switching over any of the wires inside the unit.

10.4.11. Precautions with regard to test operation

CAUTION


- Always be sure to use a properly-insulated tool to operate the switch on the circuit board. (Do not use your finger or a metallic object.)
- Never turn on the power supply until all installation work has been completed.
- Turn on the circuit breaker 12 hours or more before a test run. (By supplying power to crankcase heater, compressor is warmed and liquid compressing is prevented.)
- Check that the voltage is 90% of rated voltage or higher when starting the unit.


(The unit will not operate if the voltage is less than 90% of rated voltage.)

• Test operation can be carried out using the remote control unit or by using the switch on the printed circuit board inside the outdoor unit.

If carrying out test operation at the printed circuit board of the outdoor unit, follow the procedure given below. (If using the remote control unit to carry out test operation, refer to the installation manual which is supplied with the indoor unit.)

- Press the COOL or HEAT switch for 1 second or more.
- (Be sure to select cooling mode first, and run the units in this mode for 5 minutes or more.)
- Press the TEST button once more to cancel test operation mode.
- When performing heating test operation when the outside temperature is high, or cooling test operation when the outside temperature is low, the protection circuits may sometimes operate within a few minutes.
- NOTE 1 These units are equipped with connection error prevention circuits. If the units do not operate, it is possible that the connection error prevention circuits have been operated. In such cases, check that the Indoor/outdoor unit connection wire (connected to terminals ①, ② and ③) is connected correctly. If they are connected incorrectly, connect them correctly. Normal operation should then commence.

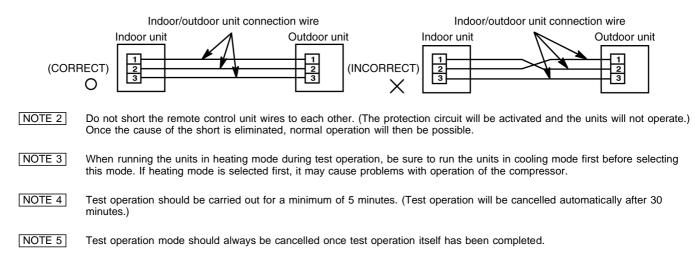

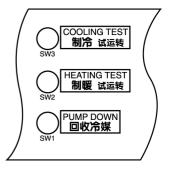

NOTE If the self-diagnosis function reports a problem but more than one problem has developed at the indoor and/or outdoor units, the problem display on the remote control unit may not match the LED display on the outdoor unit printed circuit board. In such cases, check both locations and remove the causes of the problems.

10.4.12. As to making the inspection after completion of work fully understood

- At the time when the work has been completed, measure and record the characteristics of test run without fail and keep the measuring date, etc.
- Carry out the measurement regarding room temperature outside air temperature, suction and air discharge temperatures, wind velocity, wind volume, voltage current, presence of abnormal vibration, operating pressure, piping temperature, compressive pressure, airtight pressure as items to be measured.
- As to the structure and appearance, check following items.
- Short circuit of the blow-out air
- Smooth flow of the drain
- Reliable thermal insulation
- Leakage of refrigerant

Mistake in wiring
 Reliable connection of the grand wire
 Looseness in terminal screw, fastening torque
 M3... 69-98N.cm {7-10kgf.cm} M4... 157-196N.cm {16-20kgf.cm}

M5... 196-245N.cm {20-25kgf.cm}

10.4.13. As to delivery to the customer

- Request the customer to operate this air conditioner viewing instruction manual come with indoor unit in practice and explain how to operate.
- Deliver the instruction manual to the customer without fail.

10.5. Wired remote controller installation

Wired Remote Controller Installation Manual

- Before installing the wired remote controller, be sure to thoroughly read the "Notes with regard to safety" section of the installation manual provided with the indoor unit.
- After installing the wired remote controller, carry out a test operation to check that the remote controller functions properly, and also explain the operation and cleaning procedures to the customer in accordance with the details in instruction manual. Furthermore, ask the customer to keep this installation manual and the instruction manual in a safe place for later reference.


10.5.1. Accessories supplied with wired remote controller

Name	Q'ty	Diagram	Remark
Remote controller	1		
Remote control cable	1	A	Length (10m)
4mm screw	3	ATT(X)	Installing the remote controller to the wall
M4 screw	3	Comp.	Installing the remote controller to an outlet box
Round terminal	2		Connecting to indoor unit terminal block

10.5.2. Notes regarding wired remote controller setting-up location

- Select a place where the remote controller can be operated easily (after obtaining approval from the building's owner).
- Install in a place which is away from direct sunlight and as free from humidity as possible.
- Install in a place which is as flat as possible to avoid warping of the remote controller.
- (If installed to a wall an uneven surface, damage to the LCD case or operation problems may result.)
- Install in a place where the LCD can be seen easily. If the remote controller is installed somewhere which is too low or too high, it may be difficult to read the LCD. (Standard height from the floor is 1.2 to 1.5 meters.)
- Avoid installing the remote control cable near refrigerant pipes or drain pipes.
- Install the remote control cable at least 5cm away from other electric wires (including stereo and TV cables) to avoid misoperation (electromagnetic noise).
- If passing the remote control cable through a wall, be sure to install a water trap above the cable.
- Allow sufficient space around the remote controller as shown in the illustration at below.

Secure the remote controller lower case to the wall or to an outlet.

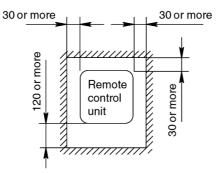

10.5.3. Remote controller installation


• Be sure to turn off the main power before installing and connecting the remote controller.

(If the remote controller is connected while the power is still turned on, the remote controller displays may not appear.) If no displays appear on the remote controller, check while referring to "If no remote controller displays appear" in "9.5.5. Test operation".

• The remote control cable is live during use, so please be careful with it.

```
Remote controller wiring
```

- Connect the indoor unit and the remote controller as shown in the illustration below.
- The remote control cable is non-polar.
- At the time of shipment from the factory, the connector cable used to connect the terminal block and connector CN1 is disconnected. When connecting the remote controller wiring and installing the remote controller, be sure to connect the cord to the connector CN1.

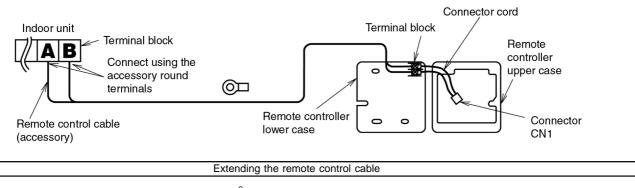

• Solder a sheathed PVC cord or cable (0.5 - 2 mm²) with specifications among those given below to the remote controller end of the accessory remote control cable (10 m).

IEC 502

IEC 227-4

IFC 227-4

- * PVC round cabtire cord
 * 600V PVC-insulated PVC sheathed round cable
- * 600V PVC-insulated PVC sheathed flat cable


NOTE The maximum possible length for the remote control cable is 200 m.

Remote controller installation procedure

• Remove the remote controller lower case.

(Insert a flat-tipped screw driver or similar 2 to 3 mm into one of the gaps at the bottom of the case, and then twist the screw driver to open. [Refer to the illustration below.])

Be careful not to damage the lower case.

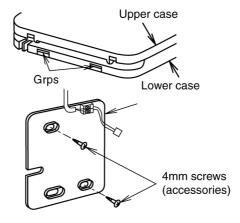


• Secure the lower case to the wall or outlet box.

(Refer to the illustration below for the embedded and exposed positions for remote control cable.)

NOTE


- Be sure to use only the accessory screws.
- Do not bend the lower case when tightening the screws.
- (If the screws are overtightened, damage may result.)
- Do not remove the protective tape which is affixed to the upper case circuit board.
- If installing the remote controller with the remote control cable exposed, use nippers to cut a notch into the upper case. (The feeding-out direction can be either up or to the left or right)
- Strip the end of the remote control cable which is to be connected to the remote controller. (Refer to the illustration below)

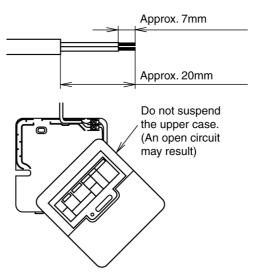

• Route the remote control cable inside the lower case in accordance with the intended feeding-out direction. (Refer to the illustration below.)


Securely connect connector CN1. (If it is not connected, the remote controller will not operate.)


NOTE After connecting the connector, do not suspend the upper case by its own weight, otherwise the connector cord may break.

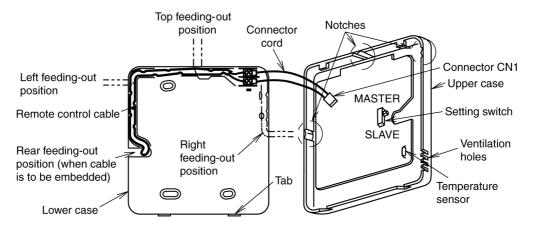

- If controlling using two remote controllers, refer to "Control using two remote controller-s" in "9.4.4. Settings".
- Secure the upper case to the lower case.

(Hook the upper tab of the upper case into the lower case, and then push the upper case until it snaps shut onto the lower case tab, while being careful not to clamp the remote control cable and the connector cord.)

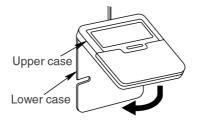

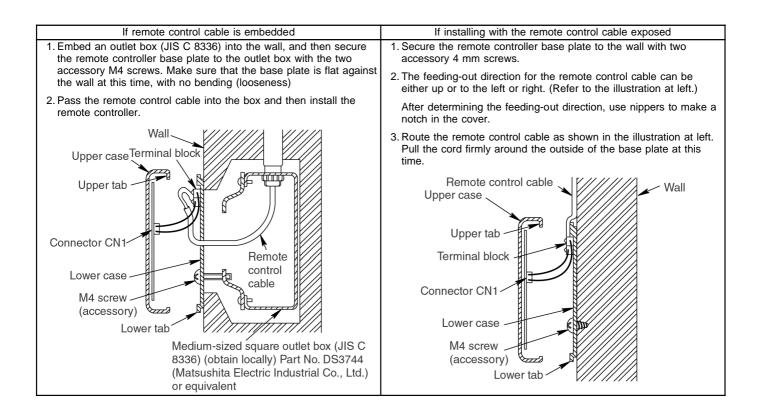

10.5.4. Settings

Control using two remote controllers


- Up to two remote controllers can be installed for a single indoor unit, and either remote controller can be used to operate the indoor unit.
- The indoor unit can be operated with the last switch pressed having priority.
 - 1. Decide which is to be the master and which is to be the slave remote controller.

The master or slave states of the remote controller are set automatically. The MASTER/SLAVE setting switch can also be use to make the setting manually, however if a manual setting is made, that manual setting has priority.

Be sure to turn off the main power before making a manual setting.

2. Connect the remote controllers.

Connect both remote controllers to terminals (A) and (B) on the indoor unit terminal block (non-polar).

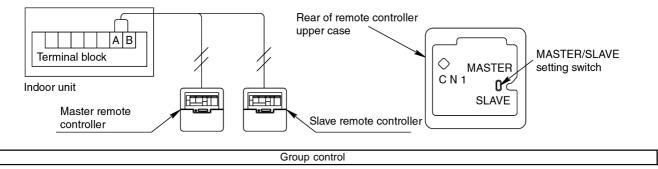

- All in group will be remote controller thermistor setting when using the remote controller thermistor.
- Up to a maximum of 16 indoor units can be connected at the time of group control. (Do not connect heat pump unit with cooling only unit.)
- Indoor unit No. is possible to set automatically at the time of group control. However, what number would be assigned to which indoor units is unknown.


Indoor unit No. is also possible to set manually with DIP switches. Since manual address setting is priority during performing automatic address setting. (Do not use manual address setting and automatic address setting together.)

[Manual Setting]

Indoor unit No.	1	2	3	4	5	6	7	8
DIP switch (SW2) address setting on indoor unit printed circuit board.	OFF ON 1 2 3 4	OFF ON 1 2 3 4	OFF ON 2 3 4	OFF ON 2 3 4	OFF ON 2 3 4	OFF ON 1 2 3 4	OFF ON 1 2 3 4	OFF ON 1 2 3 4
A/C No. setting	Unneccessory operation	1 ~ ON	2 ~ ON	1, 2 ~ ON	3 ~ ON	1, 3 ~ ON	2, 3 ~ ON	1, 2, 3 ~ ON
Indoor unit No.	9	10	11	12	13	14	15	16
DIP switch (SW2) address setting on indoor unit printed circuit board.	OFF ON 1 2 3 4	OFF ON 1 2 3 4	OFF ON 1 2 3 4	OFF ON 1 2 3 4	OFF ON 1 2 3 4	OFF ON 1 2 3 4	OFF ON 1 2 3 4	OFF ON 1 3 4
A/C No. setting	4 ~ ON	1, 4 ~ ON	2, 4 ~ ON	1, 2, 4 ~ ON	3, 4 ~ ON	1, 3, 4 ~ ON	2, 3, 4 ~ ON	1, 2, 3, 4 ~ ON

Automatic address resetting for group control

- The address settings for group control (air conditioner Nos. 1 to 16) can be reset automatically.
 - 1. When operation is stopped, press for 5 seconds, continue the TEST RUN switch to display "00" (will be LOCAL MODE).
 - 2. Press the UP (TEMP) DOWN (TEMP) switch to display 10.
 - 3. Press the SELECT switch to display "000". It would blinks.
 - 4. Press the UP (TIMER) DOWN (TIMER) switch to display "001". It would blinks.
 - 5. Press the SET switch.

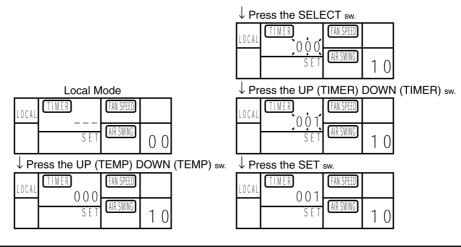


Switching the thermistor

- The temperature detection thermistor can be switched between the thermistor at the indoor unit and the thermistor at the remote controller. However, do not switch to the remote controller thermistor if using two remote controllers.
 - 1. When operation is stopped, press for 5 seconds, continue the TEST RUN switch to display "00" (will be LOCAL MODE).
 - 2. Press the UP (TEMP) DOWN (TEMP) switch to display 11.
 - 3. Press the SELECT switch to display "000". It would blinks.
 - 4. Press the UP (TIMER) DOWN (TIMER) switch to choose display "000" or "001".
 - "000" ... Indoor unit setting (factory default)
 - "001" ... Remote controller setting

5. Press the SET switch. (Be sure to press the SET switch so that normal operation mode can be resumed.)

• Repeat the procedure in steps (1) to (5) to change the setting again.

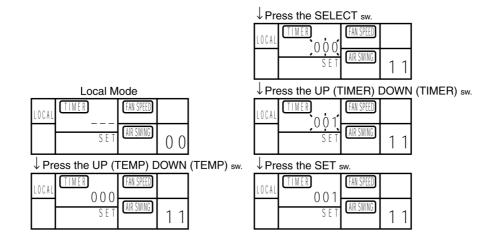

10.5.5. Test operation

- Turn on the main power.
- After 3 minutes have passed since the power was turned on, press the OFF/ON switch on the remote controller. (No operation occurs within 3 minutes after the power was turned on.)

OFF/ON (1)

TEST RUN

- Press the TEST RUN switch within 1 minute of pressing the OFF/ON switch.
- Next, select the operation mode. (Be sure to select cooling mode first, and run the unit in this mode for 5 minutes or more.)
- Press the OFF/ON switch or the TEST RUN switch to cancel test operation.
- Test operation will be cancelled automatically after 30 minutes.

If remote controller displays nothing


- Check once more that the remote control cable is securely connected. (Check for loose terminals, poor contacts, connection positions terminal block, etc.)
- If the above checks show that nothing is wrong but nothing appears on the remote controller display.
- It is possible that the remote controller was connected while the main power was still turned on. If such is the case, carry out the following.

*Set DIP switch (SW2) No. 1 to 4. The ON position, and then turn on the main power. If the display appears after about 30 seconds, turn DIP switches 2 to 4 to OFF position.

10.5.6. Self-diagnosis function


If "CHECK" is blinking on the timer

- If the "CHECK" display on the wired remote controller is blinking, the details of the problems are displayed on the timer display screen each time the CHECK switch is pressed.
- Further details of the problem can be displayed by pressing the SET switch while the general problem details are being displayed.

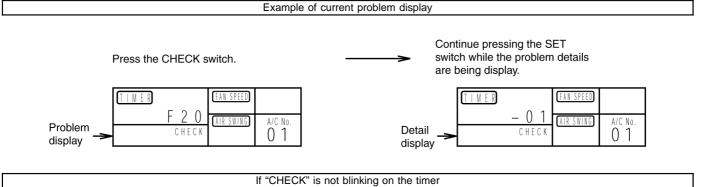

• If the "CHECK" display on the wired remote controller is not blinking, press the CHECK switch continuously for 5 seconds or more to display the problem details for the last problem or the problem before that.

- You can then switch between the display for the previous problem and the problem before that by pressing the UP (TIMER) DOWN (TIMER) switches.
- Press the CHECK switch once more to return to the normal display.

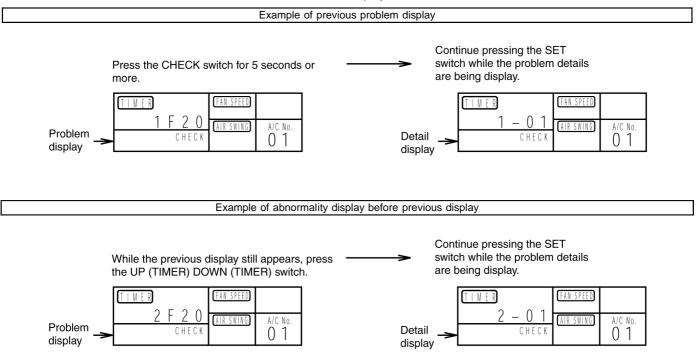

- The display can be switched between the previous problem and the one before that by pressing the UP (TIMER) DOWN (TIMER) switches.
- After eliminating the cause of the problem, press the CHECK switch once more to return to the normal display.

10.6. Twin systems installation

10.6.1. General

- 1. Two indoor units can be operated simultaneously with a single remote control unit. Note that individual operation is not possible.
- 2. Master unit and slave-unit can be set automatically in twin systems. No address setting is necessary.
- 3. Applicable "Twin" combination table.

Outdoor unit	CU-L28	CU-L34	CU-L43	CU-L50	
Combination	<u>CU-L28</u>	<u>CU-L34</u>	<u>CU-L43</u>	<u>CU-L50</u>	
	(CS-F14) (CS-F14)	CS-F18 CS-F18	CS-F24 CS-F24	(S-F28 (S-F28)	

• Should be the same capacity and the same model type.


10.6.2. Piping connections

1. The following table shows the pipe diameter for a twin-type system. (Branch pipe kit should be used)

Outdoor unit main	Branch pipe	Inc	loor unit co	mbination	
pipe diameter (mm)	diameter	CS-F14	CS-F18	CS-F24	CS-F28
Liquid side: Ø9.52	Liquid side	Ø6.35	Ø6.35	Ø9.52	Ø9.52
Gas side: Ø15.88	Gas Side	Ø12.7	Ø12.7	Ø15.88	Ø15.88
Branch pipe kit (Opti	CZ-H2	2H53DP	CZ-H2	2H53EP	

2. The following table shows the equivalent pipe lengths and height differences for twin type systems.

Equivalent length		L + la + lb				
Branch pipe		la, Ib				
Branch pipe difference		la - Ib				
	H1	Between indoor units	Outdoor located higher installation	Within 30m		
Height difference	and outdoor unit		Outdoor located lower installation	Within 20m		
	H2	Between master & slav	Within 0.5m			

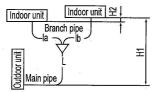

Notes


- Use the main pipe to gain any rise or fall required for the pipes.
- The number of bends should be 8 or less in a single system (L+la,L+lb), and 15 or less overall.
- Branch pipes should be positioned horizontally.


10.6.3. Refrigerant charging

- 1. Calculate the piping length according to the following table1.
 - Calculation table 1. (piping length)


Model	Piping length (m)
CU-L28, L34	Main pipe (L) + [Branch pipe (la) + Branch pipe (lb)] /2.78
CU-L43, L50	Main pipe (L) + Branch pipe (Ia) + Branch pipe (Ib)

- 2. Calculate the additional amount of refrigerant according to the following table 2. If the calculation table 1 result exceeds 30m, additional gas charge necessary. (Additional gas charge unnecessary for 30m or less from the calculation result)
 - Calculation table 2. (additional refrigerant gas charge amount)

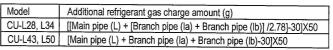

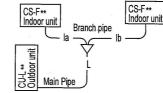

10.6.4. Wiring

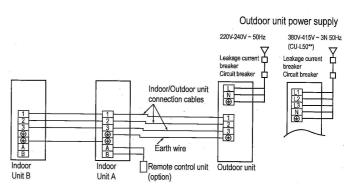

11 INSTALLATION & SERVICING AIR CONDITIONER

11.1. Outline

11.1.1. About R410A refrigerant

1. Converting air conditioners to R410A

Since it was declared in1974 that chlorofluorocarbons (CFC), hydro chlorofluorocarbons (HCFC) and other substances pose a destructive danger to the ozone layer in the earth's upper stratosphere (20 to 40 km above the earth), measures have been taken around the world to prevent this destruction.

The R22 refrigerant which has conventionally been used in ACs is an HCFC refrigerant and, therefore, possesses this ozonedestroying potential. International regulations (the Montreal Protocol on Ozone-Damaging Substances) and the domestic laws of various countries call for the early substitution of R22 by a refrigerant which will not harm the ozone layer.

• In ACs, the HFC refrigerant which has become the mainstream alternative is called R410A. Compared with R22, the pressure of R410A is approximately 1.6 times as high at the same refrigerant temperature, but the energy efficiency is about the same. Consisting of hydrogen (H), fluorine (F) and carbon (C), R410A is an HFC refrigerant. Another typical HFC refrigerant is R407C. While the energy efficiency of R407C is somewhat inferior to that of R410A, it offers the advantage of having pressure characteristics which are about the same as those of R22, and is used mainly in packaged ACs.

2. The characteristics of HFC (R410A) refrigerants

a. Chemical characteristics

The chemical characteristics of R410A are similar to those of R22 in that both are chemically stable, non-flammable refrigerants with low toxicity.

However, just like R22, the specific gravity of R410A gas is heavier than that of air. Because of this, it can cause an oxygen deficiency if it leaks into a closed room since it collects in the lower area of the room. It also generates toxic gas when it is directly exposed to a flame, so it must be used in a well ventilated environment where it will not collect.

	R410A	R22
Composition (wt%)	R32/R125 (50/50)	R22 (100)
Boiling point (°C)	-51.4	-40.8
Vaporizing pressure (25°C)	1.56 Mpa (15.9 kgf/cm ²)	0.94 Mpa (9.6 kgf/cm ²)
Saturated vapor density	64.0 kg/m ³	44.4 kg/m ³
Flammability	Non-flammable	Non-flammable
Ozone-destroying point (ODP)	0	0.055
Global-warming point (GWP)	1730	1700

Table 1 Physical comparison of R410A and R22

b. Compositional change (pseudo-azeotropic characteristics)

R410A is a pseudo-azeotropic mixture comprising the two components R32 and R125. Multi-component refrigerants with these chemical characteristics exhibit little compositional change even from phase changes due to vaporization (or condensation), which means that there is little change in the circulating refrigerant composition even when the refrigerant leaks from the gaseous section of the piping.

Accordingly, R410A can be handled in almost the same manner as the single-component refrigerant R22. However, when charging, because there is a slight change in composition between the gas phase and the liquid phase inside a cylinder or other container, charging should basically begin with the liquid side.

c. Pressure characteristics

As seen in Table 2, the gas pressure of R410A is approximately 1.6 times as high as that of R22 at the same refrigerant temperature, which means that special R410A tools and materials with high-pressure specifications must be used for all refrigerant piping work and servicing.

Refrigerant Temperature (°C)	R410A	R22
-20	0.30	0.14
0	0.70	0.40
20	1.35	0.81
40	2.32	1.43
60	3.73	2.33
65	4.15	2.60

Table 2 Comparison of R410A and R22 saturated vapor density			
Linit MDa			

d. R410A refrigerating machine oil

Conventionally, mineral oil or a synthetic oil such as alkylbenzene has been used for R22 refrigerating machine oil. Because of the poor compatibility between R410A and conventional oils like mineral oil, however, there is a tendency for the refrigerating machine oil to collect in the refrigerating cycle. For this reason, polyester and other synthetic oils which have a high compatibility with R410A are used as refrigerating machine oil.

Because of the high hygroscopic property of synthetic oil, more care must be taken in its handling than was necessary with conventional refrigerating machine oils. Also, these synthetic oils will degrade if mixed with mineral oil or alkylbenzene, causing clogging in capillary tubes or compressor malfunction. Do not mix them under any circumstances.

11.1.2. Safety measures when installing/servicing refrigerant piping

Cause the gas pressure of R410A is approximately 1.6 times as high as that of R22, a mistake in installation or servicing could result in a major accident. It is essential that you use R410A tools and materials, and that you observe the following precautions to ensure safety.

- 1. Do not use any refrigerant other than R410A in ACs that have been used with R410A.
- 2. If any refrigerant gas leaks while you are working, ventilate the room. Toxic gas may be generated if refrigerant gas is exposed to a direct flame.
- 3. When installing or transferring an AC, do not allow any air or substance other than R410A to mix into the refrigeration cycle. If it does, the pressure in the refrigeration cycle can become abnormally high, possibly causing an explosion and/or injury.
- 4. After finishing the installation, check to make sure there is no refrigerant gas leaking.
- 5. When installing or transferring an AC, follow the instructions in the installation instructions carefully. Incorrect installation can result in an abnormal refrigeration cycle or water leakage, electric shock, fire, etc.
- 6. Do not perform any alterations on the AC unit under any circumstances. Have all repair work done by a specialist. Incorrect repairs can result in a water leakage, electric shock, fire, etc.

11.2. Tools for installing/servicing refrigerant piping

11.2.1. Necessary tools

In order to prevent an R410A AC from mistakenly being charged with any other refrigerant, the diameter of the 3-way valve service port on the outdoor unit has been changed. Also, to increase its ability to withstand pressure, the opposing dimensions have been changed for the refrigerant pipe flaring size and flare nut. Accordingly, when installing or servicing refrigerant piping, you must have both the R410A and ordinary tools listed below.

Type of work	Ordinary tools	R410A tools
Flaring	Flaring tool (clutch type), pipe cutter, reamer	Copper pipe gauge for clearance Adjustment, flaring tool (clutch type)*1)
Bending, connecting pipes	Torque wrench (nominal diameter 1/4, 3/8,1/2). Fixed spanner (opposing sides 12 mm, 17 mm, 19 mm). Adjustable wrench, Spring bender	
Air purging	Vacuum pump. Hexagonal wrench (opposing sides 4 mm)	Manifold gauge, charging hose, vacuum pump adaptor
Gas leak inspection	Gas leak inspection fluid or soapy water	Electric gas leak detector for HFC refrigerant*2)

Table 3 Tools for installation, transferring or replacement

*1) You can use the conventional (R22) flaring tool. If you need to buy a new tool, buy the R410A type.

*2) Use when it is necessary to detect small gas leaks.

For other installation work, you should have the usual tools, such as screwdrivers (+,-), a metal-cutting saw, an electrical drill, a hole core drill (65 or 70 dia.), a tape measure, a level, a thermometer, a clamp meter, an insulation tester, a voltmeter, etc.

Table 4 Tools for serving					
Туре	of work	Ordinary tools	R410A tools		
Refrigerant charging			Electronic scale for refrigerant charging. Refrigerant cylinder. Charging orifice and packing for refrigerant cylinder		
Brazing (Replacing part*1)	refrigerating cy	He Nitrogen blow set (be sure to use nitrogen blowing for all brazing), and brazing machine			

*1) Always replace the dryer of the outdoor unit at the same time. The replacement dryer is wrapped in a vacuum pack. Replace it last among the refrigerating cycle parts. Start brazing as soon as you have opened the vacuum pack, and begin the vacuuming operation within 2 hours.

11.2.2. R410A tools

1. Copper tube gauge for clearance adjustment

- (used when flaring with the conventional flaring tool (clutch type))
 - This gauge makes it easy to set the clearance for the copper tube to 1.0-1.5 mm from the clamp bar of the flaring tool.


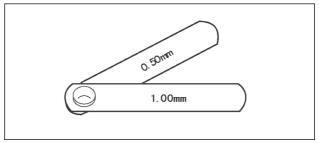


Fig. 1 Copper tube gauge for clearance adjustment

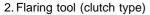

• In the R410A flaring tool, the receiving hole for the clamp bar is enlarged so the clearance from the clamp bar can be set to 0-0.5 mm, and the spring inside the tool is strengthened to increase the strength of the pipe-expanding torque. This flaring tools can also be used with R22 piping, so we recommend that you select it if you are buying a new flaring tool.

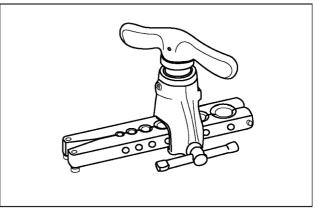


Fig. 2 Flaring tool (clutch type)

3. Torque wrenches

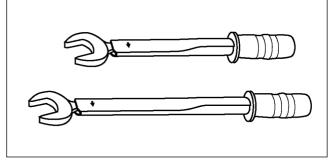


Fig. 3 Torque wrenches

Table 5					
	Conventional wrenches	R410A wrenches			
For 1/4 (opposite side x torque)	17 mm x 18 N.m (180 kgf.cm)	17 mm x 18 N.m (180 kgf.cm)			
For 3/8 (opposite side x torque)	22 mm x 42 N.m (420 kgf.cm)	22 mm x 42 N.m (420 kgf.cm)			
For 1/2 (opposite side x torque)	24 mm x 55 N.m (550 kgf.cm)	26 mm x 55 N.m (550 kgf.cm)			
For 5/8 (opposite side x torque)	27 mm x 65 N.m (650 kgf.cm)	29 mm x 65 N.m (650 kgf.cm)			

4. Manifold gauge

• Because the pressure is higher for the R410A type, the conventional type cannot be used.

Table 6 Difference between R410A and conventional high/low-pressure gauges

	Conventional gauges	R410A gauges	
High-pressure gauge (red)	-76 cmHg - 35 kgf/cm ³	-0.1 - 5.3 Mpa -76 cmHg - 53 kgf/cm ³	
Low-pressure gauge (blue)	-76 cmHg - 17 kgf/cm ³	-0.1 - 3.8 Mpa -76 cmHg - 38 kgf/cm ³	

• The shape of the manifold ports has been changed to prevent the possibility of mistakenly charging with another type of refrigerant.

Table 7 Difference between R410A and conventional manifold port size	<u>)</u>
--	----------

	Conventional gauges	R410A gauges
Port size	7/16 UNF 20 threads	1/2 UNF 20 threads

5. Charging hose

• The pressure resistance of the charging hose has been raised to match the higher pressure of R410A. The hose material has also been changed to suit HFC use, and the size of the fitting has been changed to match the manifold ports.

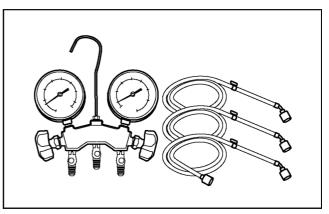


Fig. 4 Manifold gauge charging hose

Table 8 Difference betwe	en R410A and conventional	charging hoses

		Conventional hoses	R410A hoses
Pressure	Working pressure	3.4 MPa (35 kgf/cm ³)	5.1 MPa (52 kgf/cm ³)
resistance	Bursting pressure	17.2 MPa (175 kgf/cm ³)	27.4 MPa (280 kgf/cm ³)
Material		NBR rubber	HNBR rubber Nylon coating inside

6. Vacuum pump adaptor

• When using a vacuum pump for R410A, it is necessary to install an electromagnetic valve to prevent the vacuum pump oil from flowing back into the charging hose. The vacuum pump adaptor is installed for that purpose. If the vacuum pump oil (mineral oil) becomes mixed with R410A, it will damage the unit.

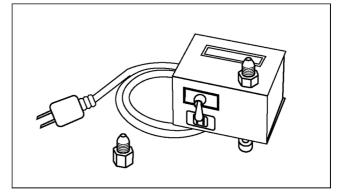


Fig. 5 Vacuum pump adaptor

7. Electric gas leak detector for HFC refrigerant

- The leak detector and halide torch that were used with CFC and HCFC cannot be used with R410A (because there is no chlorine in the refrigerant).
- The present R134a leak detector can be used, but the detection sensitivity will be lower (setting the sensitivity for R134a at 1, the level for R410A will drop to 0.6).
- For detecting small amounts of gas leakage, use the electric gas leak detector for HFC refrigerant. (Detection sensitivity with R410A is about 23 g/year).

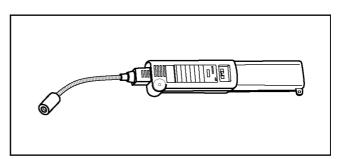


Fig. 6 Electric gas leak detector for HFC refrigerant

- 8. Electronic scale for refrigerant charging
 - Because of the high pressure and fast vaporizing speed of R410A, the refrigerant cannot be held in a liquid phase inside the charging cylinder when charging is done using the charging cylinder method, causing bubbles to form in the measurement scale glass and making it difficult to see the reading. (Naturally, the conventional R22 charging cylinder cannot be used because of the differences in the pressure resistance, scale gradation, connecting port size, etc.)
 - The electronic scale has been strengthened by using a structure in which the weight detector for the refrigerant cylinder is held by four supports. It is also equipped with two connection ports, one for R22 (7/16 UNF, 20 threads) and one for R410A (1/2 UNF, 20 threads), so it can also be used for conventional refrigerant charging.
 - There are two types of electronic scales, one for 10-kg cylinders and one for 20-kg cylinders. (The 10-kg cylinder is recommended.)

Refrigerant charging is done manually by opening and closing the valve.

- 9. Refrigerant cylinders
 - The R410A cylinders are labeled with the refrigerant name, and the coating color of the cylinder protector is pink, which is the color stipulated by ARI of the U.S.
 - Cylinders equipped with a siphon tube are available to allow the cylinder to stand upright for liquid refrigerant charging.

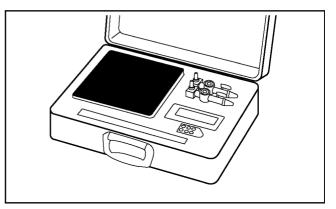


Fig. 7 Electronic scale for refrigerant charging

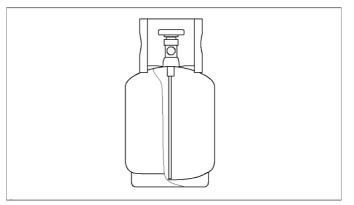


Fig. 8 Refrigerant cylinders

- 10. Charging orifice and packing for refrigerant cylinders
 - The charging orifice must match the size of the charging hose fitting (1/2 UNF, 20 threads).
 - The packing must also be made of an HFC-resistant material.

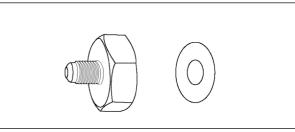


Fig. 9 Charging orifice and packing

11.2.3. R410A tools which are usable for R22 models

Table 9 R410A tools which are usable for R22 models

	R410A tools	Usable for R22 models
(1)	Copper tube gauge for clearance adjustment	ОК
(2)	Flaring tool (clutch type)	ОК
(3)	Manifold gauge	NG
(4)	Charging hose	NG
(5)	Vacuum pump adaptor	ОК
(6)	Electric gas leak detector for HFC refrigerant	NG
(7)	Electronic scale for refrigerant charging	OK
(8)	Refrigerant cylinder	NG
(9)	Charging orifice and packing for refrigerant cylinder	NG

11.3. Refrigerant piping work

11.3.1. Piping materials

It is recommended that you use copper and copper alloy jointless pipes with a maximum oil adherence of 40 mg/10m. Do not use pipes that are crushed, deformed, or discolored (especially the inside surface). If these inferior pipes are used, impurities may clog the expansion values or capillaries.

Because the pressure of ACs using R410A is higher than those using R22, it is essential that you select materials that are appropriate for these standards.

The thickness of the copper tubing used for R410A is shown in Table 10. Please be aware that tubing with a thickness of only 0.7 mm is also available on the market, but this should never be used.

Soft	pipe	Thicknes	ss (mm)
Nominal diameter	Outside diameter (mm)	R410A	(Reference) R22
1/4	6.35	0.80	0.80
3/8	9.52	0.80	0.80
1/2	12.7	0.80	0.80
5/8	15.88	1.00	1.00

Table 10 Copper tube thickness (mm)

11.3.2. Processing and connecting piping materials

When working with refrigerant piping, the following points must be carefully observed: no moisture or dust must be allowed to enter the piping, and there must be no refrigerant leaks.

1. Procedure and precautions for flaring work

- a. Cut the pipe
- Use a pipe cutter, and cut slowly so the pipe will not be deformed.
- b. Remove burrs and clean shavings from the cut surface If the shape of the pipe end is poor after removing burrs, or if shavings adhere to the flared area, it may lead to refrigerant leaks.

To prevent this, turn the cut surface downward and remove burrs, then clean the surface, carefully.

- c. Insert the flare nut (be sure to use the same nut that is used on the AC unit)
- d. Flaring

Check the clamp bar and the cleanliness of the copper pipe.

Be sure to use the clamp bar to do the flaring with accuracy. Use either an R410A flaring tool, or a conventional flaring tool. Flaring tools come in different sizes, so be sure to check the size before using. When using a conventional flaring tool, use the copper pipe gauge for clearance adjustment, etc., to ensure the correct A dimension (see Fig. 10)

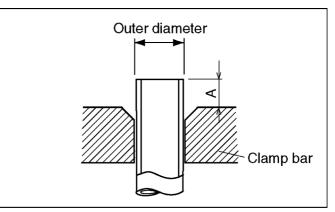


Fig. 10 Flaring dimensions

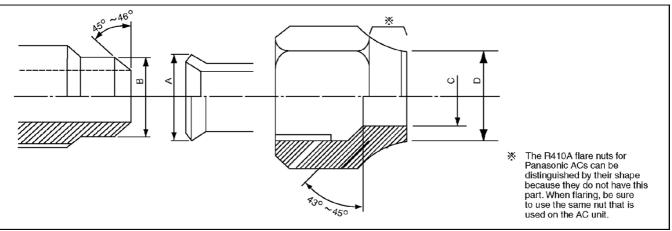


Fig. 11 Relation between the flare nut structure and flaring tool end

Table 11 R410A flaring dimensions							
Nominal	Outside	Wall thickness	A (mm)				
diameter	diameter	(mm)	(mm) R410A flaring C		al flaring tool		
	(mm)		tool, clutch type	Clutch type	Wing-nut type		
1/4	6.35	0.8	0 - 0.5	1.0 - 1.5	1.5 - 2.0		
3/8	9.52	0.8	0 - 0.5	1.0 - 1.5	1.5 - 2.0		
1/2	12.70	0.8	0 - 0.5	1.0 - 1.5	2.0 - 2.5		
5/8	15.88	1.0	0 - 0.5	1.0 - 1.5	2.0 - 2.5		

Table 12 R22 flaring dimensions							
Nominal	Outside	Wall thickness	A (mm)				
diameter	diameter	(mm)	R22 flaring Conventional flaring tool				
	(mm)		tool, clutch type	Clutch type	Wing-nut type		
1/4	6.35	0.8	0 - 0.5	0.5 - 1.0	1.0 - 1.5		
3/8	9.52	0.8	0 - 0.5	0.5 - 1.0	1.0 - 1.5		
1/2	12.70	0.8	0 - 0.5	0.5 - 1.0	1.5 - 2.0		

Table 13 R410A flare and flare nut dimensions Unit: mm							
Nominal	Outside	Wall thickness	A +0, -0.4	В	С	D	Flare nut
diameter	diameter (mm)	(mm)		dimension	dimension	dimension	width
1/4	6.35	0.8	9.1	9.2	6.5	13	17
3/8	9.52	0.8	13.2	13.5	9.7	20	22
1/2	12.70	0.8	16.6	16.0	12.9	23	26
5/8	15.88	1.0	19.7	19.0	16.0	25	29

Table	14 R22	flare an	d flare	nut	dimensions	Unit: mm

Nominal diameter	Outside diameter (mm)	Wall thickness (mm)	A +0, -0.4	B dimension	C dimension	D dimension	Flare nut width
1/4	6.35	0.8	9.0	9.2	6.5	13	17
3/8	9.52	0.8	13.0	13.5	9.7	20	22
1/2	12.70	0.8	16.2	16.0	12.9	20	24

2. Procedure and precautions for flare connection

a. Check to make sure there is no scratches, dust, etc., on the flare and union.

b. Align the flared surface with the axial center of the union.

c. Use a torque wrench, and tighten to the specified torque. The tightening torque for R410A is the same as the conventional torque value for R22. Be careful, because if the torque is too weak, it may lead to a gas leak. If it is too strong, it may split the flare nut or make it impossible to remove the flare nut.

Nominal	Outside	Tightening torque	Torque wrench tightening torque
diameter 1/4	diameter (mm) 6.35	N.m (kgf.cm) 14 - 18 (140 - 180)	N.m (kgf.cm) 18 (180)
3/8	9.52	33 - 42 (330 -420)	42 (420)
1/2	12.70	55 (550)	55 (550)
5/8	15.88	65 (650)	65 (650)

Table 15 R410A tightening torque

11.3.3. Storing and managing piping materials

1. Types of piping and their storage

The following is a general classification of the refrigerant pipe materials used for ACs.

	Common names
Refrigerant pipe materials	Pipes with heat insulating covers —— Unflared: Sheathed copper pipes
	Pipes without heat insulating Unflared: Copper pipes cover (copper pipes)

Because the gas pressure of R410A is approximately 1.6 times as high as that of R22, copper pipes with the thickness shown in Table 10, and with minimal impurities must be used. Care must also be taken during storage to ensure that pipes are not crushed, deformed, or scratched, and that no dust, moisture or other substance enters the pipe interior. When storing sheathed copper pipes or plain copper pipes, seal the openings by pinching or taping them securely.

2. Makings and management

- a. Sheathed copper pipes and copper-element pipes
 - When using these pipes, check to make sure that they are the stipulated thickness. For flare nuts, be sure to used the same nut that is used on the AC unit.

b. Copper pipes

Use only copper pipes with the thickness given in table 10, and with minimal impurities. Because the surface of the pipe is exposed, you should take special care, and also take measures such as marking the pipes to make sure they are easily distinguished from other piping materials, to prevent mistaken use.

3. Precautions during refrigerant piping work

Take the following precautions on-site when connecting pipes. (Keep in mind that the need to control the entry of moisture and dust is even more important that in conventional piping).

- a. Keep the open ends of all pipes sealed until connection with AC equipment is complete.
- b. Take special care when doing piping work on rainy days. The entering of moisture will degrade the refrigerating machine oil, and lead to malfunctions in the equipment.
- c. Complete all pipe connections in as short a time as possible. If the pipe must be left standing for a long time after removing the seal, it must be thoroughly purged with nitrogen, or dried with a vacuum pump.

11.4. Installation, transferring, servicing

11.4.1. Inspecting gas leaks with a vacuum pump for new installations (Using new refrigerant piping)

1. From the viewpoint of protecting the global environment, please do not release refrigerant into the atmosphere.

- a. Connect the projecting side (pin-pushing side) of the charging hose for the manifold gauge to the service port of the 3-way valve. (1)
- b. Fully open the handle Lo of the manifold gauge and run the vacuum pump. (2) (If the needle of the low-pressure gauge instantly reaches vacuum, re-check step a).)
- c. Continue the vacuum process for at least 15 minutes, then check to make sure the low-pressure gauge has reached -0.1 MPa (-76 cmHg). Once the vacuum process has finished, fully close the handle Lo of the manifold gauge and stop the vacuum pump operation, then remove the charging hose that is connected to the vacuum pump adaptor. (Leave the unit in that condition for 1-2 minutes, and make sure that the needle of the manifold gauge does not return.) (2) and (3)
- d. Turn the valve stem of the 2-way valve 90° counter-clockwise to open it, then, after 10 seconds, close it and inspect for a gas leak (4)
- e. Remove the charging hose from the 3-way valve service port, then open both the 2-way valve and 3-way valve. (1) (4) (Turn the valve stem in the counter-clockwise direction until it gently makes contact. Do not turn it forcefully).
- f. Tighten the service port cap with a torque wrench (18 N.m (1.8 kgf.m)). (5) Then tighten the 2-way valve and 3-way valve caps with a torque wrench (42 N.m (4.2 kgf.m)) or (55 N.m (5.5 kgf.m)). (6)
- g. After attaching each of the caps, inspect for a gas leak around the cap area. (5) (6)

Precautions

- Be sure to read the instructions for the vacuum pump, vacuum pump adaptor and manifold gauge prior to use, and follow the instructions carefully.
- Make sure that the vacuum pump is filled with oil up to the designated line on the oil gauge.
- The gas pressure back flow prevention valve on the charging hose is generally open during use. When you are removing the charging hose from the service port, it will come off more easily if you close this valve.

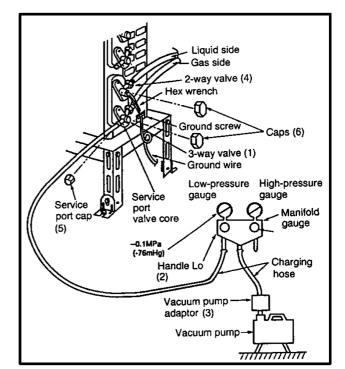


Fig. 12 Vacuum pump air purging configuration

11.4.2. Transferring (Using new refrigerant piping)

1. Removing the unit

- a. Collecting the refrigerant into the outdoor unit by pumping down
 - The refrigerant can be collected into the outdoor unit (pumping down) by pressing the TEST RUN button, even when the temperature of the room is low.
 - Check to make sure that the valve stems of the 2-way valve and 3-way valve have been opened by turning them counterclockwise. (Remove the valve stem caps and check to see that the valve stems are fully opened position. Always use a hex wrench (with 4-mm opposing sides) to operate the valve stems.)
 - Press the TEST RUN button on the indoor unit, and allow preliminary operation for 5-6 minutes. (TEST RUN mode)
 - After stopping the operation, let the unit sit for about 3 minutes, then close the 2-way valve by turning the valve stem in the clockwise direction.
 - Press the TEST RUN button on the indoor unit again, and after 2-3 minutes of operation, turn the valve stem of the 3way valve quickly in the clockwise direction to close it, then stop the operation.
 - Tighten the caps of the 2-way valve and 3-way valve to the stipulated torque.
 - Remove the connection pipes (liquid side and gas side).

b. Removing the indoor and outdoor units

- Disconnect the pipes and connecting electric cables from between the indoor and outdoor units.
- Put capped flare nuts onto all of the pipe connections of the indoor and outdoor units, to make sure no dust or other foreign matter enters.
- Remove the indoor and outdoor units.
- 2. Installing the unit

Install the unit using new refrigerant piping. Follow the instructions in section 4.1 to evacuate the pipes connecting the indoor and outdoor units, and the pipes of the indoor unit, and check for gas leaks.

11.4.3. AC units replacement (Using existing refrigerant piping)

When replacing an R410A AC unit with another R410A AC unit, you should re-flare the refrigerant piping. Even though the replacement AC unit uses the R410A, problems occur when, for example, either the AC unit maker or the refrigerating machine oil is different.

When replacing an R22 AC unit with an R410A AC unit, the following checks and cleaning procedures are necessary but are difficult to do because of the chemical characteristics of the refrigerating machine oil (as described in items c) and d) of section **About R410A Refrigerant**). In this case, you should use new refrigerant piping rather than the existing piping.

1. Piping check

Because of the different pressure characteristics of R22 and R410A, the design pressure for the equipment is 1.6 times different. The wall thickness of the piping must comply with that shown in Table 10, but this is not easy to check. Also, even if the thickness is correct, there may be flattened or bent portions midway through the piping due to sharp curves. Buried sections of the piping also cannot be checked.

2. Pipe cleaning

A large quantity of refrigerating machine oil (mineral oil) adheres to existing pipes due to the refrigeration cycle circulation. If the pipes are used just as they are for the R410A cycle, the capacity will be lowered due to the incompatibility of this oil with the R410A, or irregularities may occur in the refrigeration cycle. For this reason, the piping must be thoroughly cleaned, but this is difficult with the present technology.

11.4.4. Refrigerant compatibility (Using R410A refrigerant in R22 ACs and vice versa)

Do not operate an existing R22 AC with the new R410A refrigerant. Doing so would result in improper functioning of the equipment or malfunction, and might lead to a major accident such as an explosion in the refrigeration cycle. Similarly, do not operate an R410A AC with R22 refrigerant. The chemical reaction between the refrigerating machine oil used in R410A ACs and the chlorine that is contained in R22 would cause the refrigerating machine oil to degrade and lead to malfunction.

11.4.5. Recharging refrigerant during servicing

When recharging is necessary, insert the specified amount of new refrigerant in accordance with the following procedure.

- 1. Connect the charging hose to the service port of the outdoor unit.
- 2. Connect the charging hose to the vacuum pump adaptor. At this time, fully open the 2-way valve and 3-way valve.

- 3. Fully open the handle Lo of the manifold gauge, turn on the power of the vacuum pump and continue the vacuum process for at least one hour.
- 4. Confirm that the low pressure gauge shows a reading of -0.1 MPa (-76 cmHg), then fully close the handle Lo, and turn off the vacuum pump. Wait for 1-2 minutes, then check to make sure that the needle of the Low pressure gauge has not returned. See Fig. 13 for the remaining steps of this procedure.
- 5. Set the refrigerant cylinder onto the electronic scale, then connect the hose the cylinder and to the connection port for the electronic scale. (1)(2)

Precaution:

Be sure to set up the cylinder for liquid charging. If you use a cylinder equipped with a siphon tube, you can charge the liquid without having to turn the cylinder around

- 6. Remove the charging hose of the manifold gauge from the vacuum pump adaptor, and connect it to the connection port of the electronic scale. (2)(3)
- 7. Open the valve of the refrigerant cylinder, then open the charging valve slightly and close it. Next, press the check valve of the manifold gauge and purge the air. (2)(4) (Watch the liquid refrigerant closely at this point.)
- 8. After adjusting the electronic scale to zero, open the charging valve, then open the valve Lo of the manifold gauge and charge with the liquid refrigerant. (2)(5) (Be sure to read the operating instructions for the electronic scale.)
- 9. If you cannot charge the stipulated amount, operate the unit in the cooling mode while charging a little of the liquid at a time (about 150 g/time as a guideline). If the charging amount is insufficient from one operation, wait about one minute, then use the same procedure to do the liquid charging again.

Precaution:

Never use the gas side to allow a larger amount of liquid refrigerant to be charged while operating the unit.

- 10. Close the charging valve, and after charging the liquid refrigerant inside the charging hose, fully close the valve Lo of the manifold gauge, and stop the operation of the unit. (2)(5)
- 11. Quickly remove the charging hose from the service port. (6) If you stop midway through, the refrigerant that is in the cycle will be discharged.
- 12. After putting on the caps for the service port and operating valve, inspect around the caps for a gas leak. (6)(7)

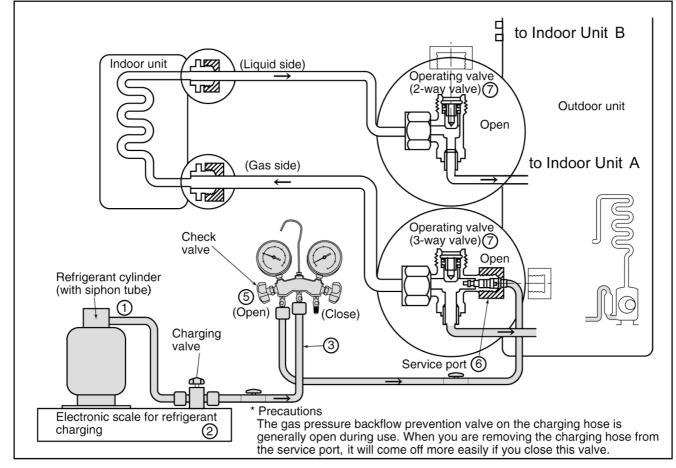


Fig. 13 Re-charging refrigerant

11.4.6. Brazing

As brazing requires sophisticated techniques and experiences, it must be performed by a qualified person. In order to prevent the oxide film from occurring in the pipe interior during brazing, it is effective to proceed with brazing while letting dry nitrogen gas (N_2) flow.

<Brazing Method for Preventing Oxidation>

- 1. Attach a reducing valve to the nitrogen gas cylinder.
- 2. Apply a seal onto the clearance between the piping and inserted pipe for the nitrogen gas in order to prevent the nitrogen gas from flowing backward.
- 3. When the nitrogen gas is flowing, be sure to keep the piping end open.
- 4. Adjust the flow rate of nitrogen gas so that it is lower than 0.05 m³/h, or 0.02 MPa (0.2 kgf/cm²) by means of the reducing valve.
- 5. After taking the steps above, keep the nitrogen gas flowing until the piping cools down to a certain extent (i.e. temperature at which pipes are touchable with finger).
- 6. Completely remove the flux after brazing.

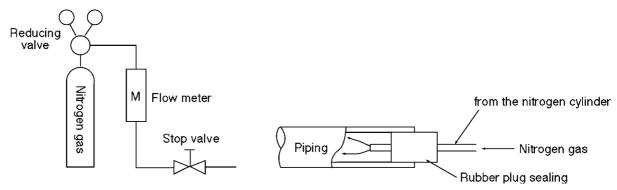


Fig. 14 Prevention of Oxidation during Brazing

Cautions during brazing

- 1. General Cautions
 - a. The brazing strength should be high as required.
 - b. After operation, airtightness should be kept under pressurized condition.
 - c. During brazing do not allow component materials to become damaged due to overheating.
 - d. The refrigerant pipe work should not become blocked with scale or flux.
 - e. The brazed part should not restrict the flow in the refrigerant circuit.
 - f. No corrosion should occur from the brazed part.
- 2. Prevention of Overheating

Due to heating, the interior and exterior surfaces of treated metal may oxidize. Especially, when the interior of the refrigerant circuit oxidizes due to overheating, scale occurs and stays in the circuit as dust, thus exerting a fatally adverse effect. So, make brazing at adequate brazing temperature and with minimum of heating area.

3. Overheating Protection

In order to prevent components near the brazed part from overheating damage or quality deterioration due to flame or heat, take adequate steps for protection such as (1) by shielding with a metal plate, (2) by using a wet cloth, and (3) by means of heat absorbent.

4. Movement during Brazing

Eliminate all vibration during brazing to protect brazed joints from cracking and breakage.

5. Oxidation Preventative

In order to improve the brazing efficiency, various types of antioxidant are available on the market. However, the constituents of these are widely varied, and some are anticipated to corrode the piping materials, or adversely affect HFC refrigerant, lubricating oil, etc. Exercise care when using an oxidation preventive.

11.4.7. Servicing tips

The drier must also be replaced whenever replacing the refrigerant cycle parts. Replacing the refrigerant cycle parts first before replacing the drier. The drier is supplied in a vacuum pack. Perform brazing immediately after opening the vacuum pack, and then start the vacuum within two hours. In addition, the drier also needs to be replaced when the refrigerant has leaked completely. (Applicable for drier models only)

12 TROUBLE SHOOTING GUIDE


If test operation does not proceed correctly :

Carry out test operation after approximately 12 hours have passed since the power was turned on (crank case heater is energized). If operation started by using the remote control within 1 minute of turning on the power, the outdoor unit setting will not be made correctly and correct operation will not be possible.

If the following symptoms occur after turning on the power, check the wiring connections once more.

12.1. For standard installation

System example

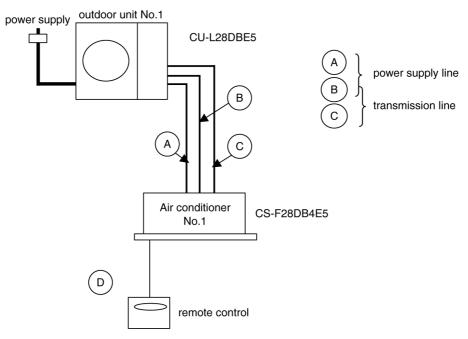

1. The main power is turned on while the indoor-outdoor transmission wires are not connected. (open circuit at A: power line)

Symptom

Indoor unit : no power supply

Remote control unit : no power supply

Outdoor unit : LED302, 304, 306 on P.C.B flashes

2. The main power is turned on while the indoor-outdoor transmission wires are not connected.

(open circuit at B: power/transmission line)

Symptom

Indoor unit : no power supply

Remote control unit : no power supply

Outdoor unit : LED302, 304, 306 on P.C.B flashes

3. The main power is turned on while the indoor-outdoor transmission wires are not connected.

(open circuit at C: transmission line)

Symptom

Remote control unit : "check" flashes


Error code : F27-01 (indoor/outdoor transmission error)

Indoor unit : LED1 on P.C.B flashes

Outdoor unit : LED302, 304, 306 on P.C.B flashes

(When remote control display shows "power supply") Clock setting, and no timer setting

(When remote control display shows "No power supply")

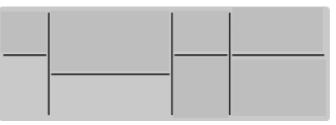

Remedy

- 1. Turn off the main power.
 - \downarrow
- 2. Connect the disconnected wire correctly.
- \downarrow
- 3. Turn on the main power.

 \downarrow

4. After 1 minute, start the operation using the remote control.

(indoor unit operation will start according to the remote control setting)


(outdoor unit operation will start after 3-5 minutes)

Note

The "check" display on the remote control and the flashing of LEDs on the P.C.B will not occur immediately. They will appear 3-6 minutes after the main power is turned on.

12.2. During twin operation

System example

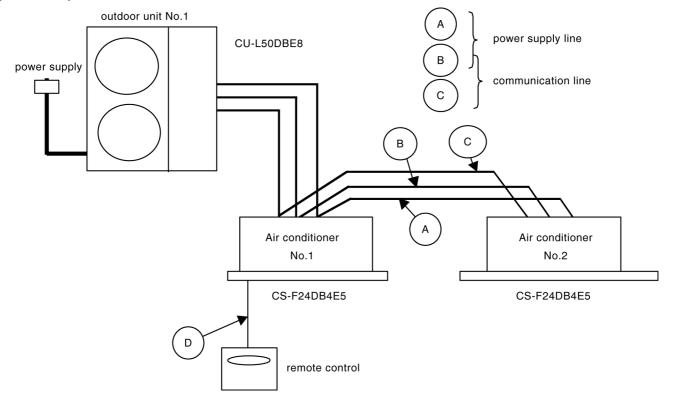

1. The main power is turned on while the transmission wires between the indoor units are not connected. (open circuit at section A, or B)

Symptom

Nothing abnormal appears on the indoor unit and remote control display due to no power supply.

Indoor unit no.2 : no power supply

Outdoor unit : LED303, 304, 306, 307 on P.C.B flashes (F27-01:indoor and outdoor disconnect error)

- 2. The main power is turned on while the transmission wires between the indoor units are not connected.
- (open circuit at section C) Symptom

Symptom

Remote control unit : "check" flashes

Error code : F30-01 (connected indoor capacity error)

Indoor unit : LED1 on P.C.B flashes

Outdoor unit : LED303, 304, 306, 307 on P.C.B flashes (F27-01:indoor and outdoor disconnect error)

- 3. The main power is turned on while the remote control connection wire is not connected.
- (open circuit at section D)

Symptom

Remote control unit : display of "no power supply"

Indoor unit : LED1 on P.C.B flashes

Outdoor unit : LED304, 306, 307 on P.C.B flashes

4. The main power is turned on and the connection wire is all ok.

If operation start in this condition, combination of the L50DBE8 outdoor unit and F24DB4E5 indoor unit will result in abnormal operation.

Symptom

Remote control unit :"check" flashes

Error code : F30-01 (connected indoor capacity error)

Indoor unit : LED1 on P.C.B flashes

Outdoor unit : LED307 on P.C.B flashes (connected indoor capacity error)


Remedy

- 1. Turn off the main power.
 - \downarrow
- 2. Connect the disconnected wire correctly.
 - \downarrow
- 3. Turn on the main power.
 - \downarrow
- 4. After 1 minute, start the operation using the remote control.

(indoor unit operation will start according to the remote control setting) (outdoor unit operation will start after 3-5 minutes)

12.3. During group control operation

System example

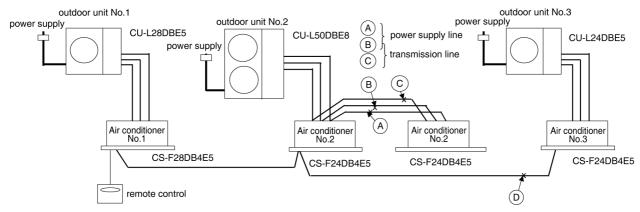

1. The main power is turned on while the transmission wires between the indoor units are not connected. (open circuit at section A, or B, or C)

Symptom

Operation of indoor unit No.1 and No.3 is possible.

However "check" flashes in the remote control display for 3-5 minutes after main power is turned on.

Remote control unit :"check" flashes Error code : F30-01 (indoor capacity error) Indoor unit : LED1 on P.C.B flashes Outdoor unit : LED307 on P.C.B flashes

2. The main power is turned on while the remote control connection wire is not connected.

(open circuit at section D)

Symptom

Nothing abnormal appears on the remote control display.

Operation of indoor unit No.1 and No.2 is possible.

However indoor unit No.3 cannot be operated.

Remedy


- 1. Turn off the main power.
- \downarrow
- 2. Connect the disconnected wire correctly.
 - \downarrow
- 3. Turn on the main power.

 \downarrow

4. After 1 minute, start the operation using the remote control. (indoor unit operation will start according to the remote control setting) (outdoor unit operation will start after 3-5 minutes)

12.4. Address setting for twin system

System example

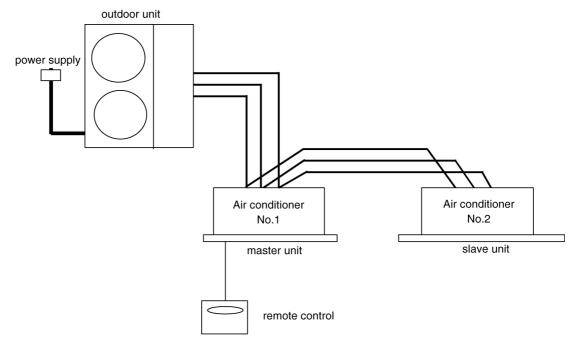


1. Automatic address setting (don't need to set dip-switch).

If the wiring connected properly as above example, the address is set automatically by the main power supply. An indoor unit which at first can establish the communication with its remote controller will be set as the master.


2. Manual address setting (by dip-switch DSW1 and 2).

When setting the address manually, set the dip-switch of the PC board of the indoor unit as follows; Example : this shows the address is "11".

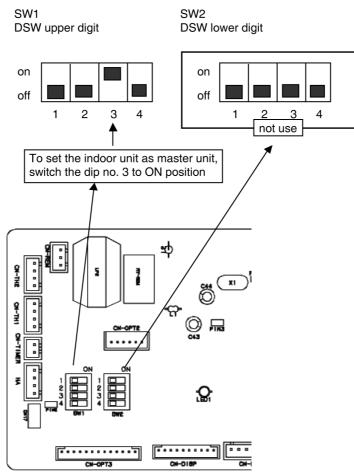

12.5. Address setting for group control system

System example

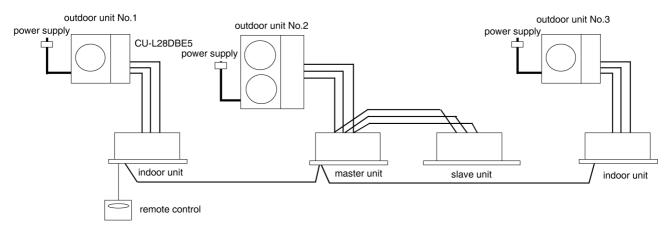


1. Automatic address setting (don't need to set dip-switch).

If the wiring connected properly as above example, the AC numbers are set automatically by the main power supply. An indoor unit with remote control will be set as the master.

2. Manual address setting (by dip-switch DSW1 and 2).

When setting the address manually, set the dip-switch of the PC board of the indoor unit as follows; Example : this shows the address is "11".

SW1 DSW upper digit

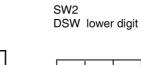


L

L

L


on | off _

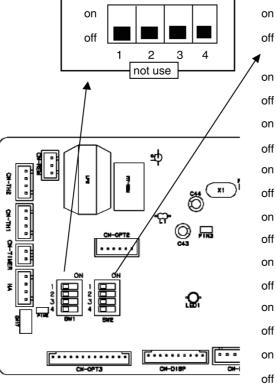

				Address "0"
1	2	3	4	
				Address "1"
				Address "2"
				Address "3"
				Address "4"
				Address "5"
				Address "6"
				Address "7"
				Address "8"
				Address "9"
				Address "10"
				Address "11"
				Address "12"
				Address "13"
				Address "14"
				Address "15"

12.6. Wiring mistake prevention

Improved quality of installation work through adoption of an "connection error prevention" circuit which prevents wiring mistakes.

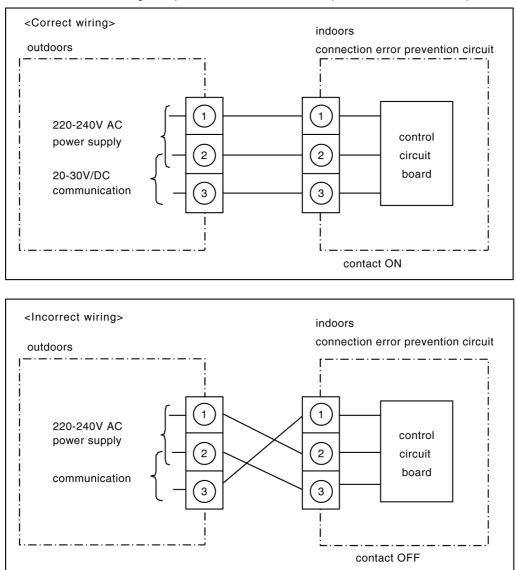

Connection error with communication wire and power supply wire cause large scale working losses and affect reliability.

If a circuit board with a connection error prevention circuit is used, the relay will not operate if the wires have been connected incorrectly, so that current will not flow to the control circuit board.

This is designed principally to compensate human error during installation.

Prevention of connection errors

These units are equipped with connection error prevention circuits. If the units do not operate, it is possible that the connection error prevention circuits have been operated. In such cases, check that the wires (1, (2) or (3) should be connected correctly.)

Note

Wait one minute after turning on the outdoor unit power supply before operating the remote control. If nothing at all appears in the remote control LCD, check the power supply for the outdoor unit. Refer to TROUBLESHOOTING chapter.

Note


Do not connect U-NET transmission wires to terminal ①, ② or ③ of the indoor and outdoor units. Do not connect U-NET transmission wires to terminal A, B of the indoor and outdoor units.

12.7. Test operation and self diagnosis

12.7.1. Test operation


- 1. Always use a properly-insulated tool to operate the switch on the circuit board.
- (Do not use your finger or any metallic object.)
- 2. Never turn on the power supply unit until all installation work has been completed.
- 3. Turn on the circuit breaker before test operation extends past 12 hours.
- (The crank case heater will be energized, which will warm the compressor to prevent the liquid compression.)
- 4. Check that the voltage is -10% of the rated voltage (198V) or higher when starting the unit.
- The unit will not operate if the voltage is less than -10% of the rated voltage (198V).
- 5. If test operation continues for more than 30 minutes, test operation finishes and shifts to normal operation.
- 6. Test operation mode can be selected both cooling or heating mode.

12.7.2. Test operation from the outdoor unit

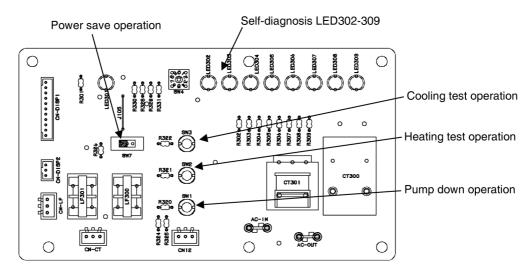

During emergency operation or when test operation is carried out, the LED on the P.C.B. will turn on.

12.7.3. Test operation using the wired remote control

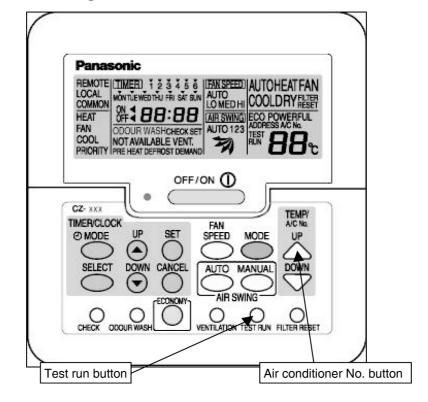


- 1. Check that "COOL" or "HEAT" is displayed on the LCD, and then press the OFF/ON button to start test operation.
- 2. After pressing the OFF/ON button, press the TEST RUN button within 1 minute.
- 3. Then, the pipe temperature (gas pipe) will be displayed in the LCD of the remote control.
- 4. Check that the pipe temperature in the display of the remote control starts dropping after operation has been continuing for some time.

12.7.4. Self-diagnosis function

The wired remote control display and the self-diagnosis LEDs (green) on the outdoor unit printed circuit board indicate where the abnormality has occurred.

Recalling the error display.

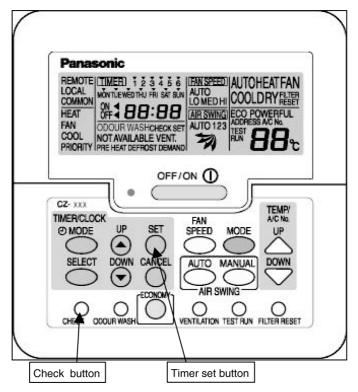

The air conditioner No."01" appears during normal installation and use.

When using group control, a different number may appear.

The air conditioner No. can be displayed by pressing the air conditioner No. button.

(=same as Temp. up and down button)


When an abnormality occurs at this unit, "check" flashes in the display.

• Press the check button while the display is flashing.



The timer display will change and an error code from F15 to F44 will appear in place of time. (the temperature setting display will also change to show the air conditioner. No.)

• Press the timer set button while the error is displayed.

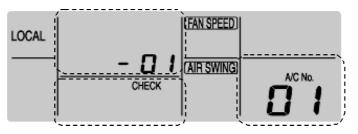

The F15-44 display will change to the detail display.


• How to display the past error message

If the CHECK display on the wired remote control is not flashing, press the CHECK button continuously for 5 seconds or more to display the past problem details.

12.8. Emergency operation

When using the wireless remote control and losing the remote controller, emergency operation can be operated by pressing the auto button in the receiver.

• Press the auto button continuously within 5 seconds

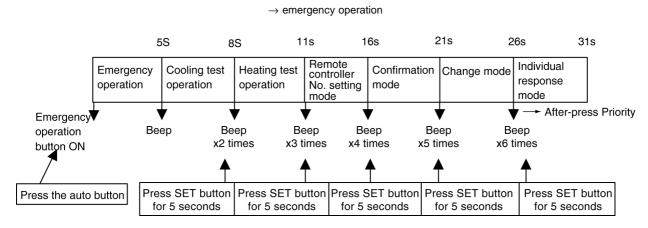

If there is an abnormality in the temperature thermistor (disconnect or shorted), indoor unit cannot be operated. If abnormality detected in the indoor or outdoor unit, turn off the main power supply and find the cause. Check the resistance of each thermistor of both indoor and outdoor units by refering the resistance table as follows.

Thermistor resistance table

		Resistance value (kΩ)±5%										
Temperature	Ind	loor	Out	door								
	Room temperature thermistor	Pipe temperature thermistor	Outdoor temperature thermistor	Discharge temperature thermistor	Suction temperature thermistor	Pipe temperature thermistor	Defrost temperature thermistor					
-20°C	158.5	211.3	158.5	528.3	47.9	47.9	47.9					
-10	87.5	116.7	87.5	291.8	27.1	27.1	27.1					
-5	66.1	88.2	66.1	220.5	20.7	20.7	20.7					
0	50.5	67.3	50.5	168.3	15.9	15.9	15.9					
5	38.9	51.9	38.9	129.8	12.4	12.4	12.4					
10	30.3	40.4	30.3	100.9	9.8	9.8	9.8					
15	23.8	31.7	23.8	79.2	7.7	7.7	7.7					
20	18.8	25.1	18.8	62.7	6.2	6.2	6.2					
25	15	20	15	50	5	5	5					
30	12.1	16.1	12.1	40.2	4	4	4					
40	8	10.6	8	26.5	2.7	2.7	2.7					
50	5.4	7.2	5.4	17.9	1.9	1.9	1.9					
60	3.7	5	3.7	12.4	-	1.3	-					
70	-	3.5	-	8.8	-	0.9	-					
80	-	2.5	-	6.3	-	-	-					
90	-	1.9	-	4.7	-	-	-					
100	-	1.4	-	3.5	-	-	-					

During outdoor unit emergency operation or test operation, the LED on the P.C.B. will flash.

12.9. Self-diagnosis

• The display screen on the wired remote control unit and the self-diagnosis LEDs (green) on the outdoor unit printed circuit board in the outdoor unit can be used to indicate where the location of a problem is.

Refer to the table below to remove the cause of the problem, and then re-start the air conditioner system.

- If the problem disappears and operation returns to normal, the CHECK display on the remote control unit will switch off, but the self-diagnosis LED will remain illuminated until operation is resumed.
- Key indicator

LED Symbol	Description
	Off
0	Flashing
•	Illuminated

Wired rer control unit						Location of problem	Check location				
Abnormal display	Detail display	302	303	304	305	306	307	308	309		
F15	-01		0	0	0	0		(※2)	(※2)	Drain level Float switch problem	Drain pump and drain pipe, indoor unit connectors CN-DRMTR&CN-TH2
F16	-01						0	(※2)	(※2)	Louver switch problem	Louver motor, decorative panel connection terminal, or indoor unit louver motor connectors
F17	-02	0	0				0	(※2)	(※2)	D. C Fan Motor problem	Indoor unit D. C Fan motor or connection terminals
F20	-01				0		0	(※2)	(※2)	Indoor temperature sensor problem	Indoor temperature sensor lead wire or indoor unit connector or CN-TH2
	-02	0			0		0	(※2)	(※2)	Remote control thermistor problem	Remote control thermistor
F21	-01		0		0		0	(※2)	(※2)	Pipe temp. sensor problem (indoor unit)	Pipe temperature sensor lead wire or indoor unit connector CN-TH1
F26	-01			0		0	0	(※2)	(※2)	Remote control transmission problem	Remote control unit cable and connection terminals
F27	-01		0	0		0	0	(※2)	(※2)	Indoor/outdoor unit disconnection problem	Indoor/outdoor unit connection cable and connection terminals, or indoor unit and outdoor unit power supplies (indoor side)
	-05	0	0	0		0	0	(※2)	(※2)	Indoor/outdoor unit connection problem	Indoor/outdoor unit connection wire (indoor side)
F27	-01	0		0		0				Indoor/outdoor unit disconnection problem	Indoor/outdoor unit connection cable and connection terminals, or indoor unit and outdoor unit power supplies (outdoor side)
	-05					0				Indoor/outdoor unit connection error problem	Indoor/outdoor unit connection wire (outdoor side)
F30	-01						0			System problem	Total capacity for the number of indoor units is insufficient, or over check the total capacity and the number of indoor units
	-02			0			0			Open phase, or reversed phase of supply	Check the main power supply terminal board connections, or switch over any two of the power supply wires.
F31	-01		0							Suction pressure protection	Insufficient refrigerant
	-02	0								High-pressure cut-off	Check the Refrigeration system
	-06			0	0					4 way valve problem	Check the 4 way valve or lead wire
	-08		0				0			Freezing problem (Cooling model)	Check the Refrigerant system
	-09		0	0	0					Leakage Refrigerant problem	Check the Refrigerant system
	-10		0	0		0				Refrigerant system problem	Insufficient refrigerant or valve operation (closed)
F32	-03			0		0				Inverter protection (Low DC voltage)	Check the Power supply
	-04	0	0			0				Inverter protection (IPM protection)	IPM fault or PCB (MAIN) fault
	-05	0	0							Compressor overcurrent protection	Open phase or lock in compressor
	-06	0	0		0					Compressor discharge temp. protection	Insufficient refrigerant
	-08	0		0	0					Inverter protection (PFC protection)	PFC fault (PCB-PFC fault)
	-09	0				0				Inverter protection (DC current protection)	IPM fault or lock in compressor
	-10	0	0	0	0					Number of rotation Compressor problem	IPM fault or lock in compressor
F35	-02	1	0			0				D. C Fan motor lock problem	D. C Fan motor lock

	Wired remote control unit display		door	unit p	orinte	d circ	uit bo	oard L	ED	Location of problem	Check location
Abnormal display	Detail display	302	303	304	305	306	307	308	309		
F40	-01			0						Outlet temperature sensor problem	Outlet temperature sensor lead wire, connector CN-TH1
	-11				0					Compressor suction temperature sensor problem	Suction temperature sensor (SUC T. TEMP) lead wire, connector CN-TH2 or valve operation (closed)
	-21	0		0						Heat exchanger outlet temperature sensor problem	Heat exchanger outlet temperature sensor (COND TEMP) lead wire, connector CN- TH1
	-31	0	0	0						DEF temperature sensor problem	DEF temperature sensor (PIPE TEMP) lead wire, connector CN-TH2
	-51		0	0						Compressor discharge temperature sensor problem	Compressor discharge temperature sensor (DIS T. TEMP) lead wire, connector CN-DIS
F41	-02	0	0				0			High pressure switch open circuit problem	High-pressure switch lead wire, connector CN-PSW1
	-11	0					0			Low pressure sensor problem	Low-pressure sensor lead wire, connector
F42	-11		0		0					Current detector open circuit	Outdoor unit P.C. B (NOISE FILTER) fault or connector ACN2
F44	-01	0			0					Inverter protection (IPM temp. sensor problem)	IPM fault or PCB (MAIN) fault


(※2)	LED308	LED309	Unit No. (when twin or triple)
	•		Master unit problem
		•	Slave unit problem

• The LED301 (green) illuminates to indicate that the microprocessor on the printed circuit board is operating normally.

If the LED is switched off is flashing irregularly. Check the power supply, and turn it off and then back on again


Example self-diagnosis LED location for CU-L50DBE8.


Note : This PCB is for explanation purpose only. It may be different from actual unit.

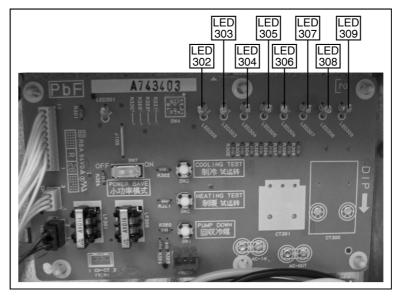



13 TECHNICAL DATA


13.1. Sound data

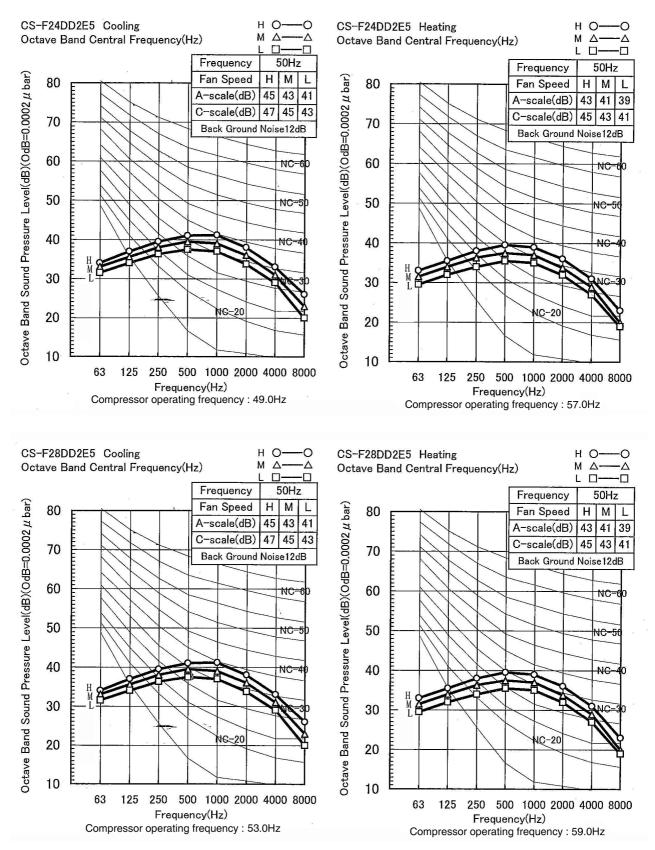


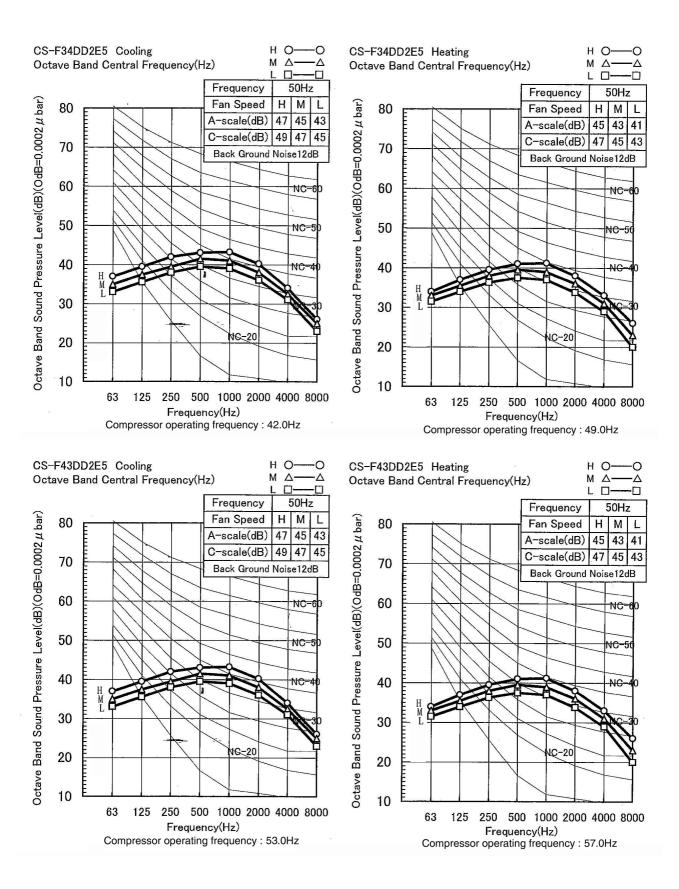

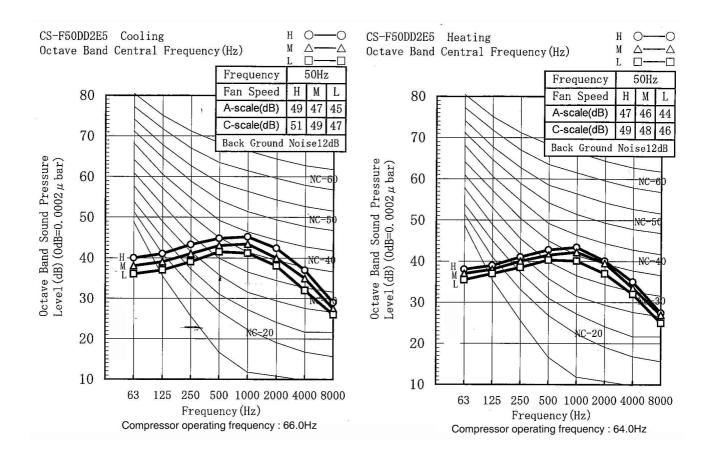

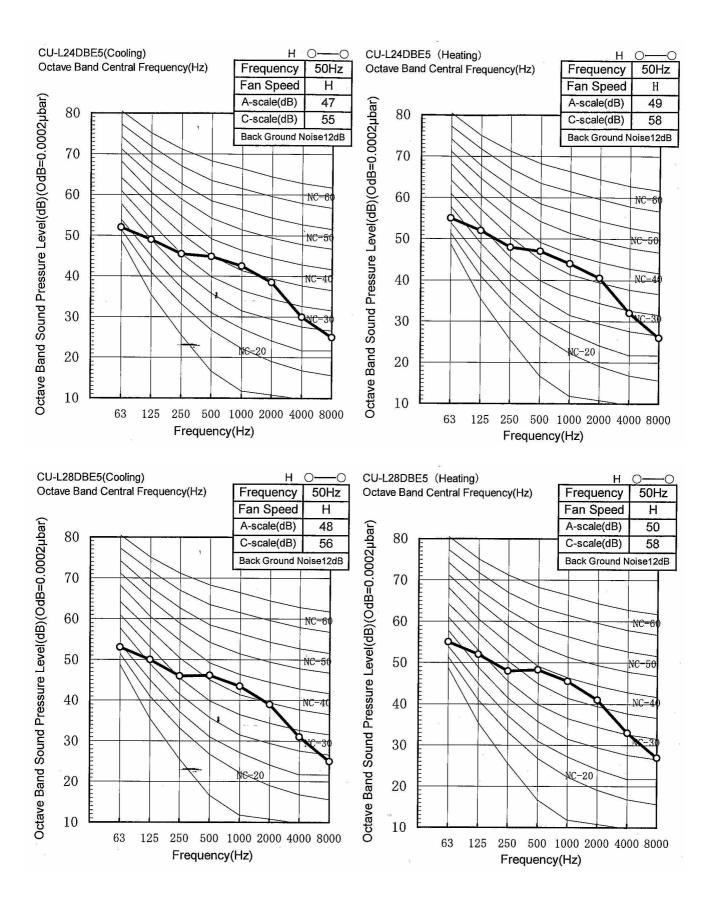

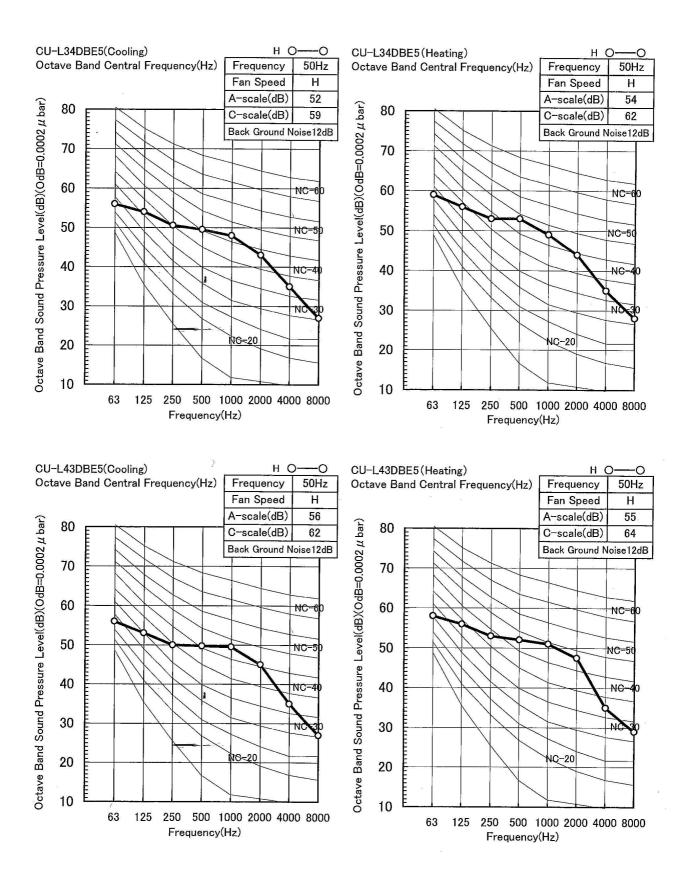

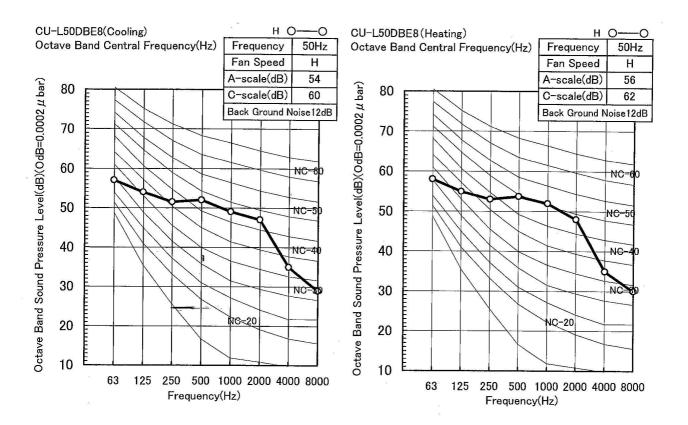

13.2. Sound measurement point

13.2.1. Indoor unit

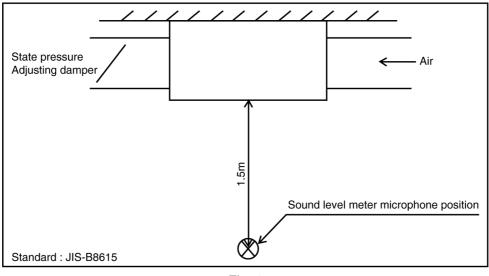


Fig. 1

13.2.2. Outdoor unit

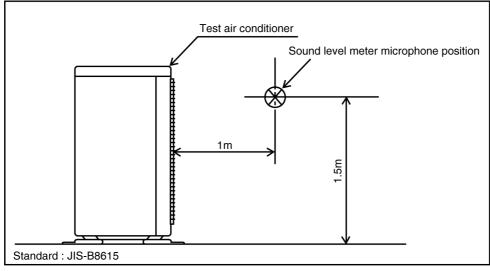



Fig. 2


13.3. Discharge and suction pressure

13.3.1. CS-F24DD2E5 CU-L24DBE5

HP	i			
outdoor temp	16	18	20	22
-15	1.64	1.74	1.84	1.94
-10	1.65	1.75	1.85	1.95
0	1.7	1.8	1.9	2
10	1.8	1.9	2	2.1
20	1.95	2.05	2.15	2.25
30	2.25	2.35	2.45	2.55
35	2.5	2.6	2.7	2.8
40	2.8	2.9	3	3.1
43	3	3.1	3.2	3.3

LP	i)		
outdoor temp	16	18	20	22
-15	0.8	0.82	0.85	0.88
- 10	0.81	0.83	0.86	0.89
0	0.82	0.85	0.88	0.91
10	0.85	0.88	0.91	0.94
20	0.895	0.92	0.95	0.98
30	0.955	0.985	1.01	1.04
35	1	1.02	1.05	1.08
40	1.06	1.085	1.12	1.14
43	1.11	1.13	1.16	1.19

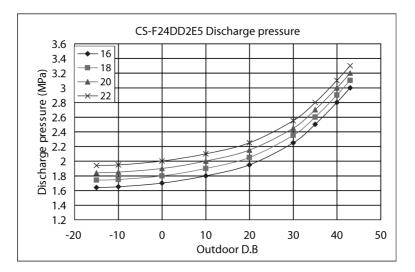


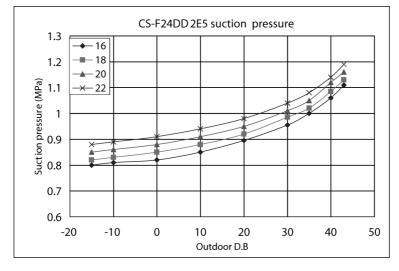


13.3.2. CS-F28DD2E5 CU-L28DBE5

HP	i			
outdoor temp	16	18	20	22
-15	1.84	1.94	2.04	2.1
-10	1.85	1.95	2.05	2.11
0	1.9	2	2.1	2.18
10	2	2.1	2.2	2.29
20	2.15	2.25	2.35	2.45
30	2.45	2.55	2.65	2.75
35	2.7	2.8	2.9	3
40	3	3.1	3.2	3.3
43	3.2	3.3	3.4	3.5

LP	indoor temperature (WB)			
outdoor temp	16	18	20	22
- 15	0.74	0.78	0.82	0.86
- 10	0.75	0.79	0.83	0.87
0	0.77	0.81	0.85	0.89
10	0.8	0.84	0.88	0.92
20	0.84	0.88	0.92	0.96
30	0.89	0.93	0.97	1.01
35	0.93	0.97	1.02	1.05
40	0.98	1.03	1.07	1.1
43	1.04	1.09	1.12	1.15

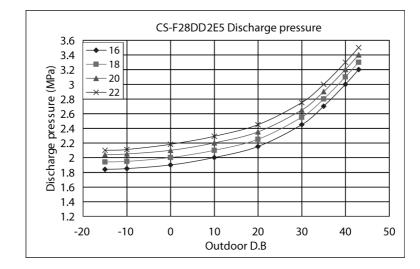


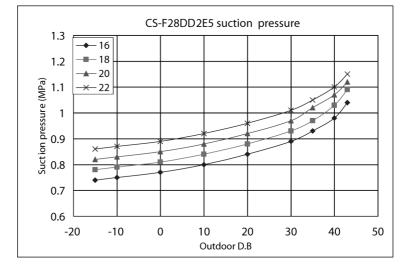


13.3.3. CS-F34DD2E5 CU-L34DBE5

HP	indoor temperature (WB)			
outdoor temp	16	18	20	22
-15	1.68	1.78	1.87	1.98
-10	1.69	1.79	1.89	2
0	1.74	1.84	1.94	2.04
10	1.84	1.94	2.04	2.14
20	1.99	2.09	2.18	2.28
30	2.29	2.39	2.46	2.58
35	2.52	2.61	2.75	2.81
40	2.8	2.9	3.01	3.12
43	3	3.1	3.21	3.33

LP	indoor temperature (WB)				
outdoor temp	16	18	20	22	
- 15	0.72	0.74	0.76	0.78	
- 10	0.73	0.75	0.77	0.79	
0	0.75	0.77	0.79	0.81	
10	0.78	0.8	0.82	0.84	
20	0.82	0.84	0.86	0.88	
30	0.87	0.89	0.91	0.93	
35	0.91	0.93	0.95	0.97	
40	0.95	0.97	0.99	1.01	
43	0.99	1.01	1.03	1.05	

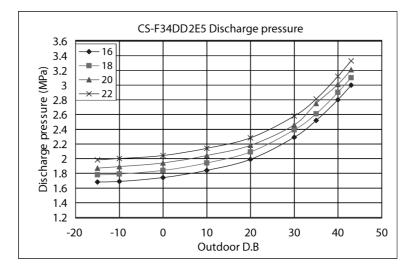


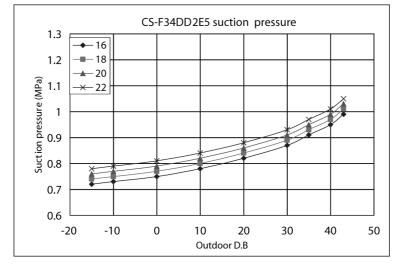


13.3.4. CS-F43DD2E5 CU-L43DBE5

HP	indoor temperature (WB)			
outdoor temp	16	18	20	22
-15	1.79	1.88	1.98	2.07
-10	1.8	1.9	2	2.1
0	1.85	1.95	2.04	2.13
10	1.95	2.05	2.14	2.24
20	2.1	2.2	2.29	2.4
30	2.4	2.5	2.59	2.7
35	2.63	2.71	2.83	2.91
40	2.93	3.03	3.14	3.24
43	3.14	3.25	3.33	3.43

LP	indoor temperature (WB)			
outdoor temp	16	18	20	22
-15	0.66	0.68	0.7	0.72
- 10	0.67	0.69	0.71	0.73
0	0.69	0.71	0.73	0.75
10	0.72	0.74	0.76	0.78
20	0.76	0.78	0.8	0.82
30	0.82	0.84	0.86	0.89
35	0.86	0.88	0.9	0.93
40	0.9	0.92	0.94	0.97
43	0.93	0.95	0.97	1

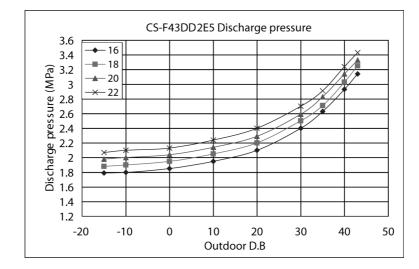


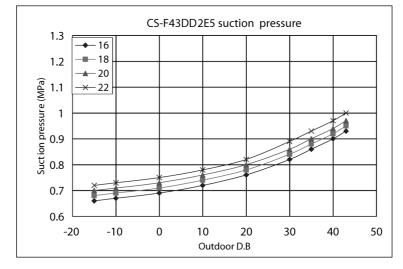


13.3.5. CS-F50DD2E5 CU-L50DBE8

HP	indoor temperature (WB)			
outdoor temp	16	18	20	22
-15	1.86	1.94	2	2.06
-10	1.87	1.95	2.01	2.08
0	1.92	1.99	2.04	2.13
10	2.01	2.09	2.15	2.24
20	2.16	2.24	2.31	2.41
30	2.47	2.55	2.63	2.73
35	2.71	2.83	2.92	3
40	3.01	3.1	3.18	3.27
43	3.22	3.28	3.37	3.45

LP	indoor temperature (WB)				
outdoor temp	16	18	20	22	
-15	0.62	0.68	0.7	0.72	
-10	0.63	0.65	0.7	0.72	
0	0.65	0.67	0.71	0.73	
10	0.68	0.7	0.73	0.76	
20	0.71	0.73	0.76	0.79	
30	0.75	0.77	0.8	0.83	
35	0.78	0.8	0.83	0.87	
40	0.83	0.85	0.89	0.92	
43	0.88	0.9	0.93	0.96	

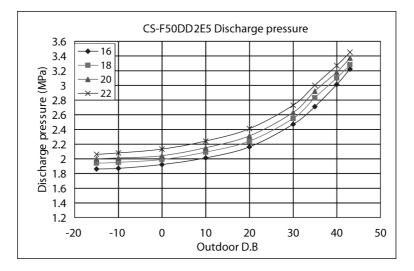

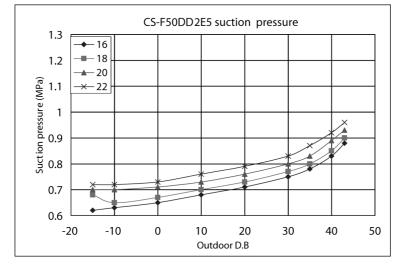

13.4. Capacity and power consumption

13.4.1. Cooling performance

Model name	Max coolir	ng capacity
	Max capacity (kw)	Max power consumption (kw)
CS-F24DD2E5 / CU-L24DBE5	6.5	2.4
CS-F28DD2E5 / CU-L28DBE5	7.5	2.45
CS-F34DD2E5 / CU-L34DBE5	12	3.5
CS-F43DD2E5 / CU-L43DBE5	13.5	4.5
CS-F50DD2E5 / CU-L50DBE8	16	5.4

Calculation of actual cooling capacity and power consumption: Example: CS-F24DD2E5 / CU-L24DBE5

• Calculation of the actual cooling capacity and power consumption for the following cooling conditions;

Indoor temperature of 27/19°C and outdoor temperature of 40°C (Standard condition).

Calculation method

- 1. Find the cooling capacity ratio and the power consumption ratio from the cooling capacity graph and power consumption graph for model CS-F24DD2E5 / CU-L24DBE5.
 - The cooling capacity ratio indicate at the intersection between an outdoor unit air inlet temperature of 40°C on the horizontal axis and an indoor unit air inlet temperature on 27/19°C is 0.95.
 - The cooling power consumption ratio from the same intersection on the power consumption graph is 1.03.

2. Thus,

- Actual cooling capacity = cooling capacity ratio x rated cooling capacity = 0.95 x 6.5 = 6.18 (kw).
- Actual cooling power consumption = cooling power consumption x rated power consumption = 1.03 x 2.45 = 2.52 (kw).

13.4.1.1. CS-F24DD2E5 CU-L24DBE5

Indoor	intake						Ou	tdoor ir	ntake ai	r ambie	ent temp	perature	e (D.B./	°C)					
air an	nbient		-15°C			-10°C			-5°C			0°C			0°C			5°C	
tempe	erature	TC	SHC	IPT	TC	SHC	IPT	TC	SHC	IPT	TC	SHC	IPT	TC	SHC	IPT	TC	SHC	IPT
DB	WB	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW
	17	6.24	4.80	1.16	6.14	4.72	1.18	6.03	4.64	1.20	5.93	4.56	1.22	6.30	4.85	1.30	6.08	4.68	1.32
23	19	6.50	4.81	1.28	6.40	4.73	1.29	6.29	4.66	1.31	6.19	4.58	1.33	6.57	4.87	1.42	6.41	4.74	1.44
	22	6.76	4.80	1.37	6.66	4.73	1.39	6.55	4.65	1.40	6.45	4.58	1.42	6.85	4.86	1.52	6.69	4.75	1.54
	17	6.34	4.82	1.20	6.24	4.74	1.22	6.14	4.66	1.24	6.03	4.58	1.26	6.41	4.87	1.34	6.24	4.74	1.36
25	19	6.60	4.82	1.29	6.50	4.75	1.31	6.40	4.67	1.33	6.29	4.59	1.35	6.69	4.88	1.44	6.52	4.76	1.46
	22	6.92	4.84	1.39	6.81	4.77	1.40	6.71	4.70	1.42	6.60	4.62	1.44	7.02	4.91	1.54	6.85	4.80	1.55
	17	6.45	4.84	1.29	6.34	4.76	1.31	6.24	4.68	1.33	6.14	4.60	1.35	6.52	4.89	1.44	6.35	4.77	1.46
27	19	6.71	4.83	1.35	6.60	4.75	1.37	6.50	4.68	1.39	6.40	4.61	1.40	6.80	4.89	1.50	6.63	4.77	1.52
	22	7.02	4.84	1.46	6.92	4.77	1.48	6.81	4.70	1.50	6.71	4.63	1.52	7.13	4.92	1.61	6.96	4.80	1.63
	17	6.60	4.89	1.31	6.50	4.81	1.33	6.40	4.73	1.35	6.29	4.66	1.37	6.69	4.95	1.46	6.52	4.82	1.48
29	19	6.86	4.87	1.40	6.76	4.80	1.42	6.66	4.73	1.44	6.55	4.65	1.46	6.96	4.94	1.55	6.80	4.82	1.57
	22	7.12	4.84	1.52	7.02	4.77	1.53	6.92	4.70	1.55	6.81	4.63	1.57	7.24	4.92	1.67	7.07	4.81	1.69
	17	6.71	4.90	1.39	6.60	4.82	1.40	6.50	4.75	1.42	6.40	4.67	1.44	6.80	4.96	1.54	6.63	4.84	1.55
32	19	6.97	4.88	1.44	6.86	4.80	1.46	6.76	4.73	1.48	6.66	4.66	1.50	7.07	4.95	1.59	6.91	4.83	1.61
	22	7.23	4.84	1.50	7.12	4.77	1.52	7.02	4.70	1.53	6.92	4.63	1.55	7.35	4.92	1.65	7.18	4.81	1.67


Indoor	intake						Ou	itdoor ir	ntake ai	r ambie	ent temp	perature	e (D.B./	°C)					
air an	nbient		10°C			10°C			15°C			20°C			20°C			25°C	
tempe	erature	TC	SHC	IPT	тс	SHC	IPT	тс	SHC	IPT	тс	SHC	IPT	TC	SHC	IPT	тс	SHC	IPT
DB	WB	KW	KW	KW	KW	КW	КW	KW	KW	KW	KW	KW	КW	KW	KW	KW	KW	KW	KW
	17	5.97	4.65	1.36	6.67	5.20	1.52	6.55	5.17	1.59	6.36	5.09	1.68	6.70	5.36	1.82	6.44	5.21	1.92
23	19	6.24	4.68	1.48	6.98	5.23	1.66	6.85	5.21	1.72	6.67	5.14	1.79	7.02	5.41	1.94	6.76	5.27	2.04
	22	6.52	4.69	1.57	7.29	5.25	1.77	7.16	5.23	1.83	6.98	5.16	1.90	7.35	5.44	2.06	7.09	5.31	2.16
	17	6.08	4.68	1.40	6.79	5.23	1.57	6.67	5.20	1.63	6.48	5.12	1.72	6.83	5.39	1.87	6.57	5.25	1.97
25	19	6.35	4.70	1.50	7.10	5.25	1.68	6.98	5.23	1.74	6.79	5.16	1.83	7.15	5.43	1.99	6.89	5.31	2.09
	22	6.69	4.75	1.59	7.47	5.30	1.79	7.35	5.29	1.85	7.16	5.23	1.94	7.54	5.50	2.11	7.28	5.39	2.21
	17	6.19	4.70	1.50	6.92	5.26	1.68	6.79	5.23	1.74	6.61	5.15	1.83	6.96	5.42	1.99	6.70	5.29	2.09
27	19	6.46	4.72	1.55	7.22	5.27	1.74	7.10	5.25	1.81	6.92	5.19	1.90	7.28	5.46	2.06	7.02	5.34	2.16
	22	6.80	4.76	1.65	7.60	5.32	1.85	7.47	5.30	1.92	7.29	5.25	1.99	7.67	5.52	2.16	7.41	5.41	2.26
	17	6.35	4.77	1.50	7.10	5.33	1.68	6.98	5.30	1.74	6.79	5.23	1.83	7.15	5.51	1.99	6.89	5.37	2.09
29	19	6.63	4.77	1.59	7.41	5.34	1.79	7.29	5.32	1.85	7.10	5.25	1.94	7.48	5.53	2.11	7.22	5.41	2.21
	22	6.91	4.77	1.71	7.72	5.33	1.92	7.60	5.32	1.99	7.41	5.26	2.08	7.80	5.54	2.26	7.54	5.43	2.30
	17	6.46	4.78	1.57	7.22	5.35	1.77	7.10	5.33	1.83	6.92	5.26	1.92	7.28	5.53	2.09	7.02	5.41	2.14
32	19	6.74	4.79	1.63	7.53	5.35	1.83	7.41	5.34	1.90	7.22	5.27	1.99	7.61	5.55	2.16	7.35	5.44	2.26
	22	7.02	4.77	1.69	7.84	5.33	1.90	7.72	5.33	1.97	7.53	5.27	2.05	7.93	5.55	2.23	7.67	5.45	2.33

Indoor	intake			Ou	itdoor ir	ntake ai	r ambie	ent temp	cerature	e (D.B./	°C)		
air an	nbient		30°C			35°C			40°C			43°C	
tempe	erature	TC	SHC	IPT	TC	SHC	IPT	TC	SHC	IPT	TC	SHC	IPT
DB	WB	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW
	17	6.18	5.13	2.04	5.92	5.03	2.16	5.59	4.86	2.30	5.33	4.74	2.42
23	19	6.50	5.20	2.16	6.24	5.12	2.28	5.92	4.97	2.42	5.66	4.86	2.54
	22	6.83	5.26	2.28	6.57	5.19	2.40	6.24	5.05	2.54	5.98	4.96	2.66
	17	6.31	5.17	2.09	6.05	5.08	2.21	5.72	4.92	2.35	5.46	4.80	2.47
25	19	6.63	5.24	2.21	6.37	5.16	2.33	6.05	5.02	2.47	5.79	4.92	2.59
	22	7.02	5.34	2.33	6.76	5.27	2.45	6.44	5.15	2.59	6.18	5.06	2.71
	17	6.44	5.21	2.21	6.18	5.13	2.33	5.85	4.97	2.47	5.59	4.86	2.59
27	19	6.76	5.27	2.28	6.50	5.20	2.40	6.18	5.06	2.54	5.92	4.97	2.66
	22	7.15	5.36	2.38	6.89	5.31	2.50	6.57	5.19	2.64	6.31	5.11	2.76
	17	6.63	5.30	2.21	6.37	5.22	2.33	6.05	5.08	2.47	5.79	4.98	2.57
29	19	6.96	5.36	2.33	6.70	5.29	2.45	6.37	5.16	2.59	6.11	5.07	2.69
	22	7.28	5.39	2.42	7.02	5.34	2.54	6.70	5.22	2.69	6.44	5.15	2.78
	17	6.76	5.34	2.26	6.50	5.27	2.38	6.18	5.19	2.42	5.92	5.03	2.64
32	19	7.09	5.38	2.38	6.83	5.32	2.50	6.50	5.20	2.64	6.24	5.12	2.76
	22	7.41	5.41	2.45	7.15	5.36	2.57	6.83	5.26	2.71	6.57	5.19	2.83

TC : Total Cooling Capacity SHC : Sensible Heat Capacity IPT : Power Consumption


Cooling capacity curve

Indoor int	ake air					Ou	itdoor ir	ntake ai	r ambie	ent temp	oerature	e (D.B./	°C)				
ambie	ent	-15°C	-10°C	-5°C	0°C	0°C	5°C	10°C	10°C	15°C	20°C	20°C	25°C	30°C	35°C	40°C	43°C
tempera	ature	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC
DB	WB	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW
	17	6.24	6.14	6.03	5.93	6.30	6.08	5.97	6.67	6.55	6.36	6.70	6.44	6.18	5.92	5.59	5.33
23	19	6.50	6.40	6.29	6.19	6.57	6.41	6.24	6.98	6.85	6.67	7.02	6.76	6.50	6.24	5.92	5.66
	22	6.76	6.66	6.55	6.45	6.85	6.69	6.52	7.29	7.16	6.98	7.35	7.09	6.83	6.57	6.24	5.98
	17	6.34	6.24	6.14	6.03	6.41	6.24	6.08	6.79	6.67	6.48	6.83	6.57	6.31	6.05	5.72	5.46
25	19	6.60	6.50	6.40	6.29	6.69	6.52	6.35	7.10	6.98	6.79	7.15	6.89	6.63	6.37	6.05	5.79
	22	6.92	6.81	6.71	6.60	7.02	6.85	6.69	7.47	7.35	7.16	7.54	7.28	7.02	6.76	6.44	6.18
	17	6.45	6.34	6.24	6.14	6.52	6.35	6.19	6.92	6.79	6.61	6.96	6.70	6.44	6.18	5.85	5.59
27	19	6.71	6.60	6.50	6.40	6.80	6.63	6.46	7.22	7.10	6.92	7.28	7.02	6.76	6.50	6.18	5.92
	22	7.02	6.92	6.81	6.71	7.13	6.96	6.80	7.60	7.47	7.29	7.67	7.41	7.15	6.89	6.57	6.31
	17	6.60	6.50	6.40	6.29	6.69	6.52	6.35	7.10	6.98	6.79	7.15	6.89	6.63	6.37	6.05	5.79
29	19	6.86	6.76	6.66	6.55	6.96	6.80	6.63	7.41	7.29	7.10	7.48	7.22	6.96	6.70	6.37	6.11
	22	7.12	7.02	6.92	6.81	7.24	7.07	6.91	7.72	7.60	7.41	7.80	7.54	7.28	7.02	6.70	6.44
	17	6.71	6.60	6.50	6.40	6.80	6.63	6.46	7.22	7.10	6.92	7.28	7.02	6.76	6.50	6.18	5.92
32	19	6.97	6.86	6.76	6.66	7.07	6.91	6.74	7.53	7.41	7.22	7.61	7.35	7.09	6.83	6.50	6.24
	22	7.23	7.12	7.02	6.92	7.35	7.18	7.02	7.84	7.72	7.53	7.93	7.67	7.41	7.15	6.83	6.57

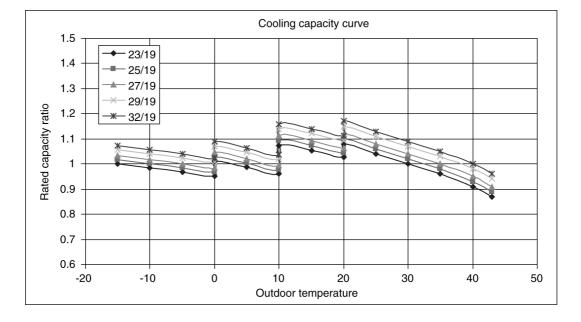

Cooling power consumption curve

Indoor int	ake air					Ou	tdoor ir	ntake ai	r ambie	ent temp	oerature	e (D.B./	°C)				
ambie	ent	-15°C	-10°C	-5°C	0°C	0°C	5°C	10°C	10°C	15°C	20°C	20°C	25°C	30°C	35°C	40°C	43°C
tempera	ature	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT
DB	WB	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW
	17	1.16	1.18	1.20	1.22	1.30	1.32	1.36	1.52	1.59	1.68	1.82	1.92	2.04	2.16	2.30	2.42
23	19	1.28	1.29	1.31	1.33	1.42	1.44	1.48	1.66	1.72	1.79	1.94	2.04	2.16	2.28	2.42	2.54
	22	1.37	1.39	1.40	1.42	1.52	1.54	1.57	1.77	1.83	1.90	2.06	2.16	2.28	2.40	2.54	2.66
	17	1.20	1.22	1.24	1.26	1.34	1.36	1.40	1.57	1.63	1.72	1.87	1.97	2.09	2.21	2.35	2.47
25	19	1.29	1.31	1.33	1.35	1.44	1.46	1.50	1.68	1.74	1.83	1.99	2.09	2.21	2.33	2.47	2.59
	22	1.39	1.40	1.42	1.44	1.54	1.55	1.59	1.79	1.85	1.94	2.11	2.21	2.33	2.45	2.59	2.71
	17	1.29	1.31	1.33	1.35	1.44	1.46	1.50	1.68	1.74	1.83	1.99	2.09	2.21	2.33	2.47	2.59
27	19	1.35	1.37	1.39	1.40	1.50	1.52	1.55	1.74	1.81	1.90	2.06	2.16	2.28	2.40	2.54	2.66
	22	1.46	1.48	1.50	1.52	1.61	1.63	1.65	1.85	1.92	1.99	2.16	2.26	2.38	2.50	2.64	2.76
	17	1.31	1.33	1.35	1.37	1.46	1.48	1.50	1.68	1.74	1.83	1.99	2.09	2.21	2.33	2.47	2.57
29	19	1.40	1.42	1.44	1.46	1.55	1.57	1.59	1.79	1.85	1.94	2.11	2.21	2.33	2.45	2.59	2.69
	22	1.52	1.53	1.55	1.57	1.67	1.69	1.71	1.92	1.99	2.08	2.26	2.30	2.42	2.54	2.69	2.78
	17	1.39	1.40	1.42	1.44	1.54	1.55	1.57	1.77	1.83	1.92	2.09	2.14	2.26	2.38	2.42	2.64
32	19	1.44	1.46	1.48	1.50	1.59	1.61	1.63	1.83	1.90	1.99	2.16	2.26	2.38	2.50	2.64	2.76
	22	1.50	1.52	1.53	1.55	1.65	1.67	1.69	1.90	1.97	2.05	2.23	2.33	2.45	2.57	2.71	2.83

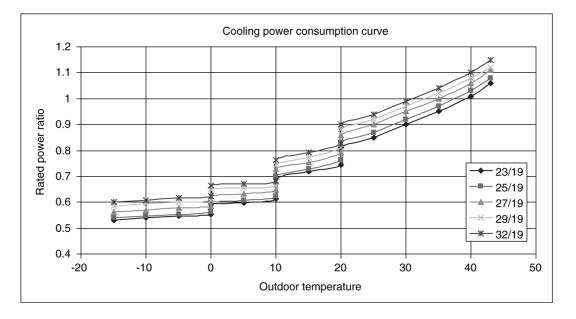

13.4.1.2. CS-F28DD2E5 CU-L28DBE5

Indoor	intake						Οι	itdoor ir	ntake ai	r ambie	ent temp	oerature	e (D.B./	°C)					
air an	nbient		-15°C			-10°C			-5°C			0°C			0°C			5°C	
tempe	rature	TC	SHC	IPT	TC	SHC	IPT	TC	SHC	IPT	TC	SHC	IPT	TC	SHC	IPT	TC	SHC	IPT
DB	WB	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW
	17	7.20	5.54	1.19	7.08	5.45	1.21	6.96	5.36	1.23	6.84	5.27	1.25	7.27	5.60	1.33	7.01	5.40	1.35
23	19	7.50	5.55	1.30	7.38	5.46	1.32	7.26	5.37	1.34	7.14	5.28	1.36	7.59	5.61	1.45	7.40	5.47	1.47
	22	7.80	5.54	1.40	7.68	5.45	1.41	7.56	5.37	1.43	7.44	5.28	1.45	7.91	5.61	1.55	7.71	5.48	1.57
	17	7.32	5.56	1.23	7.20	5.47	1.25	7.08	5.38	1.26	6.96	5.29	1.28	7.40	5.62	1.37	7.20	5.47	1.39
25	19	7.62	5.56	1.32	7.50	5.48	1.34	7.38	5.39	1.36	7.26	5.30	1.38	7.71	5.63	1.47	7.52	5.49	1.49
	22	7.98	5.59	1.41	7.86	5.50	1.43	7.74	5.42	1.45	7.62	5.33	1.47	8.10	5.67	1.57	7.91	5.53	1.59
	17	7.44	5.58	1.32	7.32	5.49	1.34	7.20	5.40	1.36	7.08	5.31	1.38	7.52	5.64	1.47	7.33	5.50	1.49
27	19	7.74	5.57	1.38	7.62	5.49	1.40	7.50	5.40	1.41	7.38	5.31	1.43	7.84	5.65	1.53	7.65	5.51	1.55
	22	8.10	5.59	1.49	7.98	5.51	1.51	7.86	5.42	1.53	7.74	5.34	1.55	8.22	5.67	1.65	8.03	5.54	1.67
	17	7.62	5.64	1.34	7.50	5.55	1.36	7.38	5.46	1.38	7.26	5.37	1.40	7.71	5.71	1.49	7.52	5.57	1.51
29	19	7.92	5.62	1.43	7.80	5.54	1.45	7.68	5.45	1.47	7.56	5.37	1.49	8.03	5.70	1.59	7.84	5.57	1.61
	22	8.22	5.59	1.55	8.10	5.51	1.57	7.98	5.43	1.58	7.86	5.34	1.60	8.35	5.68	1.71	8.16	5.55	1.73
	17	7.74	5.65	1.41	7.62	5.56	1.43	7.50	5.48	1.45	7.38	5.39	1.47	7.84	5.72	1.57	7.65	5.58	1.59
32	19	8.04	5.63	1.47	7.92	5.54	1.49	7.80	5.46	1.51	7.68	5.38	1.53	8.16	5.71	1.63	7.97	5.58	1.65
	22	8.34	5.59	1.53	8.22	5.51	1.55	8.10	5.43	1.57	7.98	5.35	1.58	8.48	5.68	1.69	8.29	5.55	1.71


Indoor	intake						Ou	ıtdoor ir	ntake ai	r ambie	ent temp	perature	e (D.B./	°C)					
air an	nbient		10°C			10°C			15°C			20°C			20°C			25°C	
tempe	erature	TC	SHC	IPT	тс	SHC	IPT	TC	SHC	IPT	TC	SHC	IPT	TC	SHC	IPT	TC	SHC	IPT
DB	WB	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW						
	17	6.89	5.37	1.39	7.70	6.00	1.56	7.55	5.97	1.62	7.34	5.87	1.71	7.73	6.18	1.86	7.43	6.01	1.96
23	19	7.20	5.40	1.51	8.05	6.04	1.69	7.91	6.01	1.76	7.70	5.93	1.83	8.10	6.24	1.98	7.80	6.08	2.08
	22	7.52	5.42	1.61	8.41	6.05	1.80	8.27	6.03	1.87	8.05	5.96	1.94	8.48	6.27	2.11	8.18	6.13	2.21
	17	7.01	5.40	1.43	7.84	6.03	1.60	7.70	6.00	1.67	7.48	5.91	1.76	7.88	6.22	1.91	7.58	6.06	2.01
25	19	7.33	5.43	1.53	8.19	6.06	1.71	8.05	6.04	1.78	7.84	5.96	1.87	8.25	6.27	2.03	7.95	6.12	2.13
	22	7.71	5.48	1.63	8.62	6.12	1.83	8.48	6.10	1.89	8.27	6.03	1.98	8.70	6.35	2.16	8.40	6.22	2.25
	17	7.14	5.43	1.53	7.98	6.06	1.71	7.84	6.03	1.78	7.62	5.95	1.87	8.03	6.26	2.03	7.73	6.10	2.13
27	19	7.46	5.44	1.59	8.34	6.09	1.78	8.19	6.06	1.85	7.98	5.99	1.94	8.40	6.30	2.11	8.10	6.16	2.21
	22	7.84	5.49	1.69	8.76	6.13	1.89	8.62	6.12	1.96	8.41	6.05	2.03	8.85	6.37	2.21	8.55	6.24	2.30
	17	7.33	5.50	1.53	8.19	6.15	1.71	8.05	6.12	1.78	7.84	6.03	1.87	8.25	6.35	2.03	7.95	6.20	2.13
29	19	7.65	5.51	1.63	8.55	6.16	1.83	8.41	6.14	1.89	8.19	6.06	1.98	8.63	6.38	2.16	8.33	6.24	2.25
	22	7.97	5.50	1.75	8.91	6.15	1.96	8.76	6.13	2.03	8.55	6.07	2.12	9.00	6.39	2.30	8.70	6.26	2.35
	17	7.46	5.52	1.61	8.34	6.17	1.80	8.19	6.15	1.87	7.98	6.06	1.96	8.40	6.38	2.13	8.10	6.24	2.18
32	19	7.78	5.52	1.67	8.69	6.17	1.87	8.55	6.16	1.94	8.34	6.09	2.03	8.78	6.41	2.21	8.48	6.27	2.30
	22	8.10	5.51	1.73	9.05	6.15	1.94	8.91	6.15	2.01	8.69	6.08	2.10	9.15	6.41	2.28	8.85	6.28	2.38

Indoor	intake			Ou	itdoor ir	ntake ai	r ambie	ent temp	perature	e (D.B./	°C)		
air an	nbient		30°C			35°C			40°C			43°C	
tempe	erature	TC	SHC	IPT	TC	SHC	IPT	TC	SHC	IPT	TC	SHC	IPT
DB	WB	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW
	17	7.13	5.91	2.08	6.83	5.80	2.21	6.45	5.61	2.35	6.15	5.47	2.47
23	19	7.50	6.00	2.21	7.20	5.90	2.33	6.83	5.73	2.47	6.53	5.61	2.60
	22	7.88	6.06	2.33	7.58	5.98	2.45	7.20	5.83	2.60	6.90	5.73	2.72
	17	7.28	5.97	2.13	6.98	5.86	2.25	6.60	5.68	2.40	6.30	5.54	2.52
25	19	7.65	6.04	2.25	7.35	5.95	2.38	6.98	5.79	2.52	6.68	5.67	2.65
	22	8.10	6.16	2.38	7.80	6.08	2.50	7.43	5.94	2.65	7.13	5.84	2.77
	17	7.43	6.01	2.25	7.13	5.91	2.38	6.75	5.74	2.52	6.45	5.61	2.65
27	19	7.80	6.08	2.33	7.50	6.00	2.45	7.13	5.84	2.60	6.83	5.73	2.72
	22	8.25	6.19	2.43	7.95	6.12	2.55	7.58	5.98	2.70	7.28	5.89	2.82
	17	7.65	6.12	2.25	7.35	6.03	2.38	6.98	5.86	2.52	6.68	5.74	2.62
29	19	8.03	6.18	2.38	7.73	6.10	2.50	7.35	5.95	2.65	7.05	5.85	2.74
	22	8.40	6.22	2.47	8.10	6.16	2.60	7.73	6.03	2.74	7.43	5.94	2.84
	17	7.80	6.16	2.30	7.50	6.08	2.43	7.13	5.99	2.47	6.83	5.80	2.70
32	19	8.18	6.21	2.43	7.88	6.14	2.55	7.50	6.00	2.70	7.20	5.90	2.82
	22	8.55	6.24	2.50	8.25	6.19	2.62	7.88	6.06	2.77	7.58	5.98	2.89

TC : Total Cooling Capacity SHC : Sensible Heat Capacity IPT : Power Consumption


Cooling capacity curve

Indoor int	ake air					Ou	tdoor ir	ntake ai	r ambie	ent temp	oerature	e (D.B./	°C)				
ambie	ent	-15°C	-10°C	-5°C	0°C	0°C	5°C	10°C	10°C	15°C	20°C	20°C	25°C	30°C	35°C	40°C	43°C
tempera	ature	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC
DB	WB	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW
	17	7.20	7.08	6.96	6.84	7.27	7.01	6.89	7.70	7.55	7.34	7.73	7.43	7.13	6.83	6.45	6.15
23	19	7.50	7.38	7.26	7.14	7.59	7.40	7.20	8.05	7.91	7.70	8.10	7.80	7.50	7.20	6.83	6.53
	22	7.80	7.68	7.56	7.44	7.91	7.71	7.52	8.41	8.27	8.05	8.48	8.18	7.88	7.58	7.20	6.90
	17	7.32	7.20	7.08	6.96	7.40	7.20	7.01	7.84	7.70	7.48	7.88	7.58	7.28	6.98	6.60	6.30
25	19	7.62	7.50	7.38	7.26	7.71	7.52	7.33	8.19	8.05	7.84	8.25	7.95	7.65	7.35	6.98	6.68
	22	7.98	7.86	7.74	7.62	8.10	7.91	7.71	8.62	8.48	8.27	8.70	8.40	8.10	7.80	7.43	7.13
	17	7.44	7.32	7.20	7.08	7.52	7.33	7.14	7.98	7.84	7.62	8.03	7.73	7.43	7.13	6.75	6.45
27	19	7.74	7.62	7.50	7.38	7.84	7.65	7.46	8.34	8.19	7.98	8.40	8.10	7.80	7.50	7.13	6.83
	22	8.10	7.98	7.86	7.74	8.22	8.03	7.84	8.76	8.62	8.41	8.85	8.55	8.25	7.95	7.58	7.28
	17	7.62	7.50	7.38	7.26	7.71	7.52	7.33	8.19	8.05	7.84	8.25	7.95	7.65	7.35	6.98	6.68
29	19	7.92	7.80	7.68	7.56	8.03	7.84	7.65	8.55	8.41	8.19	8.63	8.33	8.03	7.73	7.35	7.05
	22	8.22	8.10	7.98	7.86	8.35	8.16	7.97	8.91	8.76	8.55	9.00	8.70	8.40	8.10	7.73	7.43
	17	7.74	7.62	7.50	7.38	7.84	7.65	7.46	8.34	8.19	7.98	8.40	8.10	7.80	7.50	7.13	6.83
32	19	8.04	7.92	7.80	7.68	8.16	7.97	7.78	8.69	8.55	8.34	8.78	8.48	8.18	7.88	7.50	7.20
	22	8.34	8.22	8.10	7.98	8.48	8.29	8.10	9.05	8.91	8.69	9.15	8.85	8.55	8.25	7.88	7.58

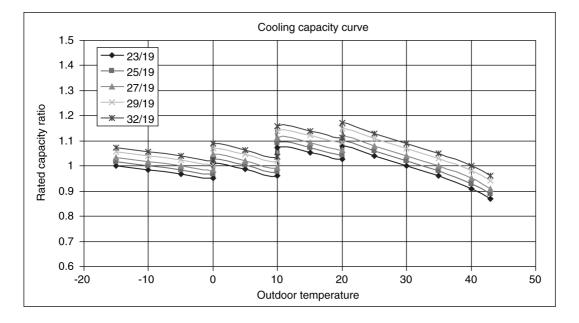

Cooling power consumption curve

Indoor int	ake air					Ou	itdoor ir	ntake ai	r ambie	ent temp	oerature	e (D.B./	°C)				
ambie	ent	-15°C	-10°C	-5°C	0°C	0°C	5°C	10°C	10°C	15°C	20°C	20°C	25°C	30°C	35°C	40°C	43°C
tempera	ature	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT
DB	WB	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW
	17	1.19	1.21	1.23	1.25	1.33	1.35	1.39	1.56	1.62	1.71	1.86	1.96	2.08	2.21	2.35	2.47
23	19	1.30	1.32	1.34	1.36	1.45	1.47	1.51	1.69	1.76	1.83	1.98	2.08	2.21	2.33	2.47	2.60
	22	1.40	1.41	1.43	1.45	1.55	1.57	1.61	1.80	1.87	1.94	2.11	2.21	2.33	2.45	2.60	2.72
	17	1.23	1.25	1.26	1.28	1.37	1.39	1.43	1.60	1.67	1.76	1.91	2.01	2.13	2.25	2.40	2.52
25	19	1.32	1.34	1.36	1.38	1.47	1.49	1.53	1.71	1.78	1.87	2.03	2.13	2.25	2.38	2.52	2.65
	22	1.41	1.43	1.45	1.47	1.57	1.59	1.63	1.83	1.89	1.98	2.16	2.25	2.38	2.50	2.65	2.77
	17	1.32	1.34	1.36	1.38	1.47	1.49	1.53	1.71	1.78	1.87	2.03	2.13	2.25	2.38	2.52	2.65
27	19	1.38	1.40	1.41	1.43	1.53	1.55	1.59	1.78	1.85	1.94	2.11	2.21	2.33	2.45	2.60	2.72
	22	1.49	1.51	1.53	1.55	1.65	1.67	1.69	1.89	1.96	2.03	2.21	2.30	2.43	2.55	2.70	2.82
	17	1.34	1.36	1.38	1.40	1.49	1.51	1.53	1.71	1.78	1.87	2.03	2.13	2.25	2.38	2.52	2.62
29	19	1.43	1.45	1.47	1.49	1.59	1.61	1.63	1.83	1.89	1.98	2.16	2.25	2.38	2.50	2.65	2.74
	22	1.55	1.57	1.58	1.60	1.71	1.73	1.75	1.96	2.03	2.12	2.30	2.35	2.47	2.60	2.74	2.84
	17	1.41	1.43	1.45	1.47	1.57	1.59	1.61	1.80	1.87	1.96	2.13	2.18	2.30	2.43	2.47	2.70
32	19	1.47	1.49	1.51	1.53	1.63	1.65	1.67	1.87	1.94	2.03	2.21	2.30	2.43	2.55	2.70	2.82
	22	1.53	1.55	1.57	1.58	1.69	1.71	1.73	1.94	2.01	2.10	2.28	2.38	2.50	2.62	2.77	2.89

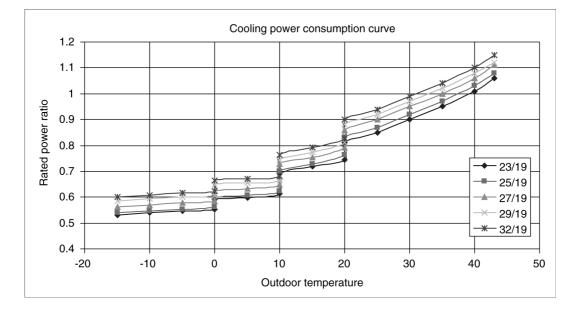

13.4.1.3. CS-F34DD2E5 CU-L34DBE5

Indoor	intake						Ou	itdoor ir	ntake ai	r ambie	ent temp	perature	e (D.B./	°C)					
air an	nbient		-15°C			-10°C			-5°C			0°C			0°C			5°C	
tempe	erature	TC	SHC	IPT	TC	SHC	IPT	TC	SHC	IPT	TC	SHC	IPT	TC	SHC	IPT	TC	SHC	IPT
DB	WB	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW
	17	11.52	8.87	1.70	11.33	8.72	1.72	11.14	8.57	1.75	10.94	8.43	1.78	11.63	8.95	1.89	11.22	8.64	1.92
23	19	12.00	8.88	1.86	11.81	8.74	1.89	11.62	8.60	1.91	11.42	8.45	1.94	12.14	8.98	2.07	11.83	8.76	2.10
	22	12.48	8.86	1.99	12.29	8.72	2.02	12.10	8.59	2.05	11.90	8.45	2.08	12.65	8.98	2.21	12.34	8.76	2.24
	17	11.71	8.90	1.75	11.52	8.76	1.78	11.33	8.61	1.81	11.14	8.46	1.83	11.83	8.99	1.95	11.53	8.76	1.98
25	19	12.19	8.90	1.89	12.00	8.76	1.91	11.81	8.62	1.94	11.62	8.48	1.97	12.34	9.01	2.10	12.04	8.79	2.12
	22	12.77	8.94	2.02	12.58	8.80	2.05	12.38	8.67	2.08	12.19	8.53	2.10	12.95	9.07	2.24	12.65	8.85	2.27
	17	11.90	8.93	1.89	11.71	8.78	1.91	11.52	8.64	1.94	11.33	8.50	1.97	12.04	9.03	2.10	11.73	8.80	2.12
27	19	12.38	8.92	1.97	12.19	8.78	1.99	12.00	8.64	2.02	11.81	8.50	2.05	12.55	9.03	2.18	12.24	8.81	2.21
	22	12.96	8.94	2.13	12.77	8.81	2.16	12.58	8.68	2.18	12.38	8.54	2.21	13.16	9.08	2.35	12.85	8.87	2.38
	17	12.19	9.02	1.91	12.00	8.88	1.94	11.81	8.74	1.97	11.62	8.60	1.99	12.34	9.13	2.12	12.04	8.91	2.15
29	19	12.67	9.00	2.05	12.48	8.86	2.08	12.29	8.72	2.10	12.10	8.59	2.13	12.85	9.12	2.27	12.55	8.91	2.30
	22	13.15	8.94	2.21	12.96	8.81	2.24	12.77	8.68	2.26	12.58	8.55	2.29	13.36	9.09	2.44	13.06	8.88	2.47
	17	12.38	9.04	2.02	12.19	8.90	2.05	12.00	8.76	2.08	11.81	8.62	2.10	12.55	9.16	2.24	12.24	8.94	2.27
32	19	12.86	9.00	2.10	12.67	8.87	2.13	12.48	8.74	2.16	12.29	8.60	2.18	13.06	9.14	2.32	12.75	8.93	2.35
	22	13.34	8.94	2.18	13.15	8.81	2.21	12.96	8.68	2.24	12.77	8.55	2.26	13.57	9.09	2.41	13.26	8.88	2.44


Indoor	intake						Οι	ıtdoor ir	ntake ai	r ambie	ent temp	perature	e (D.B./	°C)					
air an	nbient		10°C			10°C			15°C			20°C			20°C			25°C	
tempe	rature	TC	SHC	IPT	TC	SHC	IPT	TC	SHC	IPT	TC	SHC	IPT	тс	SHC	IPT	TC	SHC	IPT
DB	WB	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW
	17	11.02	8.59	1.98	12.31	9.60	2.22	12.08	9.55	2.32	11.74	9.39	2.45	12.36	9.89	2.66	11.88	9.62	2.80
23	19	11.53	8.64	2.15	12.88	9.66	2.42	12.65	9.62	2.51	12.31	9.48	2.61	12.96	9.98	2.84	12.48	9.73	2.98
	22	12.04	8.67	2.30	13.45	9.69	2.58	13.22	9.65	2.67	12.88	9.53	2.77	13.56	10.03	3.01	13.08	9.81	3.15
	17	11.22	8.64	2.04	12.54	9.66	2.29	12.31	9.60	2.38	11.97	9.46	2.51	12.60	9.95	2.73	12.12	9.70	2.87
25	19	11.73	8.68	2.18	13.11	9.70	2.45	12.88	9.66	2.54	12.54	9.53	2.67	13.20	10.03	2.91	12.72	9.79	3.05
	22	12.34	8.76	2.32	13.79	9.79	2.61	13.57	9.77	2.70	13.22	9.65	2.83	13.92	10.16	3.08	13.44	9.95	3.22
	17	11.42	8.68	2.18	12.77	9.70	2.45	12.54	9.66	2.54	12.20	9.51	2.67	12.84	10.02	2.91	12.36	9.76	3.05
27	19	11.93	8.71	2.27	13.34	9.74	2.54	13.11	9.70	2.64	12.77	9.58	2.77	13.44	10.08	3.01	12.96	9.85	3.15
	22	12.55	8.78	2.41	14.02	9.82	2.70	13.79	9.79	2.80	13.45	9.69	2.90	14.16	10.20	3.15	13.68	9.99	3.29
	17	11.73	8.80	2.18	13.11	9.83	2.45	12.88	9.79	2.54	12.54	9.66	2.67	13.20	10.16	2.91	12.72	9.92	3.05
29	19	12.24	8.81	2.32	13.68	9.85	2.61	13.45	9.82	2.70	13.11	9.70	2.83	13.80	10.21	3.08	13.32	9.99	3.22
	22	12.75	8.80	2.50	14.25	9.83	2.80	14.02	9.82	2.90	13.68	9.71	3.03	14.40	10.22	3.29	13.92	10.02	3.36
	17	11.93	8.83	2.30	13.34	9.87	2.58	13.11	9.83	2.67	12.77	9.70	2.80	13.44	10.21	3.05	12.96	9.98	3.12
32	19	12.44	8.84	2.38	13.91	9.87	2.67	13.68	9.85	2.77	13.34	9.74	2.90	14.04	10.25	3.15	13.56	10.03	3.29
	22	12.95	8.81	2.47	14.48	9.85	2.77	14.25	9.83	2.87	13.91	9.74	2.99	14.64	10.25	3.26	14.16	10.05	3.40

Indoor	intake			Οι	ıtdoor ir	ntake ai	r ambie	ent temp	perature	e (D.B./	″°C)		
air an	nbient		30°C			35°C			40°C			43°C	
tempe	rature	TC	SHC	IPT	TC	SHC	IPT	TC	SHC	IPT	тс	SHC	IPT
DB	WB	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW
	17	11.40	9.46	2.98	10.92	9.28	3.15	10.32	8.98	3.36	9.84	8.76	3.54
23	19	12.00	9.60	3.15	11.52	9.45	3.33	10.92	9.17	3.54	10.44	8.98	3.71
	22	12.60	9.70	3.33	12.12	9.57	3.50	11.52	9.33	3.71	11.04	9.16	3.89
	17	11.64	9.54	3.05	11.16	9.37	3.22	10.56	9.08	3.43	10.08	8.87	3.61
25	19	12.24	9.67	3.22	11.76	9.53	3.40	11.16	9.26	3.61	10.68	9.08	3.78
	22	12.96	9.85	3.40	12.48	9.73	3.57	11.88	9.50	3.78	11.40	9.35	3.96
	17	11.88	9.62	3.22	11.40	9.46	3.40	10.80	9.18	3.61	10.32	8.98	3.78
27	19	12.48	9.73	3.33	12.00	9.60	3.50	11.40	9.35	3.71	10.92	9.17	3.89
	22	13.20	9.90	3.47	12.72	9.79	3.64	12.12	9.57	3.85	11.64	9.43	4.03
	17	12.24	9.79	3.22	11.76	9.64	3.40	11.16	9.37	3.61	10.68	9.18	3.75
29	19	12.84	9.89	3.40	12.36	9.76	3.57	11.76	9.53	3.78	11.28	9.36	3.92
	22	13.44	9.95	3.54	12.96	9.85	3.71	12.36	9.64	3.92	11.88	9.50	4.06
	17	12.48	9.86	3.29	12.00	9.72	3.47	11.40	9.58	3.54	10.92	9.28	3.85
32	19	13.08	9.94	3.47	12.60	9.83	3.64	12.00	9.60	3.85	11.52	9.45	4.03
	22	13.68	9.99	3.57	13.20	9.90	3.75	12.60	9.70	3.96	12.12	9.57	4.13

TC : Total Cooling Capacity SHC : Sensible Heat Capacity IPT : Power Consumption


Cooling capacity curve

Indoor inta	ake air					Ou	tdoor ir	ntake ai	r ambie	ent tem	oerature	e (D.B./	°C)				
ambie	ent	-15°C	-10°C	-5°C	0°C	0°C	5°C	10°C	10°C	15°C	20°C	20°C	25°C	30°C	35°C	40°C	43°C
tempera	ature	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	тс
DB	WB	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW
	17	11.52	11.33	11.14	10.94	11.63	11.22	11.02	12.31	12.08	11.74	12.36	11.88	11.40	10.92	10.32	9.84
23	19	12.00	11.81	11.62	11.42	12.14	11.83	11.53	12.88	12.65	12.31	12.96	12.48	12.00	11.52	10.92	10.44
	22	12.48	12.29	12.10	11.90	12.65	12.34	12.04	13.45	13.22	12.88	13.56	13.08	12.60	12.12	11.52	11.04
	17	11.71	11.52	11.33	11.14	11.83	11.53	11.22	12.54	12.31	11.97	12.60	12.12	11.64	11.16	10.56	10.08
25	19	12.19	12.00	11.81	11.62	12.34	12.04	11.73	13.11	12.88	12.54	13.20	12.72	12.24	11.76	11.16	10.68
	22	12.77	12.58	12.38	12.19	12.95	12.65	12.34	13.79	13.57	13.22	13.92	13.44	12.96	12.48	11.88	11.40
	17	11.90	11.71	11.52	11.33	12.04	11.73	11.42	12.77	12.54	12.20	12.84	12.36	11.88	11.40	10.80	10.32
27	19	12.38	12.19	12.00	11.81	12.55	12.24	11.93	13.34	13.11	12.77	13.44	12.96	12.48	12.00	11.40	10.92
	22	12.96	12.77	12.58	12.38	13.16	12.85	12.55	14.02	13.79	13.45	14.16	13.68	13.20	12.72	12.12	11.64
	17	12.19	12.00	11.81	11.62	12.34	12.04	11.73	13.11	12.88	12.54	13.20	12.72	12.24	11.76	11.16	10.68
29	19	12.67	12.48	12.29	12.10	12.85	12.55	12.24	13.68	13.45	13.11	13.80	13.32	12.84	12.36	11.76	11.28
	22	13.15	12.96	12.77	12.58	13.36	13.06	12.75	14.25	14.02	13.68	14.40	13.92	13.44	12.96	12.36	11.88
	17	12.38	12.19	12.00	11.81	12.55	12.24	11.93	13.34	13.11	12.77	13.44	12.96	12.48	12.00	11.40	10.92
32	19	12.86	12.67	12.48	12.29	13.06	12.75	12.44	13.91	13.68	13.34	14.04	13.56	13.08	12.60	12.00	11.52
	22	13.34	13.15	12.96	12.77	13.57	13.26	12.95	14.48	14.25	13.91	14.64	14.16	13.68	13.20	12.60	12.12

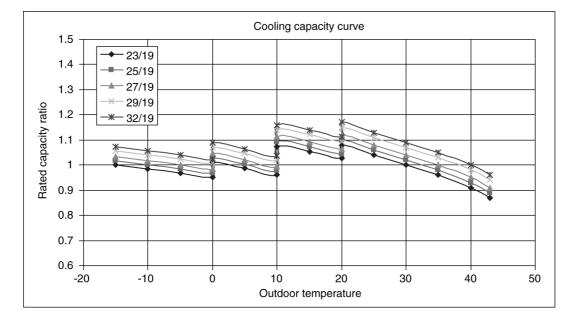

Cooling power consumption curve

Indoor int	ake air					Ou	itdoor ir	ntake ai	r ambie	ent temp	oerature	e (D.B./	°C)				
ambie	ent	-15°C	-10°C	-5°C	0°C	0°C	5°C	10°C	10°C	15°C	20°C	20°C	25°C	30°C	35°C	40°C	43°C
tempera	ature	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT
DB	WB	KW	KW	KW	KW	KW	КW	кw	KW	KW	KW	KW	KW	KW	КW	KW	KW
	17	1.70	1.72	1.75	1.78	1.89	1.92	1.98	2.22	2.32	2.45	2.66	2.80	2.98	3.15	3.36	3.54
23	19	1.86	1.89	1.91	1.94	2.07	2.10	2.15	2.42	2.51	2.61	2.84	2.98	3.15	3.33	3.54	3.71
	22	1.99	2.02	2.05	2.08	2.21	2.24	2.30	2.58	2.67	2.77	3.01	3.15	3.33	3.50	3.71	3.89
	17	1.75	1.78	1.81	1.83	1.95	1.98	2.04	2.29	2.38	2.51	2.73	2.87	3.05	3.22	3.43	3.61
25	19	1.89	1.91	1.94	1.97	2.10	2.12	2.18	2.45	2.54	2.67	2.91	3.05	3.22	3.40	3.61	3.78
	22	2.02	2.05	2.08	2.10	2.24	2.27	2.32	2.61	2.70	2.83	3.08	3.22	3.40	3.57	3.78	3.96
	17	1.89	1.91	1.94	1.97	2.10	2.12	2.18	2.45	2.54	2.67	2.91	3.05	3.22	3.40	3.61	3.78
27	19	1.97	1.99	2.02	2.05	2.18	2.21	2.27	2.54	2.64	2.77	3.01	3.15	3.33	3.50	3.71	3.89
	22	2.13	2.16	2.18	2.21	2.35	2.38	2.41	2.70	2.80	2.90	3.15	3.29	3.47	3.64	3.85	4.03
	17	1.91	1.94	1.97	1.99	2.12	2.15	2.18	2.45	2.54	2.67	2.91	3.05	3.22	3.40	3.61	3.75
29	19	2.05	2.08	2.10	2.13	2.27	2.30	2.32	2.61	2.70	2.83	3.08	3.22	3.40	3.57	3.78	3.92
	22	2.21	2.24	2.26	2.29	2.44	2.47	2.50	2.80	2.90	3.03	3.29	3.36	3.54	3.71	3.92	4.06
	17	2.02	2.05	2.08	2.10	2.24	2.27	2.30	2.58	2.67	2.80	3.05	3.12	3.29	3.47	3.54	3.85
32	19	2.10	2.13	2.16	2.18	2.32	2.35	2.38	2.67	2.77	2.90	3.15	3.29	3.47	3.64	3.85	4.03
	22	2.18	2.21	2.24	2.26	2.41	2.44	2.47	2.77	2.87	2.99	3.26	3.40	3.57	3.75	3.96	4.13

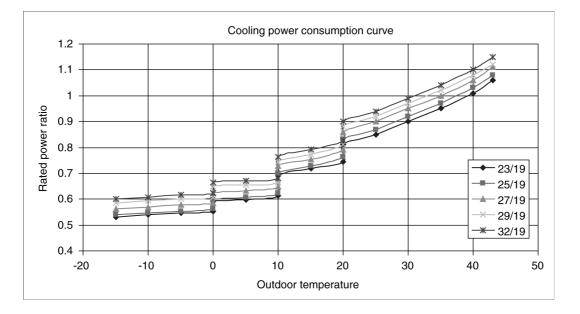

13.4.1.4. CS-F43DD2E5 CU-L43DBE5

Indoor	intake						Ou	itdoor ir	ntake ai	r ambie	ent temp	perature	e (D.B./	°C)					
air an	nbient		-15°C			-10°C			-5°C			0°C			0°C			5°C	
tempe	rature	TC	SHC	IPT	TC	SHC	IPT	TC	SHC	IPT	TC	SHC	IPT	TC	SHC	IPT	TC	SHC	IPT
DB	WB	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW
	17	12.96	9.98	2.18	12.74	9.81	2.22	12.53	9.65	2.25	12.31	9.48	2.29	13.08	10.07	2.44	12.62	9.72	2.47
23	19	13.50	9.99	2.39	13.28	9.83	2.43	13.07	9.67	2.46	12.85	9.51	2.49	13.66	10.10	2.66	13.31	9.85	2.69
	22	14.04	9.97	2.56	13.82	9.82	2.60	13.61	9.66	2.63	13.39	9.51	2.67	14.23	10.10	2.84	13.88	9.86	2.88
	17	13.18	10.01	2.25	12.96	9.85	2.29	12.74	9.69	2.32	12.53	9.52	2.36	13.31	10.12	2.51	12.97	9.85	2.55
25	19	13.72	10.01	2.43	13.50	9.86	2.46	13.28	9.70	2.49	13.07	9.54	2.53	13.88	10.14	2.69	13.54	9.88	2.73
	22	14.36	10.05	2.60	14.15	9.90	2.63	13.93	9.75	2.67	13.72	9.60	2.70	14.57	10.20	2.88	14.23	9.96	2.92
	17	13.39	10.04	2.43	13.18	9.88	2.46	12.96	9.72	2.49	12.74	9.56	2.53	13.54	10.16	2.69	13.20	9.90	2.73
27	19	13.93	10.03	2.53	13.72	9.88	2.56	13.50	9.72	2.60	13.28	9.56	2.63	14.11	10.16	2.80	13.77	9.91	2.84
	22	14.58	10.06	2.74	14.36	9.91	2.77	14.15	9.76	2.81	13.93	9.61	2.84	14.80	10.21	3.03	14.46	9.98	3.06
	17	13.72	10.15	2.46	13.50	9.99	2.49	13.28	9.83	2.53	13.07	9.67	2.56	13.88	10.27	2.73	13.54	10.02	2.77
29	19	14.26	10.12	2.63	14.04	9.97	2.67	13.82	9.82	2.70	13.61	9.66	2.74	14.46	10.27	2.92	14.11	10.02	2.95
	22	14.80	10.06	2.84	14.58	9.91	2.88	14.36	9.77	2.91	14.15	9.62	2.95	15.03	10.22	3.14	14.69	9.99	3.17
	17	13.93	10.17	2.60	13.72	10.01	2.63	13.50	9.86	2.67	13.28	9.70	2.70	14.11	10.30	2.88	13.77	10.05	2.92
32	19	14.47	10.13	2.70	14.26	9.98	2.74	14.04	9.83	2.77	13.82	9.68	2.81	14.69	10.28	2.99	14.34	10.04	3.03
	22	15.01	10.06	2.81	14.80	9.91	2.84	14.58	9.77	2.88	14.36	9.62	2.91	15.26	10.23	3.10	14.92	9.99	3.14


Indoor	intake						Οι	itdoor ir	ntake ai	r ambie	ent temp	perature	e (D.B./	°C)					
air an	nbient		10°C			10°C			15°C			20°C			20°C			25°C	
tempe	erature	тс	SHC	IPT	тс	SHC	IPT	TC	SHC	IPT	TC	SHC	IPT	TC	SHC	IPT	тс	SHC	IPT
DB	WB	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW
	17	12.39	9.67	2.55	13.85	10.80	2.86	13.59	10.74	2.98	13.21	10.57	3.15	13.91	11.12	3.42	13.37	10.83	3.60
23	19	12.97	9.73	2.77	14.49	10.87	3.11	14.24	10.82	3.23	13.85	10.67	3.35	14.58	11.23	3.65	14.04	10.95	3.83
	22	13.54	9.75	2.95	15.13	10.90	3.31	14.88	10.86	3.44	14.49	10.72	3.56	15.26	11.29	3.87	14.72	11.04	4.05
	17	12.62	9.72	2.62	14.11	10.86	2.94	13.85	10.80	3.06	13.47	10.64	3.23	14.18	11.20	3.51	13.64	10.91	3.69
25	19	13.20	9.77	2.80	14.75	10.91	3.15	14.49	10.87	3.27	14.11	10.72	3.44	14.85	11.29	3.74	14.31	11.02	3.92
	22	13.88	9.86	2.99	15.52	11.02	3.35	15.26	10.99	3.48	14.88	10.86	3.64	15.66	11.43	3.96	15.12	11.19	4.14
	17	12.85	9.77	2.80	14.36	10.92	3.15	14.11	10.86	3.27	13.72	10.70	3.44	14.45	11.27	3.74	13.91	10.98	3.92
27	19	13.43	9.80	2.92	15.01	10.95	3.27	14.75	10.91	3.39	14.36	10.77	3.56	15.12	11.34	3.87	14.58	11.08	4.05
	22	14.11	9.88	3.10	15.77	11.04	3.48	15.52	11.02	3.60	15.13	10.90	3.73	15.93	11.47	4.05	15.39	11.23	4.23
	17	13.20	9.90	2.80	14.75	11.06	3.15	14.49	11.01	3.27	14.11	10.86	3.44	14.85	11.43	3.74	14.31	11.16	3.92
29	19	13.77	9.91	2.99	15.39	11.08	3.35	15.13	11.05	3.48	14.75	10.91	3.64	15.53	11.49	3.96	14.99	11.24	4.14
	22	14.34	9.90	3.21	16.03	11.06	3.60	15.77	11.04	3.73	15.39	10.93	3.89	16.20	11.50	4.23	15.66	11.28	4.32
	17	13.43	9.94	2.95	15.01	11.10	3.31	14.75	11.06	3.44	14.36	10.92	3.60	15.12	11.49	3.92	14.58	11.23	4.01
32	19	14.00	9.94	3.06	15.65	11.11	3.44	15.39	11.08	3.56	15.01	10.95	3.73	15.80	11.53	4.05	15.26	11.29	4.23
	22	14.57	9.91	3.17	16.29	11.08	3.56	16.03	11.06	3.68	15.65	10.95	3.85	16.47	11.53	4.19	15.93	11.31	4.37

Indoor	intake			Ou	ıtdoor ir	ntake ai	r ambie	ent temp	oerature	e (D.B./	°C)		
air an	nbient		30°C			35°C			40°C			43°C	
tempe	erature	TC	SHC	IPT	тс	SHC	IPT	TC	SHC	IPT	TC	SHC	IPT
DB	WB	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW
	17	12.83	10.64	3.83	12.29	10.44	4.05	11.61	10.10	4.32	11.07	9.85	4.55
23	19	13.50	10.80	4.05	12.96	10.63	4.28	12.29	10.32	4.55	11.75	10.10	4.77
	22	14.18	10.91	4.28	13.64	10.77	4.50	12.96	10.50	4.77	12.42	10.31	5.00
	17	13.10	10.74	3.92	12.56	10.55	4.14	11.88	10.22	4.41	11.34	9.98	4.64
25	19	13.77	10.88	4.14	13.23	10.72	4.37	12.56	10.42	4.64	12.02	10.21	4.86
	22	14.58	11.08	4.37	14.04	10.95	4.59	13.37	10.69	4.86	12.83	10.52	5.09
	17	13.37	10.83	4.14	12.83	10.64	4.37	12.15	10.33	4.64	11.61	10.10	4.86
27	19	14.04	10.95	4.28	13.50	10.80	4.50	12.83	10.52	4.77	12.29	10.32	5.00
	22	14.85	11.14	4.46	14.31	11.02	4.68	13.64	10.77	4.95	13.10	10.61	5.18
	17	13.77	11.02	4.14	13.23	10.85	4.37	12.56	10.55	4.64	12.02	10.33	4.82
29	19	14.45	11.12	4.37	13.91	10.98	4.59	13.23	10.72	4.86	12.69	10.53	5.04
	22	15.12	11.19	4.55	14.58	11.08	4.77	13.91	10.85	5.04	13.37	10.69	5.22
	17	14.04	11.09	4.23	13.50	10.94	4.46	12.83	10.77	4.55	12.29	10.44	4.95
32	19	14.72	11.18	4.46	14.18	11.06	4.68	13.50	10.80	4.95	12.96	10.63	5.18
		15.39	11.23	4.59	14.85	11.14	4.82	14.18	10.91	5.09	13.64	10.77	5.31

TC : Total Cooling Capacity SHC : Sensible Heat Capacity IPT : Power Consumption


Cooling capacity curve

Indoor int	ake air					Ou	tdoor ir	ntake ai	r ambie	ent temp	oerature	e (D.B./	°C)				
ambie	ent	-15°C	-10°C	-5°C	0°C	0°C	5°C	10°C	10°C	15°C	20°C	20°C	25°C	30°C	35°C	40°C	43°C
tempera	ature	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	ТС
DB	WB	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW
	17	12.96	12.74	12.53	12.31	13.08	12.62	12.39	13.85	13.59	13.21	13.91	13.37	12.83	12.29	11.61	11.07
23	19	13.50	13.28	13.07	12.85	13.66	13.31	12.97	14.49	14.24	13.85	14.58	14.04	13.50	12.96	12.29	11.75
	22	14.04	13.82	13.61	13.39	14.23	13.88	13.54	15.13	14.88	14.49	15.26	14.72	14.18	13.64	12.96	12.42
	17	13.18	12.96	12.74	12.53	13.31	12.97	12.62	14.11	13.85	13.47	14.18	13.64	13.10	12.56	11.88	11.34
25	19	13.72	13.50	13.28	13.07	13.88	13.54	13.20	14.75	14.49	14.11	14.85	14.31	13.77	13.23	12.56	12.02
	22	14.36	14.15	13.93	13.72	14.57	14.23	13.88	15.52	15.26	14.88	15.66	15.12	14.58	14.04	13.37	12.83
	17	13.39	13.18	12.96	12.74	13.54	13.20	12.85	14.36	14.11	13.72	14.45	13.91	13.37	12.83	12.15	11.61
27	19	13.93	13.72	13.50	13.28	14.11	13.77	13.43	15.01	14.75	14.36	15.12	14.58	14.04	13.50	12.83	12.29
	22	14.58	14.36	14.15	13.93	14.80	14.46	14.11	15.77	15.52	15.13	15.93	15.39	14.85	14.31	13.64	13.10
	17	13.72	13.50	13.28	13.07	13.88	13.54	13.20	14.75	14.49	14.11	14.85	14.31	13.77	13.23	12.56	12.02
29	19	14.26	14.04	13.82	13.61	14.46	14.11	13.77	15.39	15.13	14.75	15.53	14.99	14.45	13.91	13.23	12.69
	22	14.80	14.58	14.36	14.15	15.03	14.69	14.34	16.03	15.77	15.39	16.20	15.66	15.12	14.58	13.91	13.37
	17	13.93	13.72	13.50	13.28	14.11	13.77	13.43	15.01	14.75	14.36	15.12	14.58	14.04	13.50	12.83	12.29
32	19	14.47	14.26	14.04	13.82	14.69	14.34	14.00	15.65	15.39	15.01	15.80	15.26	14.72	14.18	13.50	12.96
	22	15.01	14.80	14.58	14.36	15.26	14.92	14.57	16.29	16.03	15.65	16.47	15.93	15.39	14.85	14.18	13.64

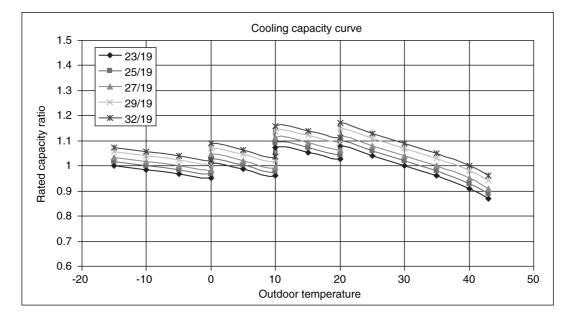

Cooling power consumption curve

Indoor int	ake air					Ou	itdoor ir	ntake ai	r ambie	ent temp	oerature	e (D.B./	°C)				
ambie	ent	-15°C	-10°C	-5°C	0°C	0°C	5°C	10°C	10°C	15°C	20°C	20°C	25°C	30°C	35°C	40°C	43°C
tempera	ature	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT
DB	WB	KW	KW	KW	KW	KW	KW	КW	KW	KW	KW	KW	KW	KW	КW	KW	KW
	17	2.18	2.22	2.25	2.29	2.44	2.47	2.55	2.86	2.98	3.15	3.42	3.60	3.83	4.05	4.32	4.55
23	19	2.39	2.43	2.46	2.49	2.66	2.69	2.77	3.11	3.23	3.35	3.65	3.83	4.05	4.28	4.55	4.77
	22	2.56	2.60	2.63	2.67	2.84	2.88	2.95	3.31	3.44	3.56	3.87	4.05	4.28	4.50	4.77	5.00
	17	2.25	2.29	2.32	2.36	2.51	2.55	2.62	2.94	3.06	3.23	3.51	3.69	3.92	4.14	4.41	4.64
25	19	2.43	2.46	2.49	2.53	2.69	2.73	2.80	3.15	3.27	3.44	3.74	3.92	4.14	4.37	4.64	4.86
	22	2.60	2.63	2.67	2.70	2.88	2.92	2.99	3.35	3.48	3.64	3.96	4.14	4.37	4.59	4.86	5.09
	17	2.43	2.46	2.49	2.53	2.69	2.73	2.80	3.15	3.27	3.44	3.74	3.92	4.14	4.37	4.64	4.86
27	19	2.53	2.56	2.60	2.63	2.80	2.84	2.92	3.27	3.39	3.56	3.87	4.05	4.28	4.50	4.77	5.00
	22	2.74	2.77	2.81	2.84	3.03	3.06	3.10	3.48	3.60	3.73	4.05	4.23	4.46	4.68	4.95	5.18
	17	2.46	2.49	2.53	2.56	2.73	2.77	2.80	3.15	3.27	3.44	3.74	3.92	4.14	4.37	4.64	4.82
29	19	2.63	2.67	2.70	2.74	2.92	2.95	2.99	3.35	3.48	3.64	3.96	4.14	4.37	4.59	4.86	5.04
	22	2.84	2.88	2.91	2.95	3.14	3.17	3.21	3.60	3.73	3.89	4.23	4.32	4.55	4.77	5.04	5.22
	17	2.60	2.63	2.67	2.70	2.88	2.92	2.95	3.31	3.44	3.60	3.92	4.01	4.23	4.46	4.55	4.95
32	19	2.70	2.74	2.77	2.81	2.99	3.03	3.06	3.44	3.56	3.73	4.05	4.23	4.46	4.68	4.95	5.18
	22	2.81	2.84	2.88	2.91	3.10	3.14	3.17	3.56	3.68	3.85	4.19	4.37	4.59	4.82	5.09	5.31

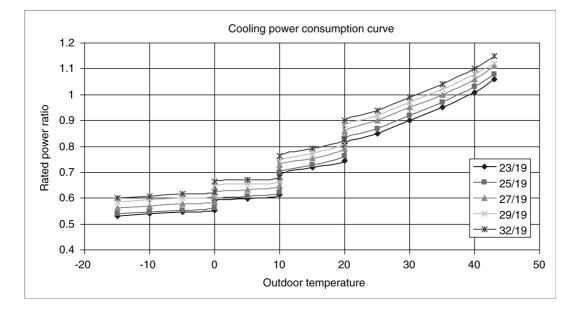

13.4.1.5. CS-F50DD2E5 CU-L50DBE8

Indoor	intake						Ou	itdoor ir	ntake ai	r ambie	ent tem	oerature	e (D.B./	°C)					
air an	nbient		-15°C			-10°C			-5°C			0°C			0°C			5°C	
tempe	rature	TC	SHC	IPT	TC	SHC	IPT	TC	SHC	IPT	TC	SHC	IPT	TC	SHC	IPT	TC	SHC	IPT
DB	WB	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW
	17	15.36	11.83	2.62	15.10	11.63	2.66	14.85	11.43	2.70	14.59	11.24	2.74	15.50	11.94	2.92	14.96	11.52	2.97
23	19	16.00	11.84	2.87	15.74	11.65	2.91	15.49	11.46	2.95	15.23	11.27	2.99	16.18	11.98	3.19	15.78	11.67	3.23
	22	16.64	11.81	3.08	16.38	11.63	3.12	16.13	11.45	3.16	15.87	11.27	3.20	16.86	11.97	3.41	16.46	11.68	3.45
	17	15.62	11.87	2.70	15.36	11.67	2.74	15.10	11.48	2.79	14.85	11.28	2.83	15.78	11.99	3.01	15.37	11.68	3.06
25	19	16.26	11.87	2.91	16.00	11.68	2.95	15.74	11.49	2.99	15.49	11.31	3.04	16.46	12.01	3.23	16.05	11.72	3.28
	22	17.02	11.92	3.12	16.77	11.74	3.16	16.51	11.56	3.20	16.26	11.38	3.24	17.27	12.09	3.45	16.86	11.80	3.50
	17	15.87	11.90	2.91	15.62	11.71	2.95	15.36	11.52	2.99	15.10	11.33	3.04	16.05	12.04	3.23	15.64	11.73	3.28
27	19	16.51	11.89	3.04	16.26	11.70	3.08	16.00	11.52	3.12	15.74	11.34	3.16	16.73	12.04	3.37	16.32	11.75	3.41
	22	17.28	11.92	3.28	17.02	11.75	3.33	16.77	11.57	3.37	16.51	11.39	3.41	17.54	12.11	3.63	17.14	11.82	3.68
	17	16.26	12.03	2.95	16.00	11.84	2.99	15.74	11.65	3.04	15.49	11.46	3.08	16.46	12.18	3.28	16.05	11.88	3.32
29	19	16.90	12.00	3.16	16.64	11.81	3.20	16.38	11.63	3.24	16.13	11.45	3.28	17.14	12.17	3.50	16.73	11.88	3.54
	22	17.54	11.92	3.41	17.28	11.75	3.45	17.02	11.58	3.49	16.77	11.40	3.53	17.82	12.11	3.76	17.41	11.84	3.81
	17	16.51	12.05	3.12	16.26	11.87	3.16	16.00	11.68	3.20	15.74	11.49	3.24	16.73	12.21	3.45	16.32	11.91	3.50
32	19	17.15	12.01	3.24	16.90	11.83	3.28	16.64	11.65	3.33	16.38	11.47	3.37	17.41	12.19	3.59	17.00	11.90	3.63
	22	17.79	11.92	3.37	17.54	11.75	3.41	17.28	11.58	3.45	17.02	11.41	3.49	18.09	12.12	3.72	17.68	11.85	3.76


Indoor	intake						Οι	itdoor ir	ntake ai	r ambie	ent temp	perature	e (D.B./	°C)					
air an	nbient		10°C			10°C			15°C			20°C			20°C			25°C	
tempe	rature	TC	SHC	IPT	TC	SHC	IPT	TC	SHC	IPT	TC	SHC	IPT	тс	SHC	IPT	TC	SHC	IPT
DB	WB	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW
	17	14.69	11.46	3.06	16.42	12.80	3.43	16.11	12.73	3.58	15.66	12.52	3.78	16.48	13.18	4.10	15.84	12.83	4.32
23	19	15.37	11.53	3.32	17.18	12.88	3.73	16.87	12.82	3.88	16.42	12.64	4.02	17.28	13.31	4.37	16.64	12.98	4.59
	22	16.05	11.55	3.54	17.94	12.91	3.97	17.63	12.87	4.12	17.18	12.71	4.27	18.08	13.38	4.64	17.44	13.08	4.86
	17	14.96	11.52	3.14	16.72	12.87	3.53	16.42	12.80	3.68	15.96	12.61	3.88	16.80	13.27	4.21	16.16	12.93	4.43
25	19	15.64	11.57	3.37	17.48	12.94	3.78	17.18	12.88	3.92	16.72	12.71	4.12	17.60	13.38	4.48	16.96	13.06	4.70
	22	16.46	11.68	3.59	18.39	13.06	4.02	18.09	13.02	4.17	17.63	12.87	4.37	18.56	13.55	4.75	17.92	13.26	4.97
	17	15.23	11.58	3.37	17.02	12.94	3.78	16.72	12.87	3.92	16.26	12.69	4.12	17.12	13.35	4.48	16.48	13.02	4.70
27	19	15.91	11.62	3.50	17.78	12.98	3.92	17.48	12.94	4.07	17.02	12.77	4.27	17.92	13.44	4.64	17.28	13.13	4.86
	22	16.73	11.71	3.72	18.70	13.09	4.17	18.39	13.06	4.32	17.94	12.91	4.47	18.88	13.59	4.86	18.24	13.32	5.08
	17	15.64	11.73	3.37	17.48	13.11	3.78	17.18	13.05	3.92	16.72	12.87	4.12	17.60	13.55	4.48	16.96	13.23	4.70
29	19	16.32	11.75	3.59	18.24	13.13	4.02	17.94	13.09	4.17	17.48	12.94	4.37	18.40	13.62	4.75	17.76	13.32	4.97
	22	17.00	11.73	3.85	19.00	13.11	4.32	18.70	13.09	4.47	18.24	12.95	4.67	19.20	13.63	5.08	18.56	13.36	5.18
	17	15.91	11.77	3.54	17.78	13.16	3.97	17.48	13.11	4.12	17.02	12.94	4.32	17.92	13.62	4.70	17.28	13.31	4.81
32	19	16.59	11.78	3.68	18.54	13.17	4.12	18.24	13.13	4.27	17.78	12.98	4.47	18.72	13.67	4.86	18.08	13.38	5.08
	22	17.27	11.74	3.81	19.30	13.13	4.27	19.00	13.11	4.42	18.54	12.98	4.62	19.52	13.66	5.02	18.88	13.40	5.24

Indoor	intake			Ou	itdoor ir	ntake ai	r ambie	ent tem	oerature	e (D.B./	°C)		
air an	nbient		30°C			35°C			40°C			43°C	
tempe	erature	TC	SHC	IPT	TC	SHC	IPT	тс	SHC	IPT	тс	SHC	IPT
DB	WB	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW
	17	15.20	12.62	4.59	14.56	12.38	4.86	13.76	11.97	5.18	13.12	11.68	5.45
23	19	16.00	12.80	4.86	15.36	12.60	5.13	14.56	12.23	5.45	13.92	11.97	5.72
	22	16.80	12.94	5.13	16.16	12.77	5.40	15.36	12.44	5.72	14.72	12.22	5.99
	17	15.52	12.73	4.70	14.88	12.50	4.97	14.08	12.11	5.29	13.44	11.83	5.56
25	19	16.32	12.89	4.97	15.68	12.70	5.24	14.88	12.35	5.56	14.24	12.10	5.83
	22	17.28	13.13	5.24	16.64	12.98	5.51	15.84	12.67	5.83	15.20	12.46	6.10
	17	15.84	12.83	4.97	15.20	12.62	5.24	14.40	12.24	5.56	13.76	11.97	5.83
27	19	16.64	12.98	5.13	16.00	12.80	5.40	15.20	12.46	5.72	14.56	12.23	5.99
	22	17.60	13.20	5.35	16.96	13.06	5.62	16.16	12.77	5.94	15.52	12.57	6.21
	17	16.32	13.06	4.97	15.68	12.86	5.24	14.88	12.50	5.56	14.24	12.25	5.78
29	19	17.12	13.18	5.24	16.48	13.02	5.51	15.68	12.70	5.83	15.04	12.48	6.05
	22	17.92	13.26	5.45	17.28	13.13	5.72	16.48	12.85	6.05	15.84	12.67	6.26
	17	16.64	13.15	5.08	16.00	12.96	5.35	15.20	12.77	5.45	14.56	12.38	5.94
32	19	17.44	13.25	5.35	16.80	13.10	5.62	16.00	12.80	5.94	15.36	12.60	6.21
	22	18.24	13.32	5.51	17.60	13.20	5.78	16.80	12.94	6.10	16.16	12.77	6.37

TC : Total Cooling Capacity SHC : Sensible Heat Capacity IPT : Power Consumption


Cooling capacity curve

Indoor inta	ake air					Ou	tdoor ir	ntake ai	ir ambie	ent tem	oerature	e (D.B./	°C)				
ambie	ent	-15°C	-10°C	-5°C	0°C	0°C	5°C	10°C	10°C	15°C	20°C	20°C	25°C	30°C	35°C	40°C	43°C
tempera	ature	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	ТС
DB	WB	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW
	17	15.36	15.10	14.85	14.59	15.50	14.96	14.69	16.42	16.11	15.66	16.48	15.84	15.20	14.56	13.76	13.12
23	19	16.00	15.74	15.49	15.23	16.18	15.78	15.37	17.18	16.87	16.42	17.28	16.64	16.00	15.36	14.56	13.92
	22	16.64	16.38	16.13	15.87	16.86	16.46	16.05	17.94	17.63	17.18	18.08	17.44	16.80	16.16	15.36	14.72
	17	15.62	15.36	15.10	14.85	15.78	15.37	14.96	16.72	16.42	15.96	16.80	16.16	15.52	14.88	14.08	13.44
25	19	16.26	16.00	15.74	15.49	16.46	16.05	15.64	17.48	17.18	16.72	17.60	16.96	16.32	15.68	14.88	14.24
	22	17.02	16.77	16.51	16.26	17.27	16.86	16.46	18.39	18.09	17.63	18.56	17.92	17.28	16.64	15.84	15.20
	17	15.87	15.62	15.36	15.10	16.05	15.64	15.23	17.02	16.72	16.26	17.12	16.48	15.84	15.20	14.40	13.76
27	19	16.51	16.26	16.00	15.74	16.73	16.32	15.91	17.78	17.48	17.02	17.92	17.28	16.64	16.00	15.20	14.56
	22	17.28	17.02	16.77	16.51	17.54	17.14	16.73	18.70	18.39	17.94	18.88	18.24	17.60	16.96	16.16	15.52
	17	16.26	16.00	15.74	15.49	16.46	16.05	15.64	17.48	17.18	16.72	17.60	16.96	16.32	15.68	14.88	14.24
29	19	16.90	16.64	16.38	16.13	17.14	16.73	16.32	18.24	17.94	17.48	18.40	17.76	17.12	16.48	15.68	15.04
	22	17.54	17.28	17.02	16.77	17.82	17.41	17.00	19.00	18.70	18.24	19.20	18.56	17.92	17.28	16.48	15.84
	17	16.51	16.26	16.00	15.74	16.73	16.32	15.91	17.78	17.48	17.02	17.92	17.28	16.64	16.00	15.20	14.56
32	19	17.15	16.90	16.64	16.38	17.41	17.00	16.59	18.54	18.24	17.78	18.72	18.08	17.44	16.80	16.00	15.36
	22	17.79	17.54	17.28	17.02	18.09	17.68	17.27	19.30	19.00	18.54	19.52	18.88	18.24	17.60	16.80	16.16

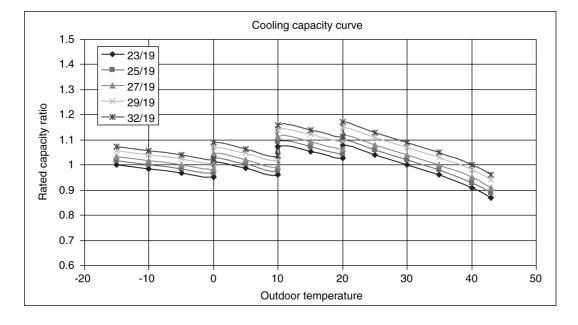

Cooling power consumption curve

Indoor int	ake air					Ou	itdoor ir	ntake ai	r ambie	ent temp	perature	e (D.B./	°C)				
ambie	ent	-15°C	-10°C	-5°C	0°C	0°C	5°C	10°C	10°C	15°C	20°C	20°C	25°C	30°C	35°C	40°C	43°C
tempera	ature	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT
DB	WB	KW	KW	KW	KW	KW	KW	КW	KW	KW	KW	KW	KW	KW	КW	KW	KW
	17	2.62	2.66	2.70	2.74	2.92	2.97	3.06	3.43	3.58	3.78	4.10	4.32	4.59	4.86	5.18	5.45
23	19	2.87	2.91	2.95	2.99	3.19	3.23	3.32	3.73	3.88	4.02	4.37	4.59	4.86	5.13	5.45	5.72
	22	3.08	3.12	3.16	3.20	3.41	3.45	3.54	3.97	4.12	4.27	4.64	4.86	5.13	5.40	5.72	5.99
	17	2.70	2.74	2.79	2.83	3.01	3.06	3.14	3.53	3.68	3.88	4.21	4.43	4.70	4.97	5.29	5.56
25	19	2.91	2.95	2.99	3.04	3.23	3.28	3.37	3.78	3.92	4.12	4.48	4.70	4.97	5.24	5.56	5.83
	22	3.12	3.16	3.20	3.24	3.45	3.50	3.59	4.02	4.17	4.37	4.75	4.97	5.24	5.51	5.83	6.10
	17	2.91	2.95	2.99	3.04	3.23	3.28	3.37	3.78	3.92	4.12	4.48	4.70	4.97	5.24	5.56	5.83
27	19	3.04	3.08	3.12	3.16	3.37	3.41	3.50	3.92	4.07	4.27	4.64	4.86	5.13	5.40	5.72	5.99
	22	3.28	3.33	3.37	3.41	3.63	3.68	3.72	4.17	4.32	4.47	4.86	5.08	5.35	5.62	5.94	6.21
	17	2.95	2.99	3.04	3.08	3.28	3.32	3.37	3.78	3.92	4.12	4.48	4.70	4.97	5.24	5.56	5.78
29	19	3.16	3.20	3.24	3.28	3.50	3.54	3.59	4.02	4.17	4.37	4.75	4.97	5.24	5.51	5.83	6.05
	22	3.41	3.45	3.49	3.53	3.76	3.81	3.85	4.32	4.47	4.67	5.08	5.18	5.45	5.72	6.05	6.26
	17	3.12	3.16	3.20	3.24	3.45	3.50	3.54	3.97	4.12	4.32	4.70	4.81	5.08	5.35	5.45	5.94
32	19	3.24	3.28	3.33	3.37	3.59	3.63	3.68	4.12	4.27	4.47	4.86	5.08	5.35	5.62	5.94	6.21
	22	3.37	3.41	3.45	3.49	3.72	3.76	3.81	4.27	4.42	4.62	5.02	5.24	5.51	5.78	6.10	6.37

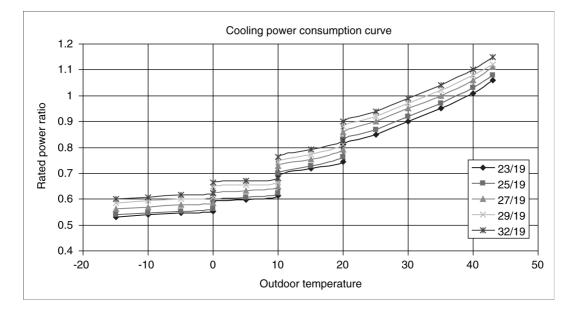


13.4.2. Heating performance

Model name	Max heatir	ng capacity
	Max capacity (kw)	Max power consumption (kw)
CS-F24DD2E5 / CU-L24DBE5	7.5	3.15
CS-F28DD2E5 / CU-L28DBE5	8.5	3.25
CS-F34DD2E5 / CU-L34DBE5	13.5	4.3
CS-F43DD2E5 / CU-L43DBE5	15.5	5.1
CS-F50DD2E5 / CU-L50DBE8	18	6.1

1. Heating capacity when the unit is frosted over or while being defrosted will vary depending on outdoor temperature and the frosting.


- 2. Heating capacity must be compensated because it does not take into account the capacity drop incurred when the unit is frosted over and while it is being defrosted.
- 3. Therefore, to obtain the integral heating capacity in consideration overfrosting and defrost operations.
- 4. Heating capacity must be multiplied by the compensation coefficient below.

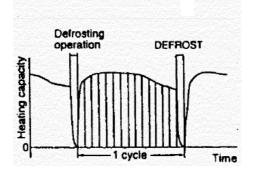

13.4.2.1. CS-F24DD2E5 CU-L24DBE5

Heating capacity curve


Indoor intake					Ou	tdoor ir	ntake ai	r ambie	ent temp	perature	e (D.B./	°C)				
air ambient	-20°C	-15°C	-10°C	-5°C	-5°C	0°C	0°C	2°C	5°C	5°C	7°C	10°C	10°C	15°C	15°C	18°C
temperature	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC
DB	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW
15	4.56	5.35	5.97	6.58	6.19	6.97	6.85	7.32	7.72	7.43	7.95	8.33	7.73	8.27	7.86	8.16
20	4.18	4.91	5.53	6.14	5.78	6.55	6.46	6.85	7.25	6.98	7.50	7.95	7.34	7.88	7.57	7.86
25	3.83	4.56	5.18	5.70	5.36	6.22	6.06	6.54	6.69	6.53	7.13	7.50	6.95	7.49	7.20	7.57

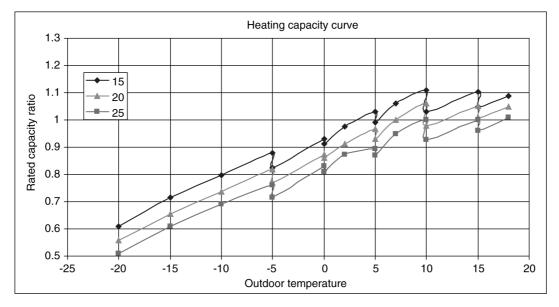

			Ou	tdoor in	take air	ambient	t temper	ature (D.B./ °C)	
	-20°C	-15°C	-10°C	-5°C	0°C	2°C	5°C	7°C	10°C	15°C	>15°C
Heating capacity compensation coefficient	0.93	0.93	0.93	0.92	0.84	0.88	0.96	1	1	1	1

Heating power consumption curve

Indoor intake					Ou	itdoor ir	ntake ai	r ambie	ent temp	perature	e (D.B./	°C)				
air ambient	-20°C	-15°C	-10°C	-5°C	-5°C	0°C	0°C	2°C	5°C	5°C	7°C	10°C	10°C	15°C	15°C	18°C
temperature	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT
DB	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW
15	3.07	3.28	3.44	3.56	3.33	3.45	3.18	3.18	3.28	2.93	2.99	3.18	2.90	3.02	2.95	3.01
20	3.24	3.44	3.60	3.73	3.53	3.64	3.35	3.39	3.42	3.09	3.15	3.31	3.02	3.17	3.12	3.18
25	3.40	3.60	3.81	3.97	3.76	3.87	3.53	3.56	3.60	3.28	3.34	3.43	3.17	3.38	3.23	3.29

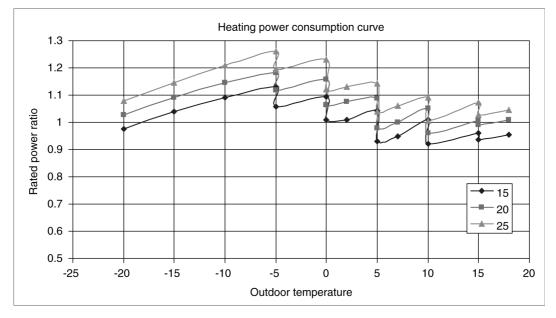


			Outdoo	r intake	air amb	pient ten	nperatu	e (D.B./	(°C)	
	-20°C	-15°C	-10°C	-5°C	0°C	5°C	7°C	10°C	15°C	>15°C
Heating capacity compensation coefficient	0.93	0.93	0.93	0.92	0.86	0.97	1	1	1	1

13.4.2.2. CS-F28DD2E5 CU-L28DBE5

Heating capacity curve


Indoor intake					Ou	itdoor ir	ntake ai	r ambie	ent temp	perature	e (D.B./	°C)				
air ambient	-20°C	-15°C	-10°C	-5°C	-5°C	0°C	0°C	2°C	5°C	5°C	7°C	10°C	10°C	15°C	15°C	18°C
temperature	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC
DB	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW
15	5.17	6.07	6.76	7.46	7.01	7.90	7.76	8.30	8.75	8.42	9.01	9.44	8.76	9.37	8.91	9.25
20	4.73	5.57	6.27	6.96	6.55	7.43	7.32	7.76	8.21	7.91	8.50	9.01	8.32	8.93	8.58	8.91
25	4.34	5.17	5.87	6.46	6.08	7.04	6.87	7.41	7.59	7.40	8.08	8.50	7.88	8.49	8.16	8.58

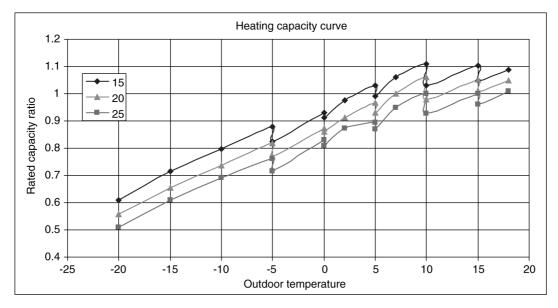

			Ou	tdoor in	take air	ambient	t temper	ature (D	D.B./ °C)	_
	-20°C	-15°C	-10°C	-5°C	0°C	2°C	5°C	7°C	10°C	15°C	>15°C
Heating capacity compensation coefficient	0.93	0.93	0.93	0.92	0.84	0.88	0.96	1	1	1	1

Heating power consumption curve

Indoor intake					Ou	itdoor ir	ntake ai	r ambie	ent temp	oerature	e (D.B./	°C)				
air ambient	-20°C	-15°C	-10°C	-5°C	-5°C	0°C	0°C	2°C	5°C	5°C	7°C	10°C	10°C	15°C	15°C	18°C
temperature	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT
DB	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW
15	3.17	3.38	3.55	3.68	3.44	3.56	3.28	3.28	3.39	3.02	3.09	3.28	2.99	3.12	3.04	3.10
20	3.34	3.55	3.72	3.84	3.64	3.76	3.46	3.49	3.53	3.19	3.25	3.41	3.12	3.27	3.22	3.28
25	3.51	3.72	3.93	4.10	3.88	4.00	3.64	3.68	3.71	3.38	3.45	3.54	3.27	3.49	3.33	3.39

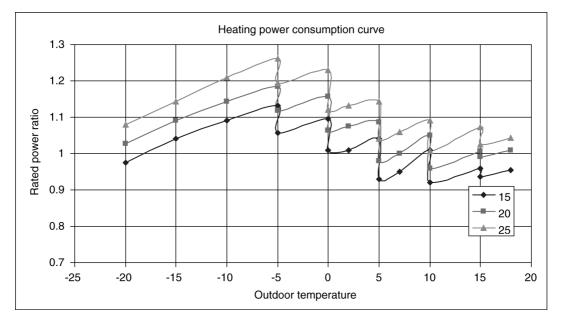


			Outdoo	r intake	air amb	pient ten	nperatui	e (D.B./	(°C)	
	-20°C	-15°C	-10°C	-5°C	0°C	5°C	7°C	10°C	15°C	>15°C
Heating capacity compensation coefficient	0.93	0.93	0.93	0.92	0.86	0.97	1	1	1	1

13.4.2.3. CS-F34DD2E5 CU-L34DBE5

Heating capacity curve


Indoor intake					Ou	itdoor ir	ntake ai	r ambie	ent temp	perature	e (D.B./	°C)				
air ambient	-20°C	-15°C	-10°C	-5°C	-5°C	0°C	0°C	2°C	5°C	5°C	7°C	10°C	10°C	15°C	15°C	18°C
temperature	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	тс	TC
DB	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW
15	8.21	9.63	10.74	11.85	11.14	12.55	12.33	13.18	13.89	13.37	14.31	14.99	13.91	14.88	14.16	14.69
20	7.52	8.85	9.95	11.06	10.40	11.79	11.62	12.33	13.04	12.56	13.50	14.31	13.21	14.18	13.63	14.16
25	6.89	8.21	9.32	10.27	9.65	11.19	10.91	11.77	12.05	11.75	12.83	13.50	12.51	13.49	12.97	13.63

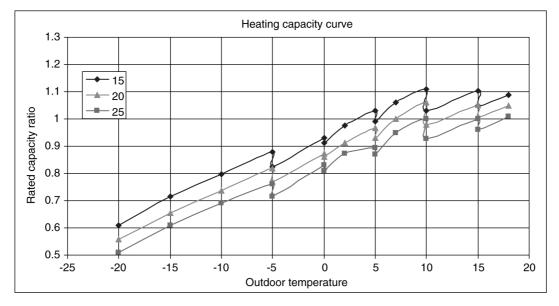

			Ou	tdoor in	take air	ambient	t temper	ature (D.B./ °C)	
	-20°C	-15°C	-10°C	-5°C	0°C	2°C	5°C	7°C	10°C	15°C	>15°C
Heating capacity compensation coefficient	0.93	0.93	0.93	0.92	0.84	0.88	0.96	1	1	1	1

Heating power consumption curve

Indoor intake					Ou	tdoor ir	ntake ai	r ambie	ent temp	oerature	e (D.B./	°C)				
air ambient	-20°C	-15°C	-10°C	-5°C	-5°C	0°C	0°C	2°C	5°C	5°C	7°C	10°C	10°C	15°C	15°C	18°C
temperature	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT
DB	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW
15	4.19	4.47	4.70	4.86	4.55	4.71	4.33	4.33	4.48	4.00	4.09	4.34	3.96	4.13	4.02	4.10
20	4.42	4.70	4.92	5.09	4.81	4.97	4.58	4.62	4.67	4.21	4.30	4.52	4.13	4.33	4.26	4.33
25	4.64	4.92	5.20	5.42	5.13	5.29	4.82	4.86	4.91	4.47	4.56	4.69	4.33	4.62	4.41	4.49

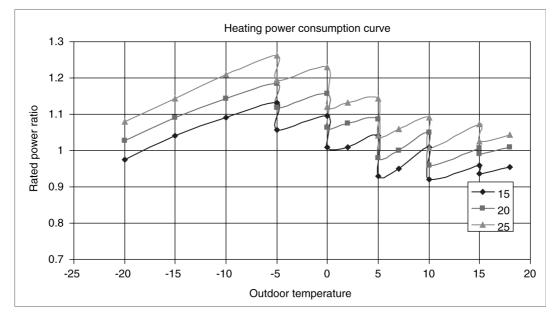


			Outdoo	r intake	air amb	pient ter	nperatu	e (D.B./	(°C)	
	-20°C	-15°C	-10°C	-5°C	0°C	5°C	7°C	10°C	15°C	>15°C
Heating capacity compensation coefficient	0.93	0.93	0.93	0.92	0.86	0.97	1	1	1	1

13.4.2.4. CS-F43DD2E5 CU-L43DBE5

Heating capacity curve


Indoor intake					Ou	itdoor ir	ntake ai	r ambie	ent temp	perature	e (D.B./	°C)				
air ambient	-20°C	-15°C	-10°C	-5°C	-5°C	0°C	0°C	2°C	5°C	5°C	7°C	10°C	10°C	15°C	15°C	18°C
temperature	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC
DB	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW
15	9.43	11.06	12.33	13.60	12.79	14.41	14.16	15.14	15.95	15.35	16.43	17.21	15.97	17.08	16.25	16.86
20	8.63	10.16	11.43	12.69	11.94	13.54	13.35	14.16	14.97	14.42	15.50	16.43	15.17	16.28	15.65	16.25
25	7.91	9.43	10.70	11.79	11.08	12.85	12.53	13.51	13.83	13.49	14.73	15.50	14.37	15.49	14.89	15.65

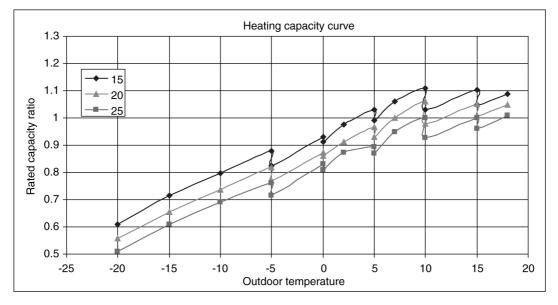

		_	Ou	tdoor in	take air	ambient	t temper	ature (D	D.B./ °C)		
	-20°C	-15°C	-10°C	-5°C	0°C	2°C	5°C	7°C	10°C	15°C	>15°C
Heating capacity compensation coefficient	0.93	0.93	0.93	0.92	0.84	0.88	0.96	1	1	1	1

Heating power consumption curve

Indoor intake					Ou	itdoor ir	ntake ai	r ambie	ent temp	oerature	e (D.B./	°C)				
air ambient	-20°C	-15°C	-10°C	-5°C	-5°C	0°C	0°C	2°C	5°C	5°C	7°C	10°C	10°C	15°C	15°C	18°C
temperature	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT
DB	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW
15	4.97	5.30	5.57	5.77	5.39	5.58	5.14	5.14	5.31	4.74	4.85	5.15	4.70	4.89	4.77	4.87
20	5.24	5.57	5.83	6.03	5.71	5.90	5.43	5.48	5.54	5.00	5.10	5.36	4.89	5.14	5.05	5.14
25	5.50	5.83	6.17	6.43	6.08	6.27	5.71	5.77	5.83	5.30	5.41	5.56	5.14	5.47	5.23	5.32

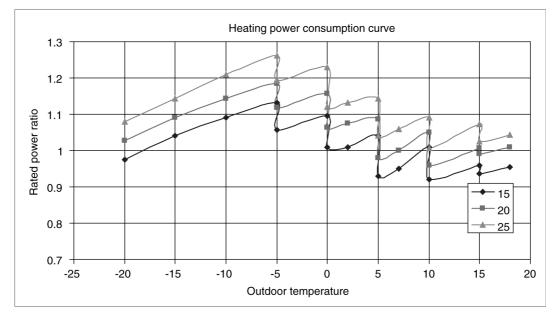


			Outdoo	r intake	air amb	pient ten	nperatu	e (D.B./	(°C)	
	-20°C	-15°C	-10°C	-5°C	0°C	5°C	7°C	10°C	15°C	>15°C
Heating capacity compensation coefficient	0.93	0.93	0.93	0.92	0.86	0.97	1	1	1	1

13.4.2.5. CS-F50DD2E5 CU-L50DBE8

Heating capacity curve


Indoor intake					Ou	itdoor ir	ntake ai	r ambie	ent temp	perature	e (D.B./	°C)				
air ambient	-20°C	-15°C	-10°C	-5°C	-5°C	0°C	0°C	2°C	5°C	5°C	7°C	10°C	10°C	15°C	15°C	18°C
temperature	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC	TC
DB	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW
15	10.95	12.85	14.32	15.80	14.85	16.73	16.44	17.58	18.52	17.82	19.08	19.98	18.54	19.84	18.87	19.58
20	10.02	11.79	13.27	14.74	13.86	15.72	15.50	16.44	17.39	16.74	18.00	19.08	17.61	18.91	18.17	18.87
25	9.19	10.95	12.43	13.69	12.87	14.92	14.55	15.69	16.07	15.66	17.10	18.00	16.69	17.98	17.29	18.17

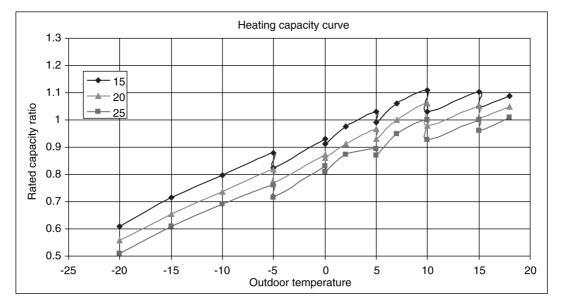

			Ou	tdoor in	take air	ambient	t temper	ature (D	D.B./ °C)	
	-20°C	-15°C	-10°C	-5°C	0°C	2°C	5°C	7°C	10°C	15°C	>15°C
Heating capacity compensation	0.93	0.93	0.93	0.92	0.84	0.88	0.96	1	1	1	1
coefficient											

Heating power consumption curve

Indoor intake					Ou	itdoor ir	ntake ai	r ambie	ent temp	oerature	e (D.B./	°C)				
air ambient	-20°C	-15°C	-10°C	-5°C	-5°C	0°C	0°C	2°C	5°C	5°C	7°C	10°C	10°C	15°C	15°C	18°C
temperature	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT	IPT
DB	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW	KW
15	5.95	6.34	6.66	6.90	6.45	6.68	6.15	6.15	6.35	5.67	5.80	6.16	5.62	5.85	5.71	5.82
20	6.26	6.66	6.98	7.22	6.83	7.05	6.49	6.56	6.63	5.98	6.10	6.41	5.85	6.14	6.04	6.15
25	6.58	6.98	7.37	7.69	7.28	7.50	6.83	6.90	6.97	6.34	6.47	6.65	6.14	6.55	6.26	6.37

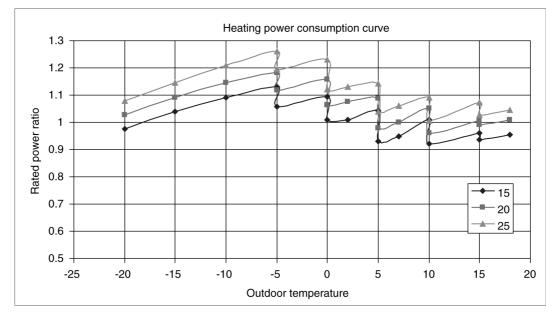


			Outdoo	r intake	air amb	pient ter	nperatu	e (D.B./	(°C)	
	-20°C	-15°C	-10°C	-5°C	0°C	5°C	7°C	10°C	15°C	>15°C
Heating capacity compensation coefficient	0.93	0.93	0.93	0.92	0.86	0.97	1	1	1	1

13.5. Fan performance

13.5.1. CS-F24DD2E5

Fan performance test report


Model	External pressure Pa	Fan speed	Fan rpm	Current (A)	Power consumption (kW)	Air volume (m ³ / min)
	69	Hi	1350	0.91	0.21	22
	56	Ме	1235	0.71	0.16	19.5
CS-F24DD2E5	49	Lo	1125	0.58	0.13	17
	40	Slo	970	0.48	0.11	14.5

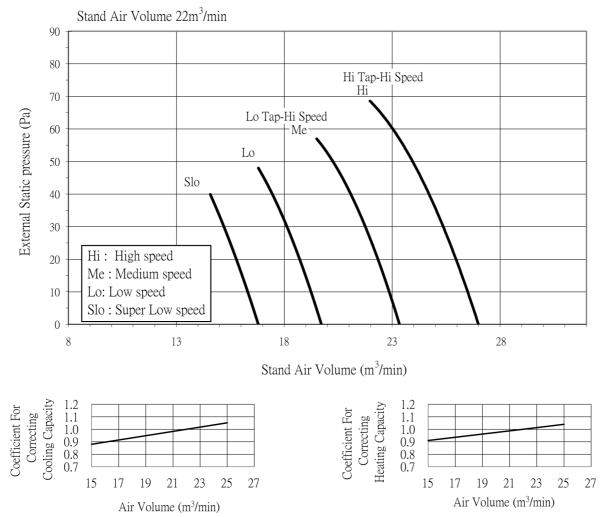

13.5.2. CS-F28DD2E5

Fan performance test report


Model	External pressure Pa	Fan speed	Fan rpm	Current (A)	Power consumption (kW)	Air volume (m ³ / min)
	69	Hi	1350	0.91	0.21	22
CC E20DD2E5	56	Ме	1235	0.71	0.16	19.5
CS-F28DD2E5	49	Lo	1125	0.58	0.13	17
	40	Slo	970	0.48	0.11	14.5

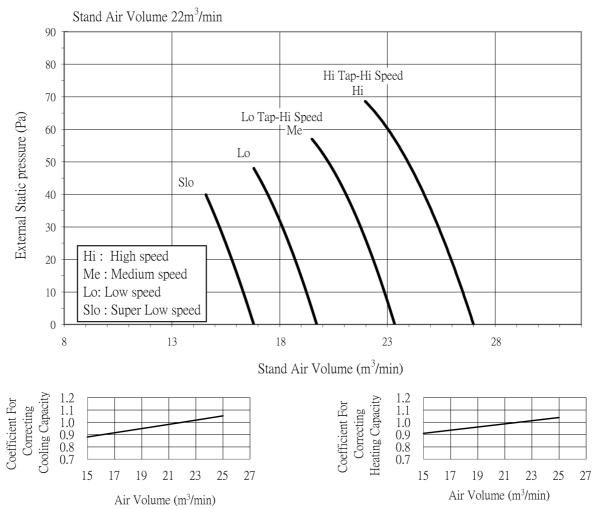

13.5.3. CS-F34DD2E5

Fan performance test report


Model	External pressure Pa	Fan speed	Fan rpm	Current (A)	Power consumption (kW)	Air volume (m ³ / min)
	98	Hi	1380	1.55	0.35	38
	80	Me	1320	1.35	0.3	35
CS-F34DD2E5	65	Lo	1220	1.17	0.26	32
	50	Slo	1090	1.11	0.25	27

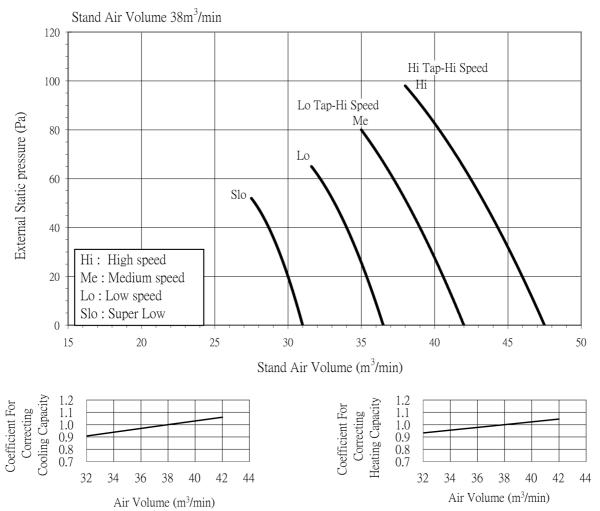

13.5.4. CS-F43DD2E5

Fan performance test report


Model	External pressure Pa	Fan speed	Fan rpm	Current (A)	Power consumption (kW)	Air volume (m ³ / min)
	98	Hi	1390	1.57	0.35	40
	80	Me	1330	1.38	0.31	37
CS-F43DD2E5	65	Lo	1230	1.2	0.27	33
	50	Slo	1100	1.11	0.25	28

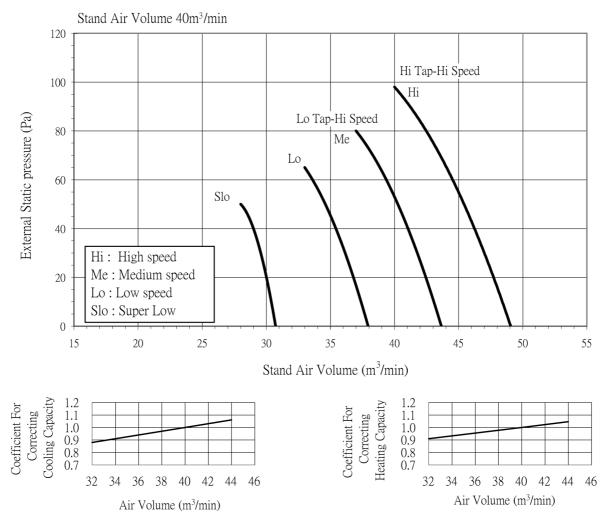

13.5.5. CS-F50DD2E5

Fan performance test report

Model	External pressure Pa	Fan speed	Fan rpm	Current (A)	Power consumption (kW)	Air volume (m ³ / min)
	98	Hi	1405	1.61	0.36	45
	80	Me	1340	1.4	0.32	41
CS-F50DD2E5	65	Lo	1240	1.23	0.28	35
	55	Slo	1110	1.15	0.26	29

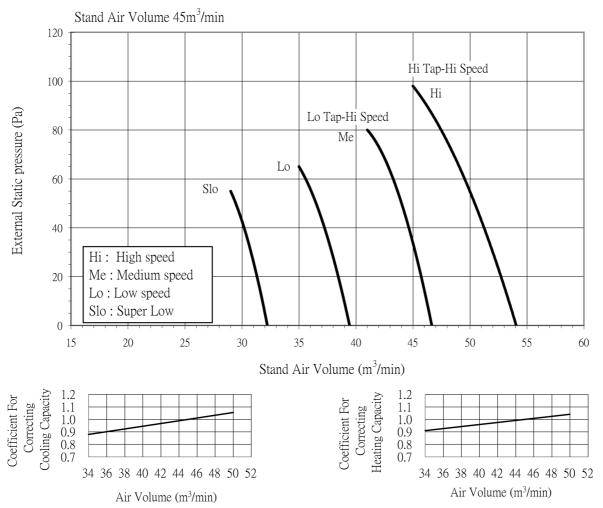

13.6. Safety device

13.6.1. Indoor unit

Indoor unit	Heat pun	np model	CS-F24DD2E5	CS-F28DD2E5	CS-F34DD2E5	CS-F43DD2E5	CS-F50DD2E5
	Cooling only model						
For fan motor protection							
Internal	OFF	°C	135	135	135	135	135
protector (49F)	ON	°C	85	85	85	85	85
For control protection							
Fuse	CUT	А	3.15	3.15	3.15	3.15	3.15

Note : protection controlled by P.C.B installed of FM inside.

13.6.2. Outdoor unit

Outdoor unit	Heat pump model	50Hz	CU-L24DBE5	CU-L28DBE5	CU-L34DBE5	CU-L43DBE5	CU-L50DBE8
For refrigerant cycle							
High pressure	OFF	ХМРа	4.2	4.2	4.2	4.2	4.2
switch	ON	ХМРа	3.3	3.3	3.3	3.3	3.3
For compressor over current		-					
protection for cooling mode							
CT1 frequency down	OFF	Α	12	12.6	17	20	10
	RESET	Α	8	9	13	15	6
CT2 compressor stop	OFF	Α	16	17	22	25	14
For compressor over current		-					
protection for heating mode		-					
CT1 frequency down	OFF	A	14.6	14.6	23	25	12
	RESET	A	8	9	13	15	6
CT2 compressor stop	OFF	A	18	19	28	30	16
Discharge temp protection							
Discharge temperature	Compressor	°C		Td ≧	$110^{\circ}C \rightarrow Comp$	OFF	
thermistor (Td)	OFF		Td	≧ 110 °C x 3 tim	es within 1 hour	→ display error c	ord
Liquid compress protection							
Crankcase heater	-	W	33	33	33	33	33
For fan motor protection							
Internal	OFF	°C	135	135	135	135	135
protector (49F)	ON	°C	87	87	87	87	87
For condensation temperature							
protection control	OFF	°C	58	58	58	58	58
Heat exchanger	RESET	°C	54	54	54	54	54
thermistor (Th)							
For control protection							
Fuse	CUT	A	6.3	6.3	6.3	6.3	6.3

X 1MPa = 10.2kgf/cm²

13.7. Operating characteristics

Model			Power urce		Compressor N	Indoor unit Fan Motor		Outdoor unit Fan Motor		
			Frequency	S.C.	R.C.(A)	IPT(kW)	R.C.	IPT	R.C.	IPT
		(V)	(Hz)	(A)	COOL/HEAT	COOL/HEAT	(A)	(kW)	(A)	(kW)
	CS-F24DD2E5	220	50	9.9	8.55 / 8.55	1.80 / 1.79	0.89	0.19	0.55	0.12
l	CU-L24DBE5	230	50	9.5	8.13 / 8.13	1.78 / 1.77	0.90	0.20	0.55	0.12
H E		240	50	9.2	7.81 / 7.81	1.77 / 1.76	0.91	0.21	0.55	0.12
Ā	CS-F28DD2E5	220	50	11.2	9.9 / 9.8	2.07 / 2.05	0.89	0.19	0.55	0.12
Т	CU-L28DBE5	230	50	10.7	9.3 / 9.2	2.05 / 2.03	0.90	0.20	0.55	0.12
Р		240	50	10.3	8.9 / 8.8	2.04 / 2.02	0.91	0.21	0.55	0.12
Ů	CS-F34DD2E5	220	50	14.3	11.9 / 13.0	2.53 / 2.75	1.53	0.33	1.10	0.24
М	CU-L34DBE5	230	50	13.8	11.3 / 12.4	2.50 / 2.72	1.55	0.35	1.10	0.24
Р		240	50	13.4	10.8 / 11.8	2.46 / 2.68	1.62	0.37	1.10	0.24
м	CS-F43DD2E5	220	50	19.5	17.0 / 17.9	3.62 / 3.83	1.55	0.33	1.10	0.24
0	CU-L43DBE5	230	50	18.8	16.3 / 17.2	3.59 / 3.80	1.57	0.35	1.10	0.24
D E		240	50	18.2	15.6 / 16.6	3.54 / 3.75	1.64	0.38	1.10	0.24
L	CS-F50DD2E5	380	50	8	7.14 / 6.54	4.50 / 4.29	1.58	0.34	1.10	0.24
	CU-L50DBE8	400	50	7.7	6.82 / 6.32	4.47 / 4.26	1.61	0.36	1.10	0.24
		415	50	7.4	6.50 / 6.10	4.43 / 4.22	1.66	0.38	1.10	0.24


Legend : S.C. : Starting Current R.C. : Running Current

IPT : Power Consumption

14 REPLACEMENT PARTS

14.1. Indoor unit

CS-F24DD2E5, CS-F28DD2E5, CS-F34DD2E5, CS-F43DD2E5, CS-F50DD2E5

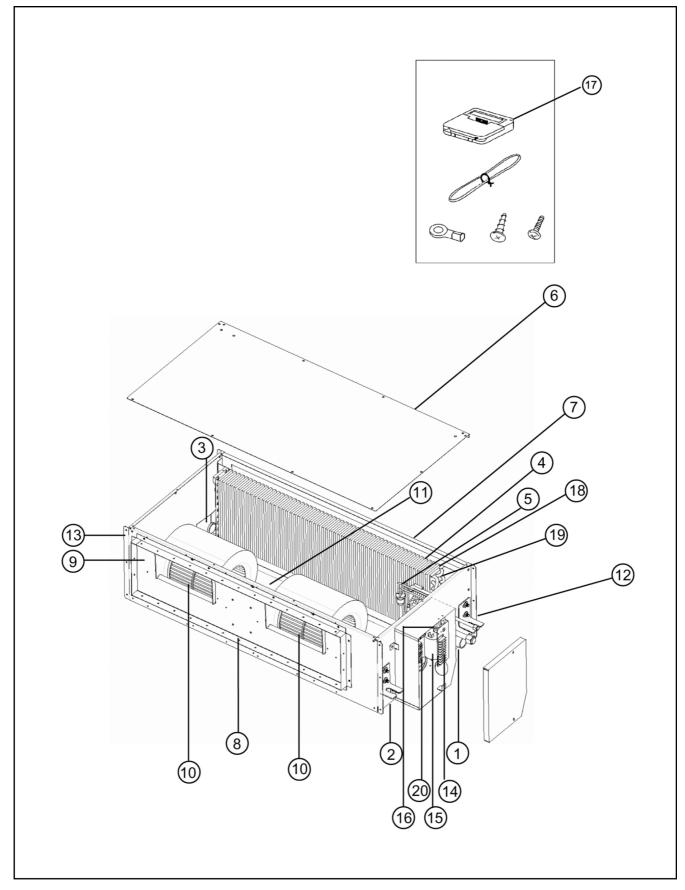

CS-F24DD2E5, CS-F28DD2E5, CS-F34DD2E5, CS-F43DD2E5, CS-F50DD2E5


REF. NO.	PARTS NAME	Q'TY	QUANTITY PER 1 UNIT							
			CS-F24DD2E5	CS-F28DD2E5	CS-F34DD2E5	CS-F43DD2E5	CS-F50DD2E5			
1	Cabinet (Bottom)	1	P02-T08080	\leftarrow	P02-T08130	\leftarrow	\leftarrow			
2	Cabinet (Bottom A)	1	P02-T08090	\leftarrow	P02-T08140	\leftarrow	\leftarrow			
3	Drain pan	1	P42-T03850	\leftarrow	P42-T03920	\leftarrow	\leftarrow			
4	Evaporator	1	P45-T07860	\leftarrow	P45-T07890	\leftarrow	\leftarrow			
5	Distributor as.	1	P45-T07750	\leftarrow	P45-T07770	\leftarrow	\leftarrow			
6	Cabinet (Top)	1	P02-T07570	\leftarrow	P02-T07490	\leftarrow	\leftarrow			
7	Cabinet (Back)	1	P42-T03380	\leftarrow	P42-T03400	\leftarrow	\leftarrow			
8	Duct flange as.(Outlet)	1	P42-T02390	\leftarrow	P42-T02150	\leftarrow	\leftarrow			
9	Fan base as.	1	P45-T07710	\leftarrow	P45-T07720	\leftarrow	\leftarrow			
10	Casing as.	2	*P45-T07950	\leftarrow	*P45-T07990	\leftarrow	\leftarrow			
11	Fan motor	1	P06-T04910	\leftarrow	P06-T04920	\leftarrow	\leftarrow			
12	Panel side R as.	1	P42-T03860	\leftarrow	P42-T03880	\leftarrow	\leftarrow			
13	Panel side L as.	1	P42-T03870	\leftarrow	P42-T03890	\leftarrow	\leftarrow			
14	Terminal board	1	P06-T04970	\leftarrow	\leftarrow	\leftarrow	\leftarrow			
15	Capacitor	1	P06-T04360	\leftarrow	P06-T04350	\leftarrow	\leftarrow			
16	Transformer	1	A40C1031	\leftarrow	\leftarrow	\leftarrow	\leftarrow			
17	Remote control	1	A75C2742	\leftarrow	\leftarrow	\leftarrow	\leftarrow			
18	Thermistor as.	1	P46-T06800	\leftarrow	\leftarrow	\leftarrow	\leftarrow			
19	Coil sensor	1	P46-T06790	\leftarrow	\leftarrow	\leftarrow	\leftarrow			
20	PCB assembly (Programed)	1	P46-T06880	P46-T06900	P46-T07010	P46-T07020	P46-T07030			

*Casing included with impeller part.


All parts are supplied from Taiwan (PTW).


14.2. Outdoor unit

CU-L24DBE5, CU-L28DBE5

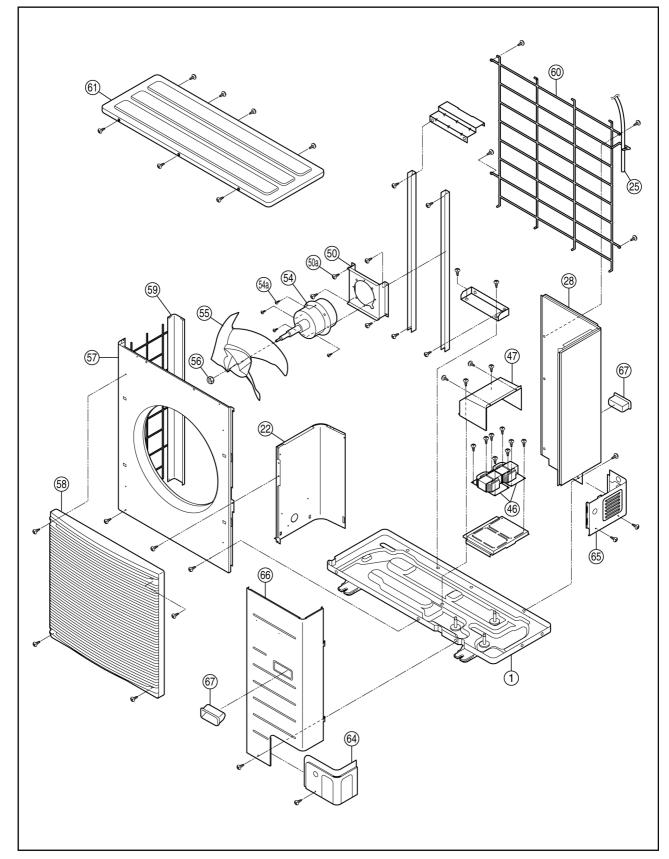

CU-L24DBE5, CU-L28DBE5

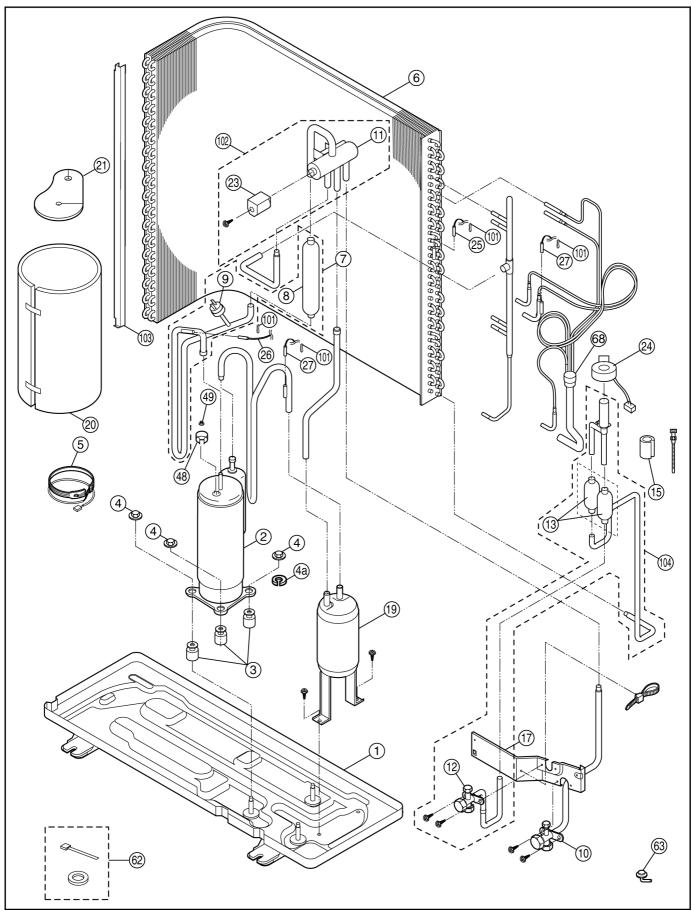


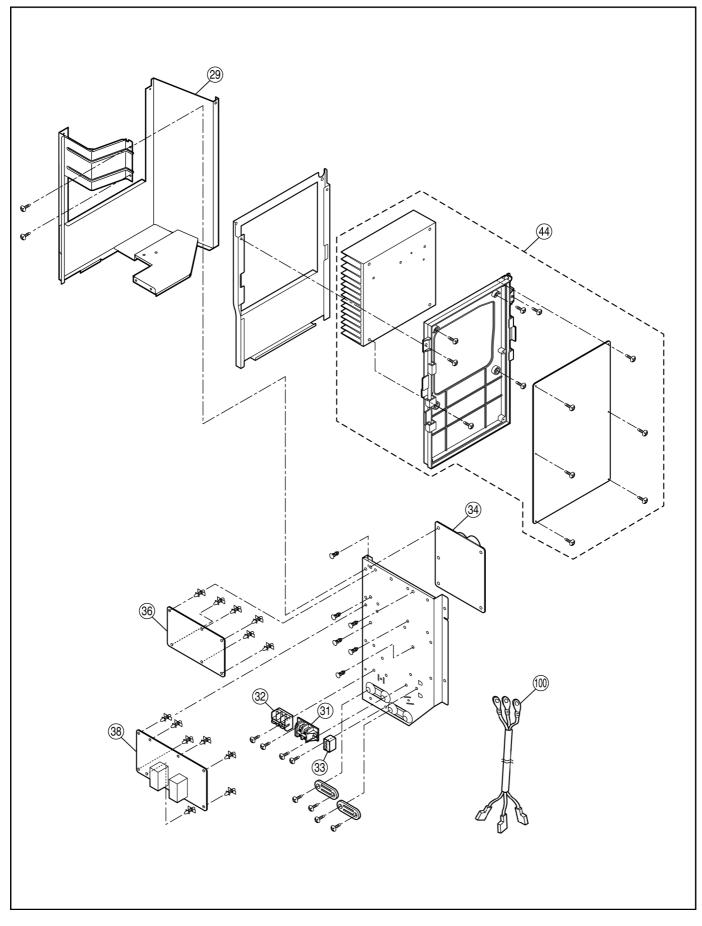


NO.	PART DESCRIPTION	QTY.	CU-L24DBE5	CU-L28DBE5
	BASE PAN ASS'Y	1	CWD52K1098	←
	COMPRESSOR	1	5KD240XAA21	` ←
3	ANTI-VIBRATION BUSHING	3	CWH50055	· · · · · · · · · · · · · · · · · · ·
-	NUT FOR COMP. MOUNT.	3	CWH4582065	` ←
	PACKING	1	CWB811017	` ←
5	CRANKCASE HEATER	1	CWA341012	← ←
6	CONDENSER COMPLETE	1	CWB32C1464	
				←
	TUBE ASS'Y (PRESSURE SWITCH)	1	CWT023311	→
	DISCHARGE MUFFLER	1	CWB121013	←
	HIGH PRESSURE SWITCH	1	CWA101007	←
10	3-WAYS VALVE (GAS)	1	CWB011251	←
11	4-WAYS VALVE	1	CWB001026	←
12	3-WAYS VALVE (LIQUID)	1	CWB011252	<u>←</u>
13	STRAINER	2	CWB111032	→
15	PIPE HOLDER RUBBER	3	CWG251021	←
17	HOLDER-SERVICE VALVE	1	CWD911425	←
19	ACCUMULATOR ASS'Y	1	CWB131025A	→
20	SOUND PROOF MATERIAL-COMP	1	CWG302245	→
21	SOUND PROOF MATERIAL	1	CWG302246	→
22	SOUND-PROOF BOARD ASS'Y	1	CWH151075	←
	V-COIL COMPLETE	1	CWA43C2169	` ←
24	V-COIL COMPLETE	1	CWA43C2128	` ←
25	SENSOR-OD TEMP./COIL	1	CWA50C2213	`````````````````````````````````````
25	SENSOR-COMP.DISCHARGE	1	CWA50C2213	
		1		<u>←</u>
27	SENSOR-COMP.SUCT/DEFROST		CWA50C2215	→ -
28	CABINET REAR PLATE	1	CWE02C1013	<i>←</i>
29	CONTROL BOARD ASS'Y	1	CWH10K1046	<i>←</i>
31	TERMINAL BOARD ASS'Y	1	CWA28K1085	←
32	TERMINAL BOARD ASS'Y	1	CWA28K1076	<u>←</u>
33	CAPACITOR-FAN MOTOR (3/460)	1	DS461305QP-A	<u>←</u>
34	ELECTRONIC CONTROLLER (P. SUPPLY)	1	CWA743402	←
36	ELECTRONIC CONTROLLER (DISPLAY)	1	CWA743403	←
38	ELECTRONIC CONTROLLER (NOISE FILTER)	1	CWA743480	←
44	ELECTRONIC CONTROLLER (MAIN)	1	CWA73C1680R	CWA73C1681R
46	REACTOR	2	CWA421066	→
47	PARTICULAR PLATE COVER ASS'Y	1	CWD90K1023	→
48	TERMINAL COVER	1	CWH171035	←
49	NUT FOR TERMINAL COVER	1	CWH7080300	←
	BRACKET FAN MOTOR	1	CWD54K1010	· · · · · · · · · · · · · · · · · · ·
50a	SCREW-BRACKET FAN MOTOR	2	CWH551040	` ←
54	FAN MOTOR	1	CWA951363	` ←
	SCREW-FAN MOTOR	4		
			CWH551040	<u>←</u>
	PROPELLER FAN	1	CWH001019	<u>←</u>
	NUT for PROPELLER FAN	1	CWH561038	<u>←</u>
	CABINET FRONT PLATE	1	CWE061088A	→
	DISCHARGE GRILLE	1	CWE201073	<i>←</i>
59	CABINET SIDE PLATE	1	CWE04K1019A	←
60	WIRE NET	1	CWD041060A	<i>←</i>
61	CABINET TOP PLATE COMPLETE	1	CWE03C1021	<u>←</u>
62	ACCESSORY COMPLETE	1	CWH82C1105	<i>←</i>
63	BAG-COMPLETE (L-TUBE)	1	CWG87C2030	←
64	PIPE COVER (FRONT)	1	CWD601074A	←
65	PIPE COVER (BACK)	1	CWD601075A	<i>←</i>
66	CABINET FRONT PLATE COMPLETE	1	CWE06C1086	<i>←</i>
67	HANDLE	2	CWE161008	←
68	TUBE ASS'Y (CAPILLARY TUBE)	1	CWT07K1184	. · · · · · · · · · · · · · · · · · · ·
100	LEADWIRE-COMPRESSOR	1	CWA67C5138	` ←
100	SPRING FOR SENSOR	4	CWH711010	
				<u>←</u>
102	4-WAYS VALVE COMPLETE	1	CWB00C1017	<u>←</u>
103	CONDENSER SIDE PLATE	1	CWD932423	<i>←</i>
104	TUBE ASS'Y(VALVE+STRAINER)	1	CWT023313	→ -
	INSTALLATION INSTRUCTION	1	CWF612612	←


All parts are supplied from PHAAM, Malaysia (Vendor Code: 061)

CU-L34DBE5, CU-L43DBE5

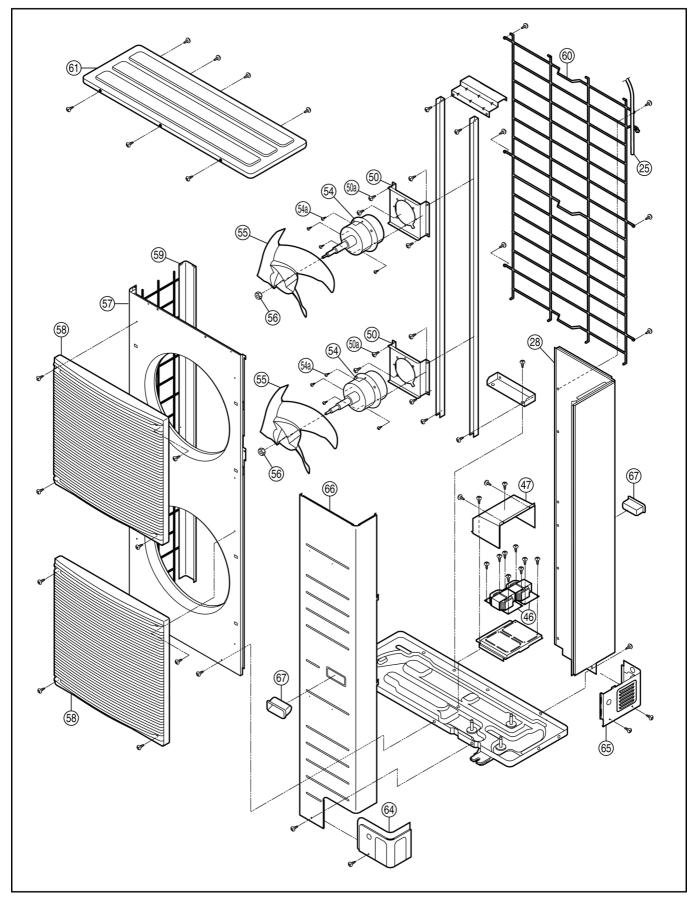


CU-L34DBE5, CU-L43DBE5

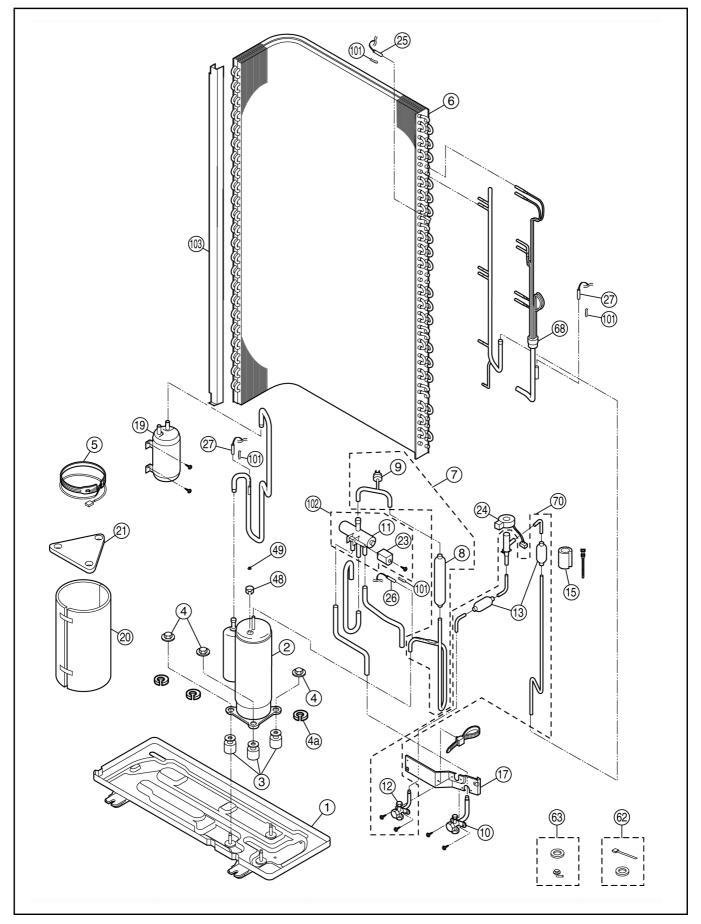


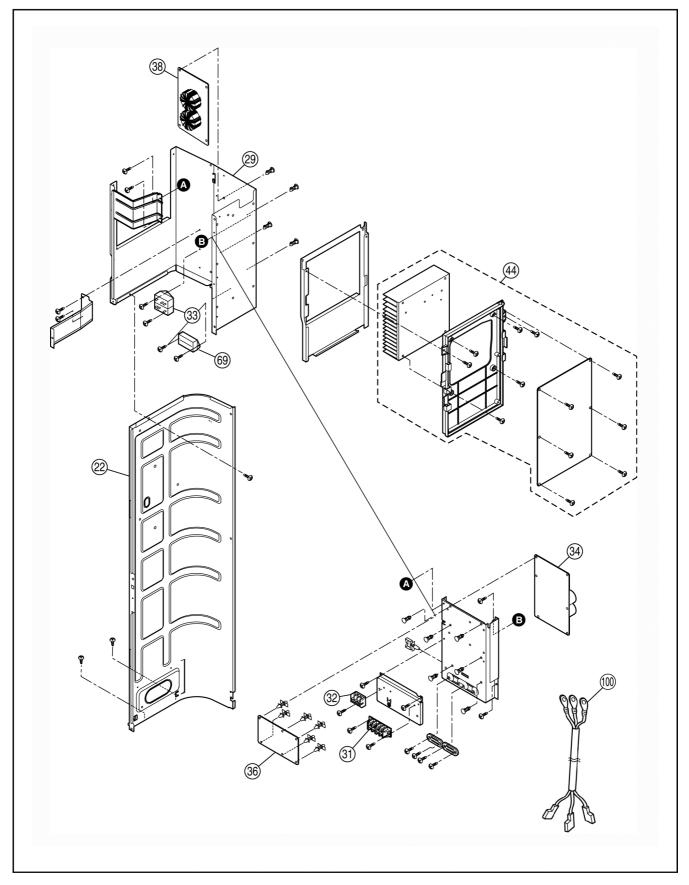


NO.	PART DESCRIPTION	QTY.	CU-L34DBE5	CU-L43DBE5
	BASE PAN ASS'Y	1	CWD52K1110	←
	COMPRESSOR	1	5JD420XAA22	
3	ANTI-VIBRATION BUSHING	3	CWH50055	· · · · · · · · · · · · · · · · · · ·
	NUT FOR COMP. MOUNT.	3	CWH4582065	· · · · · · · · · · · · · · · · · · ·
	PACKING	3	CWB811017	· · · · · · · · · · · · · · · · · · ·
	CRANKCASE HEATER	1	CWA341013	· · · · · · · · · · · · · · · · · · ·
	CONDENSER COMPLETE	1	CWB32C1508	
	TUBE ASS'Y (PRESSURE SWITCH)	1	CWT023392	`` ←
	DISCHARGE MUFFLER	1	CWB121014	 ←
	HIGH PRESSURE SWITCH	1	CWA101007	`````````````````````````````````````
	3-WAYS VALVE (GAS)	1	CWB011251	
	4-WAYS VALVE	1		<u>←</u>
			CWB001046 CWB011292	<u>←</u>
	3-WAYS VALVE (LIQUID)	1 2		←
-	STRAINER		CWB111032	<u>←</u>
	PIPE HOLDER RUBBER	5	CWG251021	<u>←</u>
	HOLDER-SERVICE VALVE	1	CWD911425	<u>←</u>
	ACCUMULATOR ASS'Y	1	CWB131026A	<i>←</i>
	SOUND PROOF MATERIAL-COMP	1	CWG302265	←
	SOUND PROOF MATERIAL	1	CWG302266	<i>←</i>
	SOUND-PROOF BOARD ASS'Y	1	CWH15K1019	<u>←</u>
	V-COIL COMPLETE	1	CWA43C2169	<u>←</u>
24	V-COIL COMPLETE	1	CWA43C2177	<i>←</i>
25	SENSOR-OD TEMP./COIL	1	CWA50C2229	<i>←</i>
26	SENSOR-COMP.DISCHARGE	1	CWA50C2230	←
27	SENSOR-COMP.SUCT/DEFROST	1	CWA50C2231	←
28	CABINET REAR PLATE	1	CWE02C1014	←
29	CONTROL BOARD ASS'Y	1	CWH10K1049	<i>←</i>
31	TERMINAL BOARD ASS'Y	1	CWA28K1107	<i>←</i>
32	TERMINAL BOARD ASS'Y	1	CWA28K1076	<i>←</i>
33	CAPACITOR-FAN MOTOR (3/460)	2	DS461305QP-A	<i>←</i>
34	ELECTRONIC CONTROLLER (P. SUPPLY)	1	CWA743568	CWA743478
36	ELECTRONIC CONTROLLER (DISPLAY)	1	CWA743566	←
38	ELECTRONIC CONTROLLER (NOISE FILTER)	1	CWA743567	←
44	ELECTRONIC CONTROLLER (MAIN)	1	CWA73C1682R	CWA73C1683R
46	REACTOR	2	CWA421079	←
47	PARTICULAR PLATE COVER ASS'Y	1	CWD90K1023	←
	TERMINAL COVER	1	CWH171035	←
	NUT FOR TERMINAL COVER	1	CWH7080300	←
	BRACKET FAN MOTOR	1	CWD54K1014	
				L ←
	SCREW-BRACKET FAN MOTOR	4		← ←
	SCREW-BRACKET FAN MOTOR	4	CWH551040	←
	FAN MOTOR	2	CWH551040 CWA951363	← ←
54a	FAN MOTOR SCREW-FAN MOTOR	2 8	CWH551040 CWA951363 CWH551040	← ← ←
54a 55	FAN MOTOR SCREW-FAN MOTOR PROPELLER FAN	2 8 2	CWH551040 CWA951363 CWH551040 CWH001021	← ← ← ←
54a 55 56	FAN MOTOR SCREW-FAN MOTOR PROPELLER FAN NUT for PROPELLER FAN	2 8 2 2	CWH551040 CWA951363 CWH551040 CWH001021 CWH561038	← ← ← ← ←
54a 55 56 57	FAN MOTOR SCREW-FAN MOTOR PROPELLER FAN NUT for PROPELLER FAN CABINET FRONT PLATE	2 8 2 2 1	CWH551040 CWA951363 CWH551040 CWH001021 CWH561038 CWE061098A	← ← ← ← ←
54a 55 56 57 58	FAN MOTOR SCREW-FAN MOTOR PROPELLER FAN NUT for PROPELLER FAN CABINET FRONT PLATE DISCHARGE GRILLE	2 8 2 2 1 2	CWH551040 CWA951363 CWH551040 CWH001021 CWH561038 CWE061098A CWE201073	← ← ← ← ←
54a 55 56 57 58 59	FAN MOTOR SCREW-FAN MOTOR PROPELLER FAN NUT for PROPELLER FAN CABINET FRONT PLATE DISCHARGE GRILLE CABINET SIDE PLATE	2 8 2 2 1 2 1 2 1	CWH551040 CWA951363 CWH551040 CWH001021 CWH561038 CWE061098A CWE201073 CWE04K1023A	+ + + + + + +
54a 55 56 57 58 59 60	FAN MOTOR SCREW-FAN MOTOR PROPELLER FAN NUT for PROPELLER FAN CABINET FRONT PLATE DISCHARGE GRILLE CABINET SIDE PLATE WIRE NET	2 8 2 1 2 1 2 1 1 1	CWH551040 CWA951363 CWH551040 CWH001021 CWH561038 CWE061098A CWE201073 CWE04K1023A CWD041068A	
54a 55 56 57 58 59 60 61	FAN MOTOR SCREW-FAN MOTOR PROPELLER FAN NUT for PROPELLER FAN CABINET FRONT PLATE DISCHARGE GRILLE CABINET SIDE PLATE WIRE NET CABINET TOP PLATE COMPLETE	2 8 2 1 2 1 2 1 1 1 1	CWH551040 CWA951363 CWH551040 CWH001021 CWH561038 CWE061098A CWE201073 CWE04K1023A CWE04K1023A CWD041068A CWE03C1021	← ← ← ← ← ← ←
54a 55 56 57 58 59 60 61 62	FAN MOTOR SCREW-FAN MOTOR PROPELLER FAN NUT for PROPELLER FAN CABINET FRONT PLATE DISCHARGE GRILLE CABINET SIDE PLATE WIRE NET CABINET TOP PLATE COMPLETE ACCESSORY COMPLETE	2 8 2 1 2 1 2 1 1 1 1 1 1	CWH551040 CWA951363 CWH551040 CWH001021 CWH561038 CWE061098A CWE201073 CWE04K1023A CWE04K1023A CWD041068A CWE03C1021 CWH82C1105	
54a 55 56 57 58 59 60 61 62 63	FAN MOTOR SCREW-FAN MOTOR PROPELLER FAN NUT for PROPELLER FAN CABINET FRONT PLATE DISCHARGE GRILLE CABINET SIDE PLATE WIRE NET CABINET TOP PLATE COMPLETE ACCESSORY COMPLETE BAG-COMPLETE (L-TUBE)	2 8 2 1 2 1 2 1 1 1 1 1 1 1	CWH551040 CWA951363 CWH551040 CWH001021 CWH561038 CWE061098A CWE201073 CWE04K1023A CWD041068A CWE03C1021 CWH82C1105 CWG87C2030	← ← ← ← ← ← ← ← ← ← ←
54a 55 56 57 58 59 60 61 62 63 64	FAN MOTOR SCREW-FAN MOTOR PROPELLER FAN NUT for PROPELLER FAN CABINET FRONT PLATE DISCHARGE GRILLE CABINET SIDE PLATE WIRE NET CABINET TOP PLATE COMPLETE ACCESSORY COMPLETE BAG-COMPLETE (L-TUBE) PIPE COVER (FRONT)	2 8 2 1 2 1 1 1 1 1 1 1 1 1 1	CWH551040 CWA951363 CWH551040 CWH001021 CWH561038 CWE061098A CWE0201073 CWE04K1023A CWE04K1023A CWE03C1021 CWH82C1105 CWB87C2030 CWD601074A	← ← ← ← ← ← ← ← ← ← ←
54a 55 56 57 58 59 60 61 62 63 64 65	FAN MOTOR SCREW-FAN MOTOR PROPELLER FAN NUT for PROPELLER FAN CABINET FRONT PLATE DISCHARGE GRILLE CABINET SIDE PLATE WIRE NET CABINET TOP PLATE COMPLETE ACCESSORY COMPLETE BAG-COMPLETE (L-TUBE) PIPE COVER (FRONT) PIPE COVER (BACK)	2 8 2 1 2 1 1 1 1 1 1 1 1 1 1 1 1	CWH551040 CWA951363 CWH551040 CWH001021 CWH561038 CWE061098A CWE0201073 CWE04K1023A CWE04K1023A CWE03C1021 CWH82C1105 CWG87C2030 CWD601074A CWD601075A	← ← ← ← ← ← ← ← ← ← ←
54a 55 56 57 58 59 60 61 62 63 64 65 66	FAN MOTOR SCREW-FAN MOTOR PROPELLER FAN NUT for PROPELLER FAN CABINET FRONT PLATE DISCHARGE GRILLE CABINET SIDE PLATE WIRE NET CABINET TOP PLATE COMPLETE ACCESSORY COMPLETE BAG-COMPLETE (L-TUBE) PIPE COVER (FRONT) PIPE COVER (BACK) CABINET FRONT PLATE COMPLETE	2 8 2 1 2 1 1 2 1 1 1 1 1 1 1 1 1 1 1 1	CWH551040 CWA951363 CWH551040 CWH001021 CWH561038 CWE061098A CWE0201073 CWE04K1023A CWE04K1023A CWE03C1021 CWH82C1105 CWG87C2030 CWD601074A CWD601075A CWE06C1091	← ← ← ← ← ← ← ← ← ← ←
54a 55 56 57 58 59 60 61 62 63 64 65 66	FAN MOTOR SCREW-FAN MOTOR PROPELLER FAN NUT for PROPELLER FAN CABINET FRONT PLATE DISCHARGE GRILLE CABINET SIDE PLATE WIRE NET CABINET TOP PLATE COMPLETE ACCESSORY COMPLETE BAG-COMPLETE (L-TUBE) PIPE COVER (FRONT) PIPE COVER (BACK)	2 8 2 1 2 1 1 1 1 1 1 1 1 1 1 1 1	CWH551040 CWA951363 CWH551040 CWH001021 CWH561038 CWE061098A CWE0201073 CWE04K1023A CWE04K1023A CWE03C1021 CWH82C1105 CWG87C2030 CWD601074A CWD601075A	
54a 55 56 57 58 59 60 61 62 63 64 65 66 66 67	FAN MOTOR SCREW-FAN MOTOR PROPELLER FAN NUT for PROPELLER FAN CABINET FRONT PLATE DISCHARGE GRILLE CABINET SIDE PLATE WIRE NET CABINET TOP PLATE COMPLETE ACCESSORY COMPLETE BAG-COMPLETE (L-TUBE) PIPE COVER (FRONT) PIPE COVER (BACK) CABINET FRONT PLATE COMPLETE	2 8 2 1 2 1 1 2 1 1 1 1 1 1 1 1 1 1 1 1	CWH551040 CWA951363 CWH551040 CWH001021 CWH561038 CWE061098A CWE0201073 CWE04K1023A CWE04K1023A CWE03C1021 CWH82C1105 CWG87C2030 CWD601074A CWD601075A CWE06C1091	← ← ← ← ← ← ← ← ← ← ← ← ← ←
54a 55 56 57 58 59 60 61 62 63 64 65 66 67 68	FAN MOTOR SCREW-FAN MOTOR PROPELLER FAN NUT for PROPELLER FAN CABINET FRONT PLATE DISCHARGE GRILLE CABINET SIDE PLATE WIRE NET CABINET TOP PLATE COMPLETE ACCESSORY COMPLETE BAG-COMPLETE (L-TUBE) PIPE COVER (FRONT) PIPE COVER (BACK) CABINET FRONT PLATE COMPLETE HANDLE	2 8 2 1 2 1 1 1 1 1 1 1 1 2 2	CWH551040 CWA951363 CWH551040 CWH001021 CWH561038 CWE061098A CWE0201073 CWE04K1023A CWE04K1023A CWE03C1021 CWH82C1105 CWG87C2030 CWD601074A CWD601075A CWE06C1091 CWE161008	+ +
54a 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69	FAN MOTOR SCREW-FAN MOTOR PROPELLER FAN NUT for PROPELLER FAN CABINET FRONT PLATE DISCHARGE GRILLE CABINET SIDE PLATE WIRE NET CABINET TOP PLATE COMPLETE BAG-COMPLETE (L-TUBE) PIPE COVER (FRONT) PIPE COVER (BACK) CABINET FRONT PLATE COMPLETE HANDLE TUBE ASS'Y (CAPILLARY TUBE)	2 8 2 1 2 1 1 2 1 1 1 1 1 1 1 2 1 1 2 1	CWH551040 CWA951363 CWH551040 CWH001021 CWH561038 CWE061098A CWE0201073 CWE04K1023A CWE04K1023A CWE03C1021 CWH82C1105 CWG87C2030 CWD601074A CWD601075A CWE06C1091 CWE161008 CWE07K1196	
54a 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70	FAN MOTOR SCREW-FAN MOTOR PROPELLER FAN NUT for PROPELLER FAN CABINET FRONT PLATE DISCHARGE GRILLE CABINET SIDE PLATE WIRE NET CABINET TOP PLATE COMPLETE ACCESSORY COMPLETE BAG-COMPLETE (L-TUBE) PIPE COVER (FRONT) PIPE COVER (BACK) CABINET FRONT PLATE COMPLETE HANDLE TUBE ASS'Y (CAPILLARY TUBE) MAGNETIC SWITCH	2 8 2 1 2 1 1 2 1 1 1 1 1 1 1 1 2 1 1 1 1	CWH551040 CWA951363 CWH551040 CWH001021 CWH561038 CWE061098A CWE0201073 CWE04K1023A CWE03C1021 CWH82C1105 CWG87C2030 CWD601074A CWD601075A CWE06C1091 CWE161008 CWE07K1196 CWA001023	
54a 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 100	FAN MOTOR SCREW-FAN MOTOR PROPELLER FAN NUT for PROPELLER FAN CABINET FRONT PLATE DISCHARGE GRILLE CABINET SIDE PLATE WIRE NET CABINET TOP PLATE COMPLETE ACCESSORY COMPLETE BAG-COMPLETE (L-TUBE) PIPE COVER (FRONT) PIPE COVER (FRONT) PIPE COVER (BACK) CABINET FRONT PLATE COMPLETE HANDLE TUBE ASS'Y (CAPILLARY TUBE) MAGNETIC SWITCH TUBE ASS'Y (STRAINER AND EXP. VALVE)	2 8 2 1 2 1 2 1 1 1 1 1 1 1 1 2 1 1 1 1	CWH551040 CWA951363 CWH551040 CWH001021 CWH561038 CWE061098A CWE0201073 CWE04K1023A CWE03C1021 CWH82C1105 CWG87C2030 CWD601074A CWD601075A CWE06C1091 CWE161008 CWE07K1196 CWA001023 CWT023394	
54a 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 100 101	FAN MOTOR SCREW-FAN MOTOR PROPELLER FAN NUT for PROPELLER FAN CABINET FRONT PLATE DISCHARGE GRILLE CABINET SIDE PLATE WIRE NET CABINET TOP PLATE COMPLETE ACCESSORY COMPLETE BAG-COMPLETE (L-TUBE) PIPE COVER (FRONT) PIPE COVER (FRONT) PIPE COVER (BACK) CABINET FRONT PLATE COMPLETE HANDLE TUBE ASS'Y (CAPILLARY TUBE) MAGNETIC SWITCH TUBE ASS'Y (STRAINER AND EXP. VALVE) LEADWIRE-COMPRESSOR	2 8 2 1 2 1 2 1 1 1 1 1 1 1 1 2 1 1 1 1	CWH551040 CWA951363 CWH551040 CWH001021 CWH561038 CWE061098A CWE0201073 CWE04K1023A CWE03C1021 CWH82C1105 CWG87C2030 CWD601074A CWD601075A CWE06C1091 CWE161008 CWE06C1091 CWE161008 CWT07K1196 CWA001023 CWT023394 CWA67C5267	
54a 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 100 101 102	FAN MOTOR SCREW-FAN MOTOR PROPELLER FAN NUT for PROPELLER FAN CABINET FRONT PLATE DISCHARGE GRILLE CABINET SIDE PLATE WIRE NET CABINET TOP PLATE COMPLETE ACCESSORY COMPLETE BAG-COMPLETE (L-TUBE) PIPE COVER (FRONT) PIPE COVER (FRONT) PIPE COVER (BACK) CABINET FRONT PLATE COMPLETE HANDLE TUBE ASS'Y (CAPILLARY TUBE) MAGNETIC SWITCH TUBE ASS'Y (STRAINER AND EXP. VALVE) LEADWIRE-COMPRESSOR SPRING FOR SENSOR	2 8 2 1 2 1 2 1 1 1 1 1 1 1 2 1 1 2 1 1 1 1 1 2 1 1 1 1 2 1 1 1 2 1 1 2 1	CWH551040 CWA951363 CWH551040 CWH001021 CWH561038 CWE061098A CWE0201073 CWE04K1023A CWE04K1023A CWE03C1021 CWH82C1105 CWG87C2030 CWD601074A CWD601075A CWE06C1091 CWE161008 CWE07K1196 CWA001023 CWT023394 CWA67C5267 CWH711010	

All parts are supplied from PHAAM, Malaysia (Vendor Code: 061)

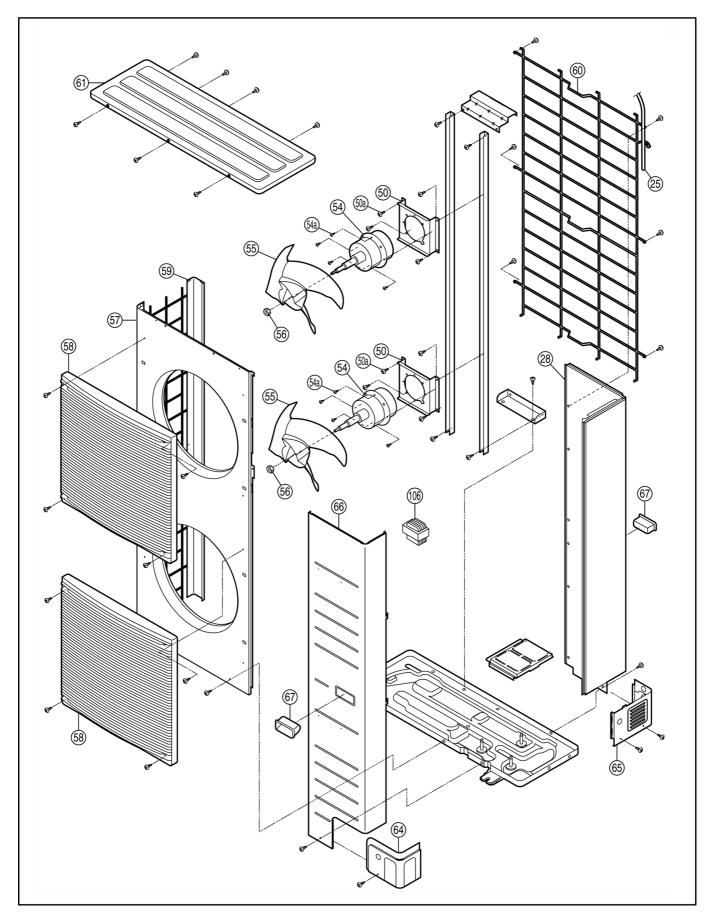

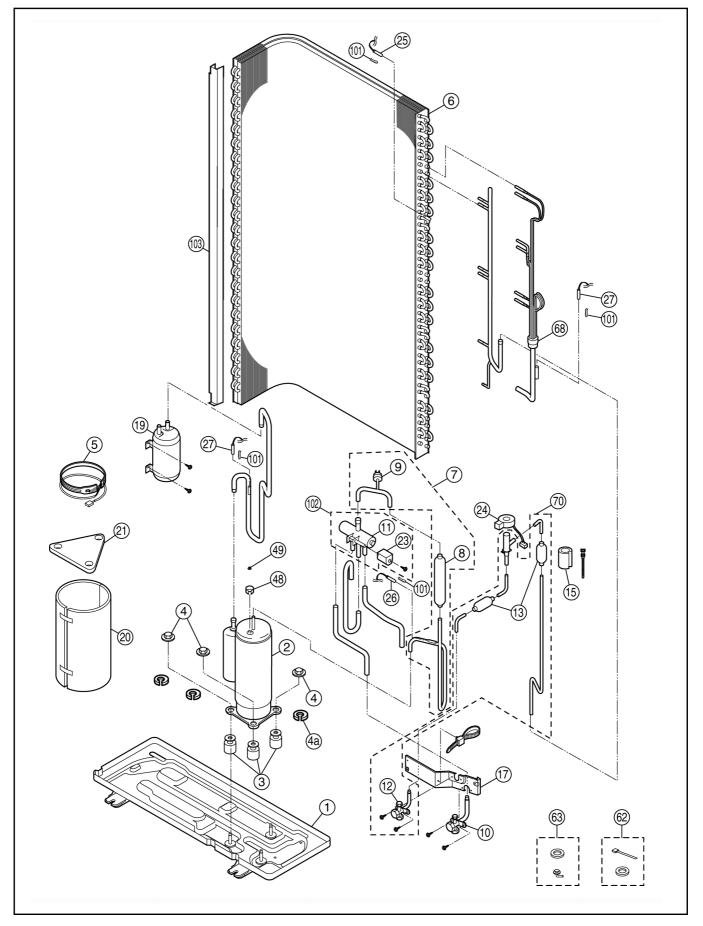

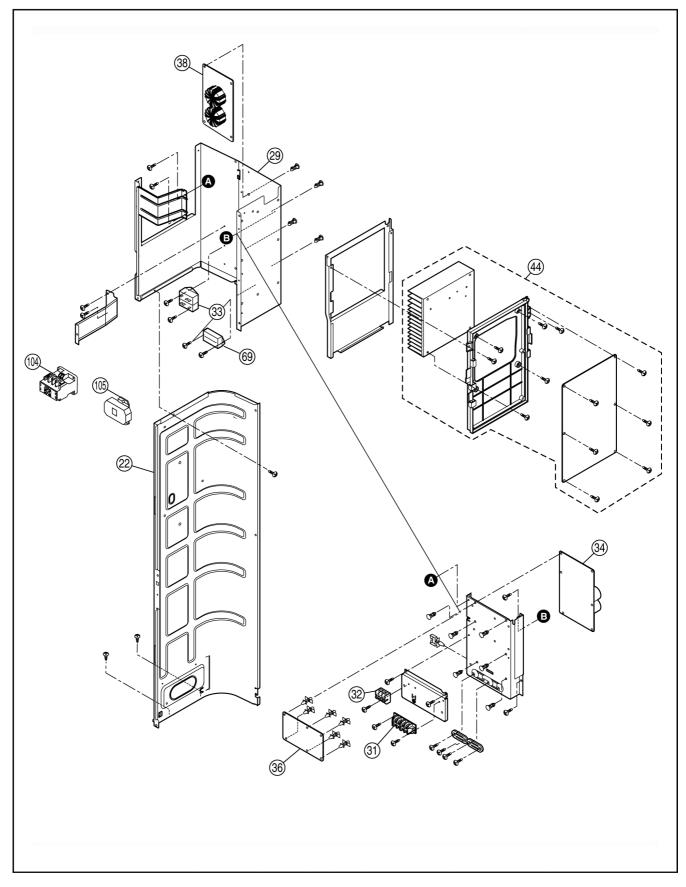



NO.	PART DESCRIPTION	QTY.	CU-L50DBE8
1	BASE PAN ASS'Y	1	CWD52K1110
2	COMPRESSOR	1	5JD420XBA22
3	ANTI-VIBRATION BUSHING	3	CWH50055
4	NUT FOR COMP. MOUNT.	3	CWH4582065
	PACKING	3	
4a			CWB811017
5	CRANKCASE HEATER	1	CWA341013
6	CONDENSER COMPLETE	1	CWB32C1594
7	TUBE ASS'Y (PRESSURE SWITCH)	1	CWT023392
8	DISCHARGE MUFFLER	1	CWB121014
9	HIGH PRESSURE SWITCH	1	CWA101007
10	3-WAYS VALVE (GAS)	1	CWB011251
11	4-WAYS VALVE	1	CWB001046
12	3-WAYS VALVE (LIQUID)	1	CWB011292
13	STRAINER	2	CWB111032
15	PIPE HOLDER RUBBER	5	CWG251021
17	HOLDER-SERVICE VALVE	1	CWD911425
19	ACCUMULATOR ASS'Y	1	CWB131026A
20	SOUND PROOF MATERIAL-COMP	1	CWG302265
21	SOUND PROOF MATERIAL	1	CWG302266
22	SOUND-PROOF BOARD ASS'Y	1	CWH15K1019
23	V-COIL COMPLETE	1	CWA43C2169
24	V-COIL COMPLETE	1	CWA43C2177
25	SENSOR-OD TEMP./COIL	1	CWA50C2229
25	SENSOR-OD TEMP./COTI	1	CWA50C2229
27	SENSOR-COMP.SUCT/DEFROST	1	CWA50C2231
27		1	
-	CABINET REAR PLATE		CWE02C1014
29	CONTROL BOARD ASS'Y	1	CWH10K1049
31	TERMINAL BOARD ASS'Y	1	CWA28K1111
32	TERMINAL BOARD ASS'Y	1	CWA28K1076
33	CAPACITOR-FAN MOTOR (3/460)	2	DS461305QP-A
34	ELECTRONIC CONTROLLER (P. SUPPLY)	1	CWA743633
36	ELECTRONIC CONTROLLER (DISPLAY)	1	CWA743403
38	ELECTRONIC CONTROLLER (NOISE FILTER)	1	CWA743814
44	ELECTRONIC CONTROLLER (MAIN)	1	CWA73C1798R
48	TERMINAL COVER	1	CWH171035
49	NUT FOR TERMINAL COVER	1	CWH7080300
50	BRACKET FAN MOTOR	1	CWD54K1014
50a	SCREW-BRACKET FAN MOTOR	4	CWH551040
54	FAN MOTOR	2	CWA951363
54a	SCREW-FAN MOTOR	8	CWH551040
55	PROPELLER FAN	2	CWH001021
56	NUT for PROPELLER FAN	2	CWH561038
57	CABINET FRONT PLATE	1	CWE061098A
		2	
58	DISCHARGE GRILLE		CWE201073
59	CABINET SIDE PLATE	1	CWE04K1023A
60	WIRE NET	1	CWD041068A
61	CABINET TOP PLATE COMPLETE	1	CWE03C1021
62	ACCESSORY COMPLETE	1	CWH82C1105
63	BAG-COMPLETE (L-TUBE)	1	CWG87C2030
64	PIPE COVER (FRONT)	1	CWD601074A
65	PIPE COVER (BACK)	1	CWD601075A
66	CABINET FRONT PLATE COMPLETE	1	CWE06C1091
67	HANDLE	2	CWE161008
68	TUBE ASS'Y (CAPILLARY TUBE)	1	CWT07K1196
69	MAGNETIC SWITCH	1	K6C2AGA00002
70	TUBE ASS'Y (STRAINER AND EXP. VALVE)	1	CWT023394
101	SPRING FOR SENSOR	4	CWH711010
102	4-WAYS VALVE COMPLETE	1	CWB00C1022
102	CONDENSER SIDE PLATE	1	CWD932477
103	ELECTRO MAGNETIC SWITCH	1	CWA001005
104	PTC THERMISTORS	1	D4DDG1010001
106	NORMAL - MODE LINE CHOKE COILS	1	G0A452N00002
	INSTALLATION INSTRUCTION	1	CWF612612

All parts are supplied from PHAAM, Malaysia (Vendor Code: 061)


15 ELECTRONIC CIRCUIT DIAGRAM

15.1. Indoor unit

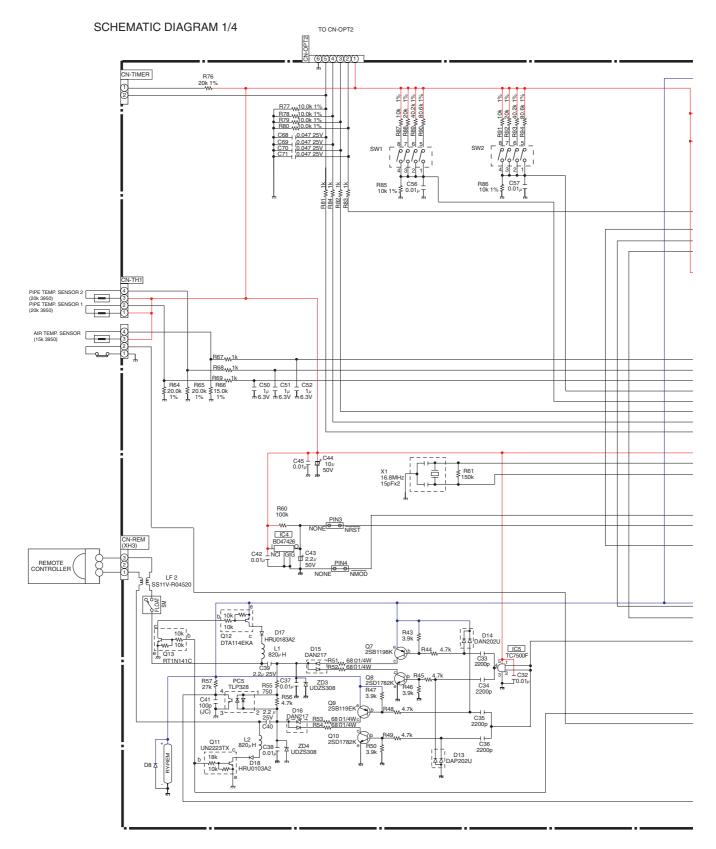

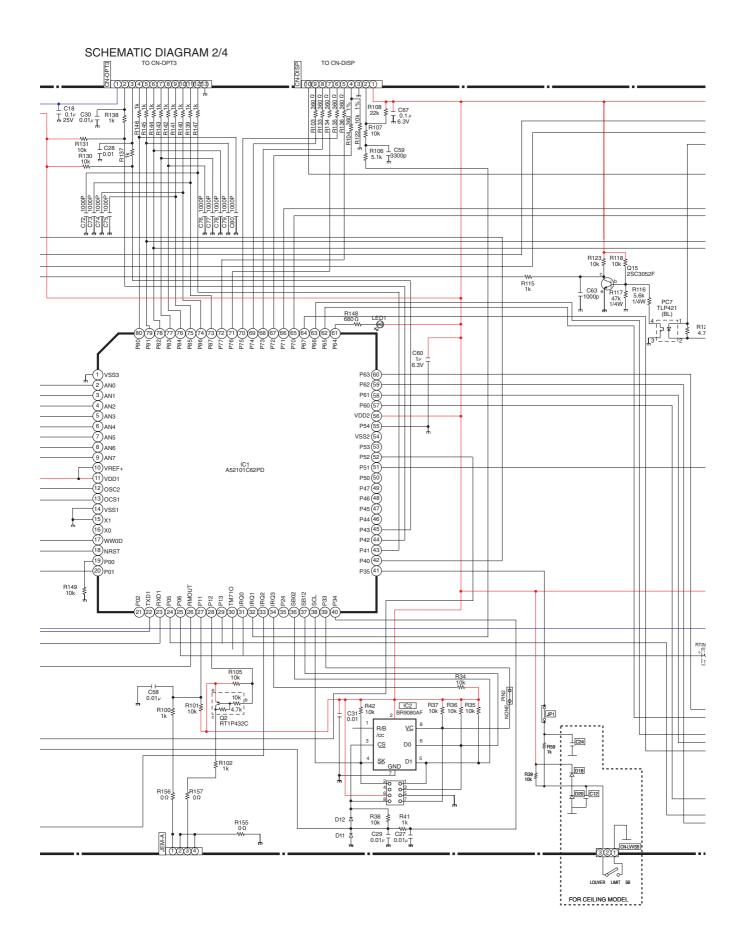

SCHEMATIC DIAGRAM 3/4

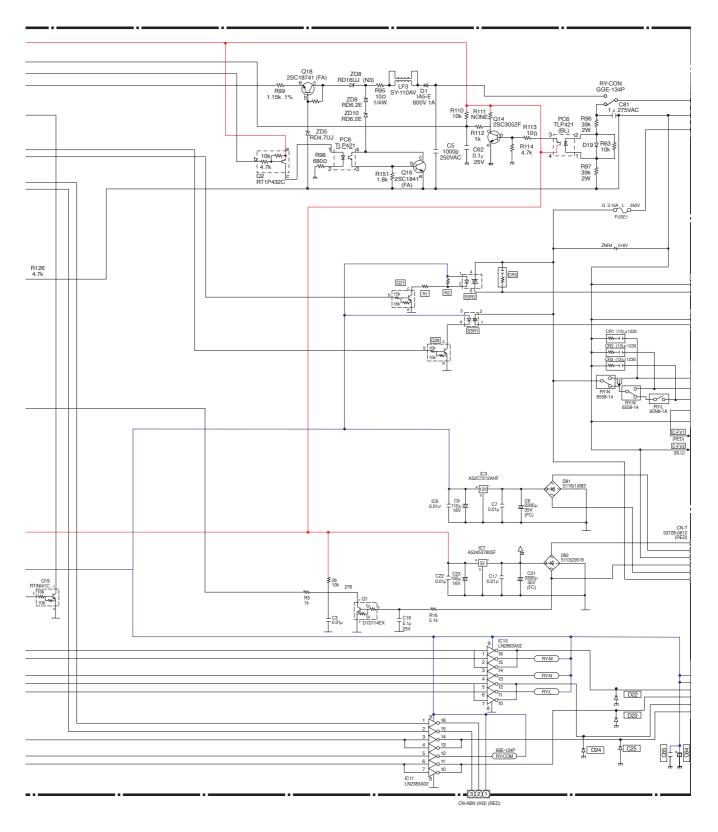


SCHEMATIC DIAGRAM 4/4

ELECTRONIC CONTROL UNIT

-

_

_

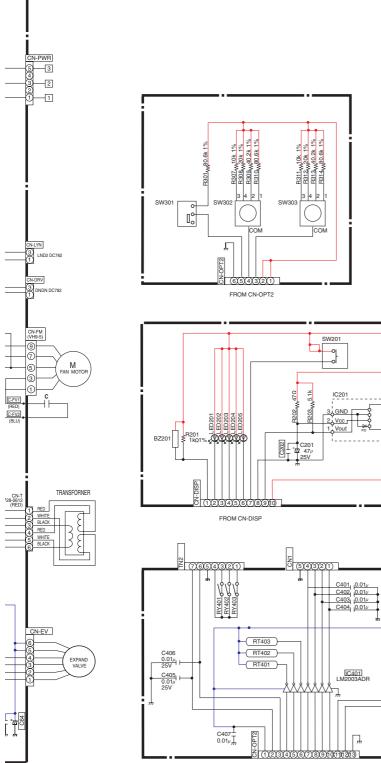

FROM CN-OPT3

3 - - 12 IV VI SSR401 4 - - J 1

3_ |V 1 4 12 SSR402


- - -Q402 m RT1N141C TM1 1

(<u>)</u>


15.2. Outdoor unit

15.2.1. CU-L24DBE5, CU-L28DBE5, CU-L34DBE5, CU-L43DBE5


SCHEMATIC DIAGRAM 1/7

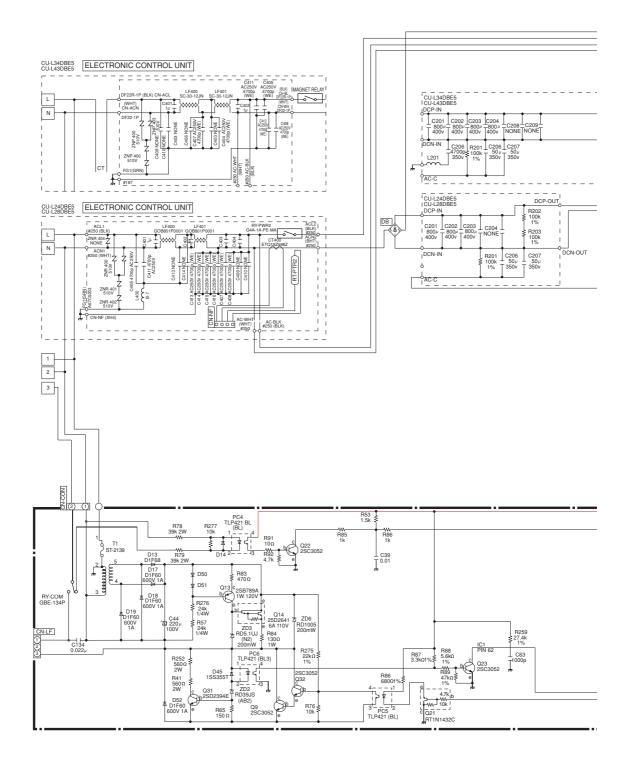


SCHEMATIC DIAGRAM 2/7

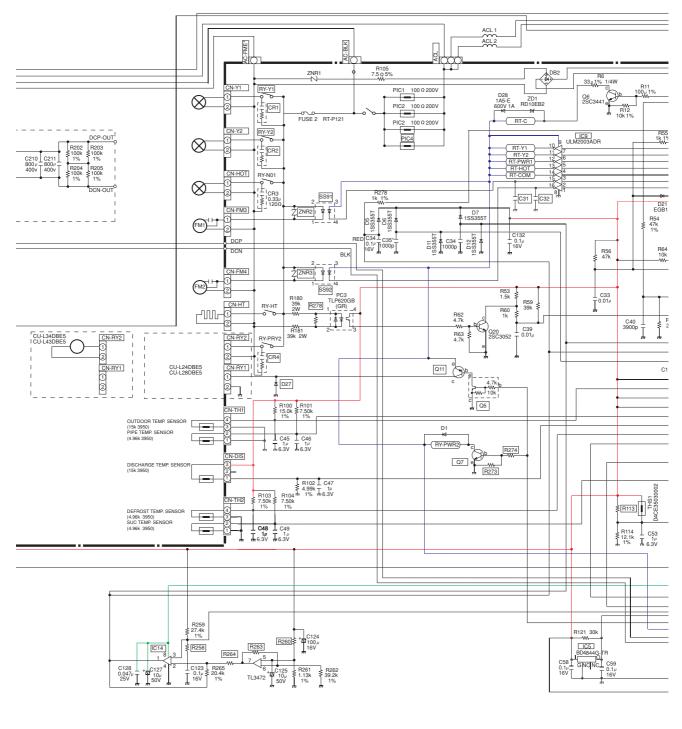


SCHEMATIC DIAGRAM 3/7

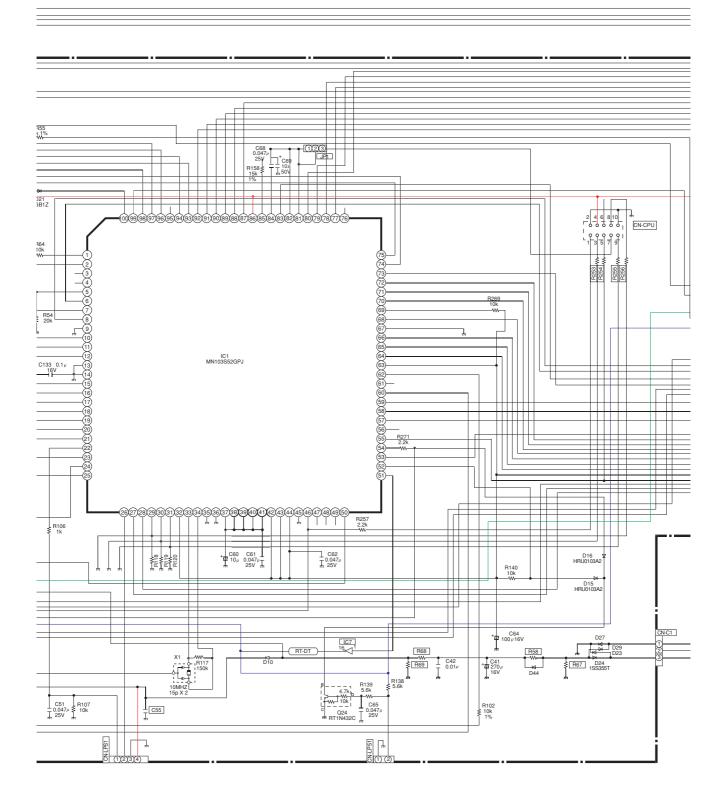


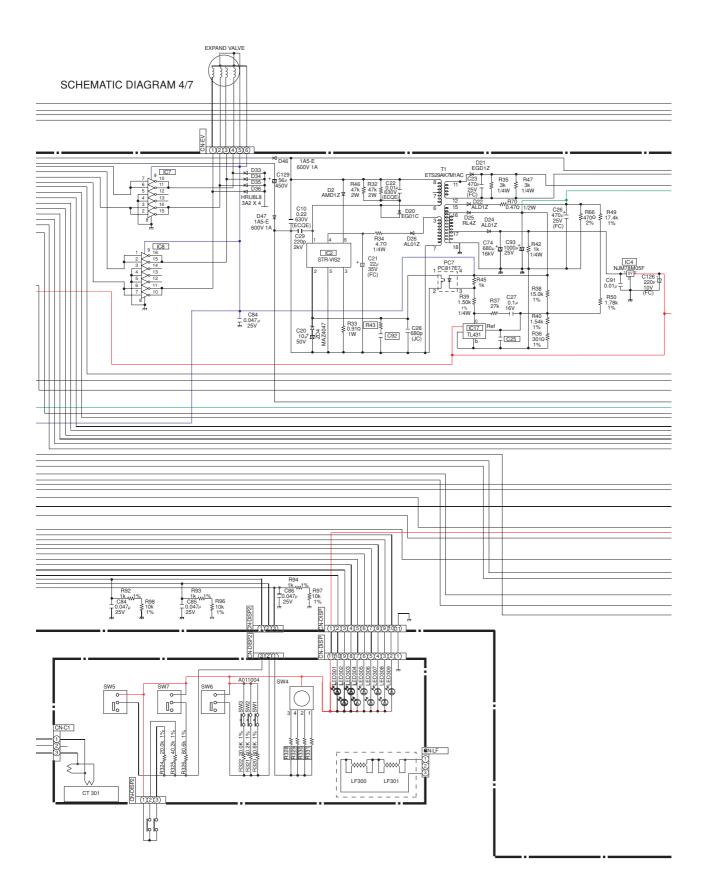

SCHEMATIC DIAGRAM 5/7

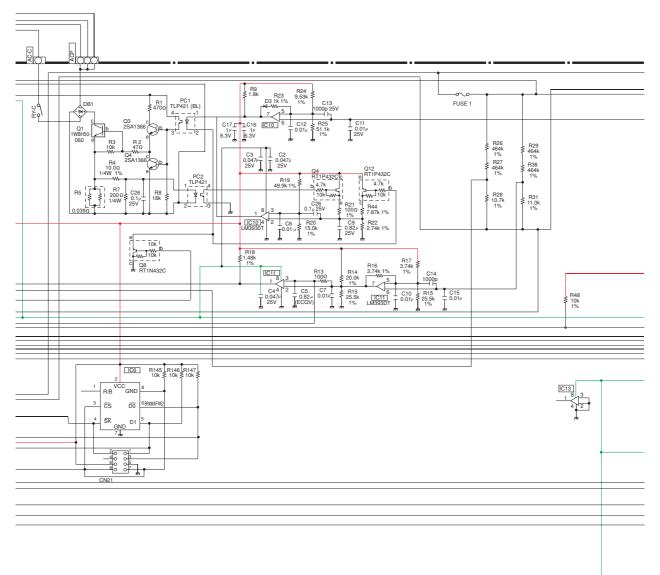

SCHEMATIC DIAGRAM 6/7

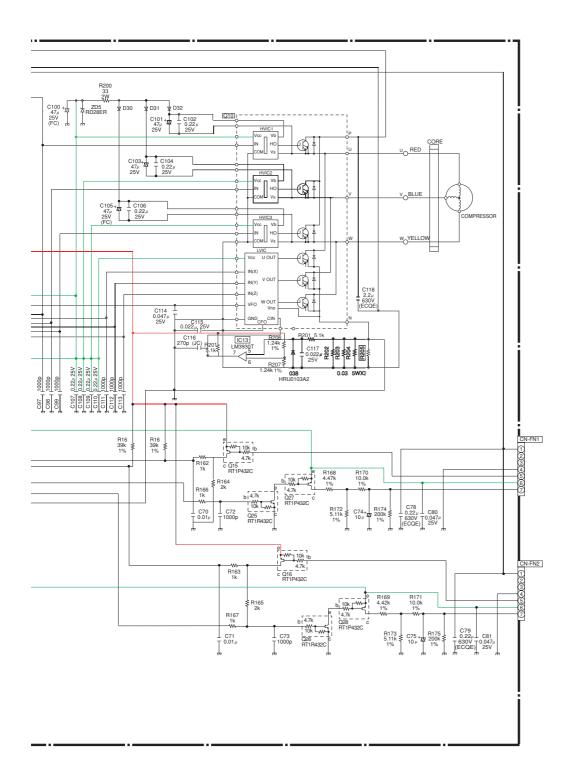

SCHEMATIC DIAGRAM 7/7

ELECTRONIC CONTROL UNIT

CODE No.	A743401	A743564								NOTE
A	70.10101	717 100001		1						HOIL
R205	NONE	0.03Ω 5W	 							
R206	17.4k 1%	16.9k 1%								
R258	2.61k 1%	4.02k 1%							IF	M-TYPE
R260										
				-	-	-				
R263	4.99k 1%	5.23k 1%								
R264	4.99k 1%	5.23k 1%								
FW-BLOCK1	NONE	←							DC	
FW-BLOCK2	NONE	←								
CN-FM3	VH3-2(GRN)	←								
C31	0.01µ	←								
SSR1	G3WC-202P	←								
ZNR2	NONE	←								
CN-FM4	NONE	VH3-2(YLW)							AC	FM-TYP
C32	NONE	0.01µ								
SSR2	NONE	G3MC-202P							1	
ZNR3	NONE	←								
									1	
									1	
BY-V1	NONE	←							· · ·	
CN-V1	NONE	~ ~		1	1					
CR1	NONE	→ ←							1	VALVE
RY-V2	NONE	→ ←		-						
CN-V2	NONE									VALVE
		<i>←</i>	 							VALVE
CR2	NONE	←								
									PRF	ES,-SENSO
CN-LPS1	NONE	←								-0, 021100
C55	1μ 6.3V	←								
AC-BLK	A67C5179	A67C5217								
AC-WHT	A67C5180	A67C5218							1	
U.V.W	A28062	←								
						1				
R58	1.65k 1%	NONE							1	
R67	698Ω 1%	499Ω 1%							1	CT-TYPE
R68	0Ω	20.0K 1%								
R69	NONE	20.0K 1%				-			0	APACITOR
PTC4	NONE	100Ω 280V				-				Annon
RY-PWR2	NONE	10052 200V ←		-	-	-				
CN-RY2	NONE	→ ←								
									40	
CR4	NONE	←							AC	
D1	NONE	←								
Q7	NONE	←								
R273	NONE	←								RYLAY
R274	NONE	←								
CN-RY1	NV2	←								
D27	1A5-E	←							DC	
Q5	RTIN432C	<i>←</i>								
Q11	2SA1036K(R)	←								
R183	4.7k	←								
R272	2.2k	←								
R43, R113, JP1	NONE	÷ -							1	
C25, C92	NONE	←		1	1				1	
CN-CPU, CN-21	NONE	← ←		1	1			-	ł	
53~R256, R278	NONE	→ +	 		+	-	-		NC	D MOUNT
R279	(JUMPER)				+	-	-		1	
		←							-	
R118~R120	NONE	→ 40705507								
COM 1	A67C5494	A67C5507		-					•	
COM 2	A67C5495	A67C5508		I	L	L				OTHER
COM 3	A67C5496	A67C5509								
				1	1	1	1		1	
REMARK	CU-L24DBE5 CU-L28DBE5	CU-L34DBE5 CU-L430DB5								

ELECTRONIC CONTROL UNIT COMPLETE TABLE 3

	CODE No.	A743403	A743566			
1	CT300	NONE	CT25UU-P			
	CT301	NONE	←			
	AC-IN	NONE	←	CT-TYPE		
	AC-OUT	NONE	←			
	CN-CT	NONE	XH3(VLW)	1		
	🛆 SW4	NONE	←	NO MOUNT		
	R328~R331	NONE	←			
	REMARK	CU-L24DBE5	CU-L34DBE5			
	NEWIARK	CU-L28DBE5	CU-L430DB5			


ELECTRONIC CONTROL UNIT COMPLETE TABLE 4

CODE No.	A743568	A743478	
C209	Δ 800μ 400V	800µ 400V	POWER
REMARK	CU-L34DBE5	CU-L43DBE5	

ELECTRONIC CONTROL UNIT COMPLETE


TABLE 2	
---------	--

CODE No.	A73C1598	A73C1600				NOTE
Q10	APS21865-A	PS21867-A				IPM-TYPE
HEATSINK	A581074	A581086				IPM-ITPE
DB	S25VB60	S50VB60				POWER
ELECTRONIC						
CONTROL UNIT	A743401	A743564				
(MAIN)						
REMARK	CU-L24DBE5	CU-L34DBE5				\sim
REMARK	CU-L28DBE5	CU-L430DB5				

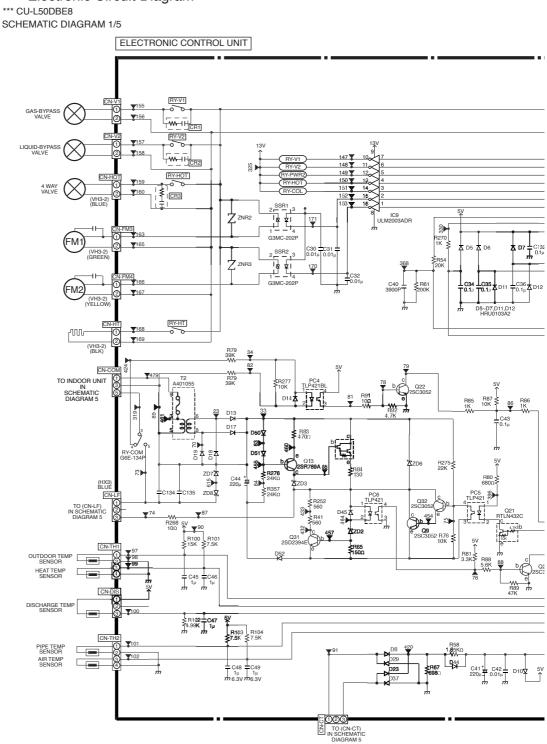


** Electronic Circuit Diagram


SCHEMATIC DIAGRAM 2/5

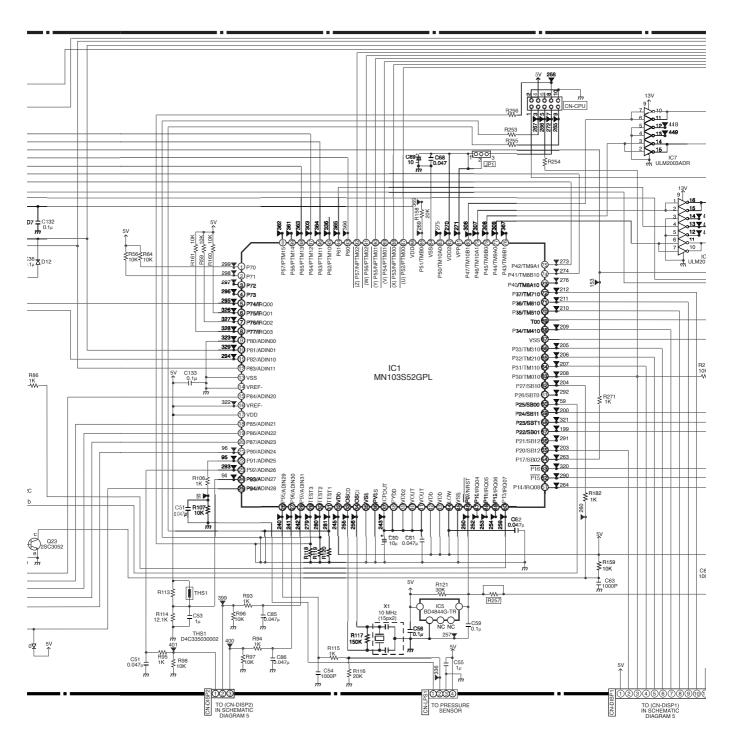


SCHEMATIC DIAGRAM 3/5

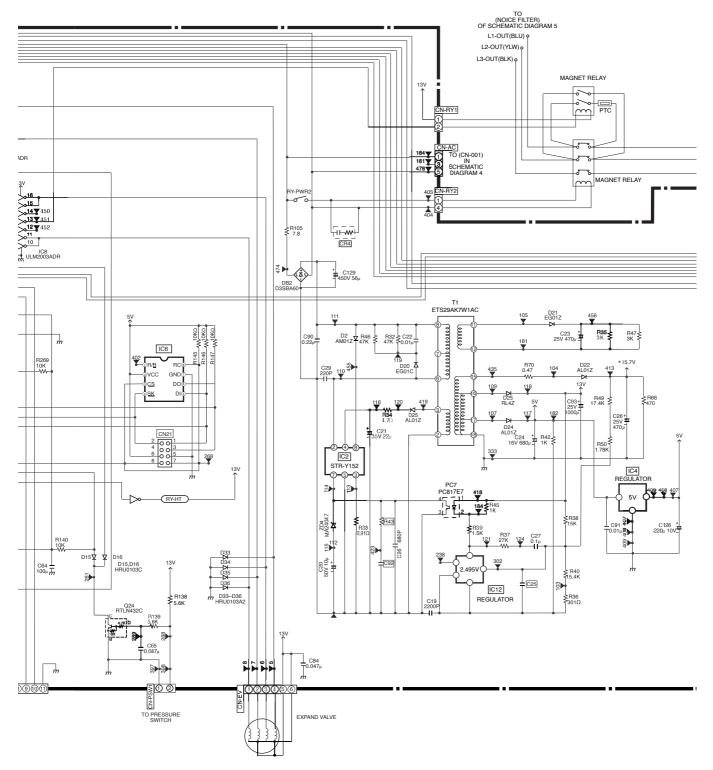


SCHEMATIC DIAGRAM 4/5

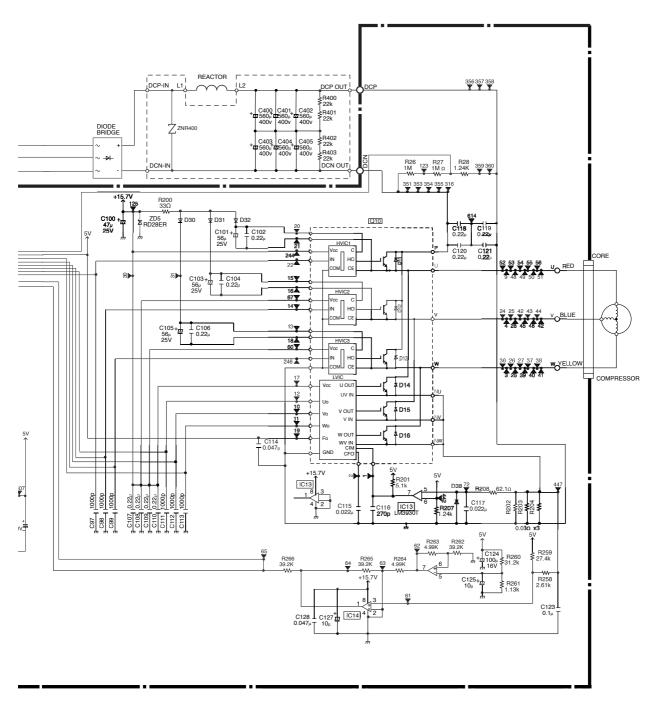

SCHEMATIC DIAGRAM 5/5

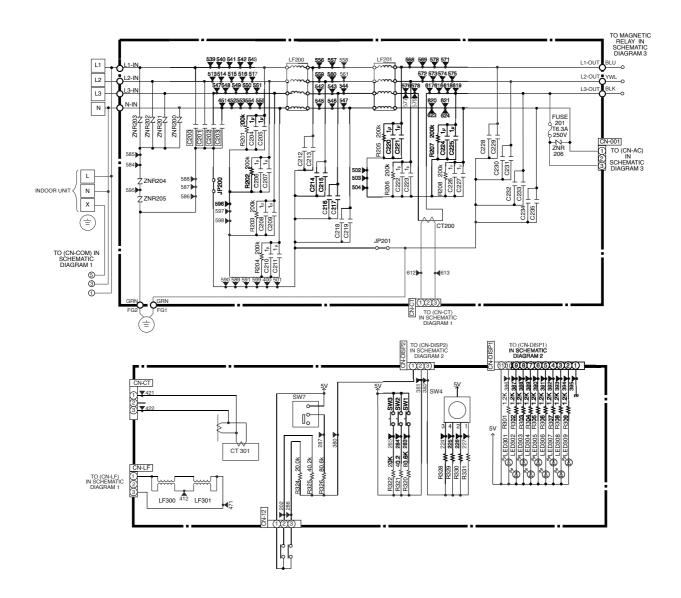

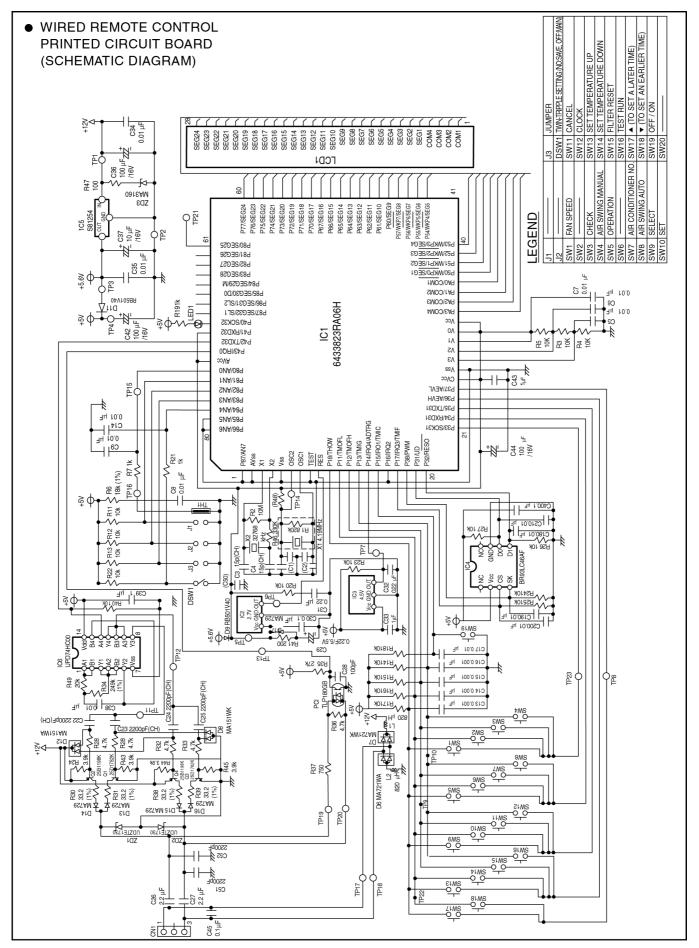


15.4. Print pattern

15.4.1. Indoor unit

• INDOOR UNIT


PRINTED CIRCUIT BOARD (MAIN)

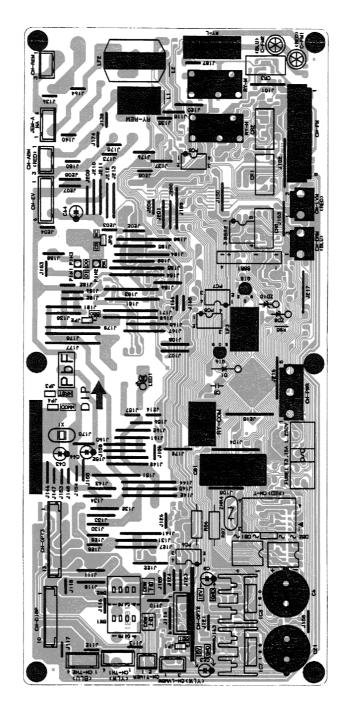

15.4.2. Outdoor unit


• OUTDOOR UNIT

PRINTED CIRCUIT BOARD (MAIN)

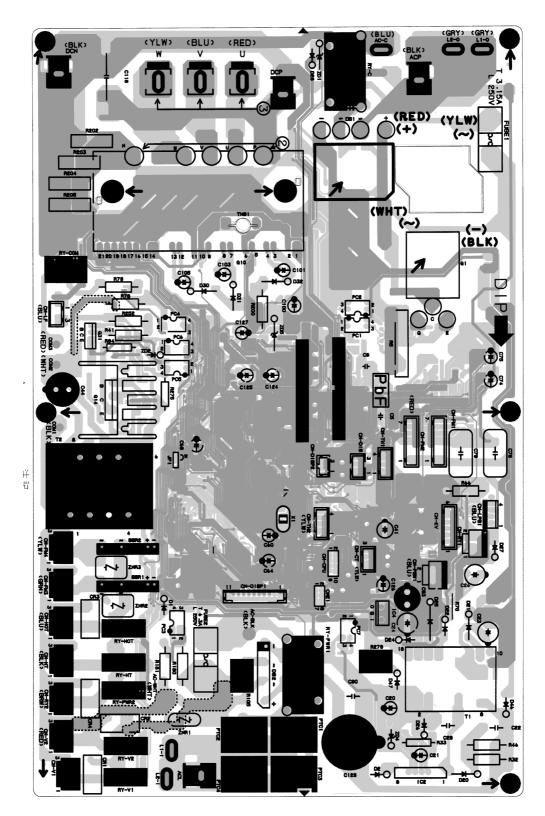

• OUTDOOR UNIT

PRINTED CIRCUIT BOARD (POWER)

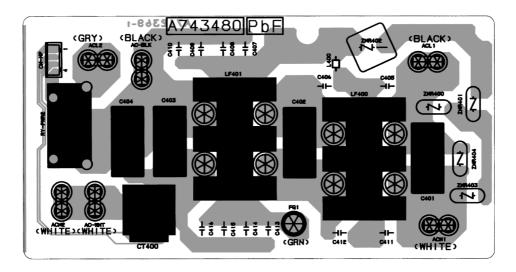

OUTDOOR UNIT

PRINTED CIRCUIT BOARD (SERVICE)

